| | | | | | | | | 3 | 3791 | 5A-0 | 1B | |
|--|---|---|-----------|-------|-----|-------|---------|-----|---------|----------|----|--|
| S | Е | R | V | Ι | С | Е | Ν | J | 0 | Т | Е | |
| | | | | | | | SUPERSE | DES | S: 3791 | 5-01A | | |
| 37915A 2.048 Mbit/s Signaling Interface | | | | | | | | | | | | |
| Serial Numbers: 0000A00000 / 9999Z99999 | | | | | | | | | | | | |
| Operational Defects at Level 2 of SS7 Protocol | | | | | | | | | | | | |
| To Be Performed By: Customer if desired. | | | | | | | | | | | | |
| Parts Required: | | | | | | | | | | | | |
| P/N | |] | Descripti | ion | Qua | ntity | | | | | | |
| 379 | 15-80038 | | Signaling | g ROM | 2 | 2 | | | | | | |
| Situ | ation: | | | | | | | | | | | |
| | IMPORTANT: | | | | | | | | | | | |
| | This Service Note applies ONLY to 37915A installed in the card cage of the OpenCall product. It does NOT apply to 37915A installed in 37900D. | | | | | | | | | | | |
| | 37915A is a single card product with replacement part number 37915-60504 and exchange part number 37915-69504. | | | | | | | | | | | |
| | | | | | | | | | | Continue | d | |
| | DATE: January 1999 | | | | | | | | | | | |

ADMINISTRATIVE INFORMATION

| SERVICE NOTE CLASSIFICATION: MODIFICATION AVAILABLE | | | | | | | | |
|--|----------------------|---|--|--|--|--|--|--|
| ACTION CATEGORY: | AGREEABLE TIME | ■ PERFORMANCE ENHANCEMENT □ SERVICE/RELIABILITY ENHANCEMENT | | | | | | |
| LOCATION CATEGORY: | CUSTOMER INSTALLABLE | AVAILABLE UNTIL: End of Product Support Life | | | | | | |
| AUTHOR: MK | ENTITY: E600 | ADDITIONAL INFORMATION: | | | | | | |

© 1999 AGILENT TECHNOLOGIES PRINTED IN U.S.A.



37915A interface cards, with signaling ROM 37915-80030 or earlier, has operational defects, and does not meet the Japanese standards, at level 2 of the protocol for Signaling System No 7.

Installation of ROM 37915-80038 (2 per 37915A) fixes the problem.

Solution / Action:

Replace the ROMs on the Interface Card (estimated time: 15 mins):

CAUTION:

Take precautions against electro-static damage to the inteface card.

- 1. The 37915A cards are installed in the Signaling Interface Unit (SIU) of the OpenCall product. Disconnect the SIU from the power outlet.
- 2. Undo 2 screws within the handle of the interface card and withdraw the card from the SIU.
- 3. The 2 ROMs are located in sockets midway down each side of the interface card. Remove the existing ROMs and replace them with two 37915-80038.
- 4. Replace the interface card in the SIU and secure in position with 2 screws.
- 5. Repeat steps 2 to 4 for other interface cards.
- 6. Recycle power on the SIU. If no error is reported, the ROM installation was successul.