83752A-01

S	Е	R	V		С	Е	1	N	0	Т	Е
							SUPERS	BEDE	S: None		
837	52A S	ynthesi	zed Sv	veepe	r						
Seria	al Numb	bers: 344	7A00552	2 / 3447	A00602						
Insp	pection	and re	placen	nent o	of air da	ım.					
To B	Be Perfo	rmed By	: Agilent	-Qualif	ied Perso	onnel					
8375 8375	licate Se 51A-01 52A-01 52B-01	ervice No	otes:								
Part 4320	No.)-0438			escripti ubber D							
									C	Continued	
							DATE: Ja	nuar	y 1996		

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:							
	MODIFICATION	RECOMMENDED					
ACTION CATEGORY:	 IMMEDIATELY ON SPECIFIED FAILURE AGREEABLE TIME 	STANDARDS: Labor 1.0 Hour					
LOCATION CATEGORY:	CUSTOMER INSTALLABLE	SERVICE RETURN USED RETURN INVENTORY: SCRAP PARTS: SCRAP SEE TEXT SEE TEXT SEE TEXT					
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	AGILENT RESPONSIBLE UNTIL: January 1998					
AUTHOR: DMc	ENTITY: 5320	ADDITIONAL INFORMATION:					

© 1996 AGILENT TECHNOLOGIES
PRINTED IN U.S.A.



Situation:

The rubber dam attached to the fan used to direct air flow may fall off. The supplier of the rubber dam applied the wrong adhesive to the dam. If the dam falls off the instrument will heat up and the over temperature circuit will shut the instrument off. This failure will NOT cause any damage to the instrument but will not allow the instrument to run for long periods of time at a high temperature.

Solution/Action:

Disconnect the line power cord before performing the inspection. Inspect the rubber dam attached to the left side of the fan by lightly pulling on the dam. If the dam does not come off, it is okay. If the dam is missing, locate and remove it. If the dam comes off during inspection, replace it. The dam can be replaced with the fan installed. First wipe the fan housing with a solvent to clean the area. Next remove the adhesive protection strip on the dam. Push the dam tight to the rear panel, and apply pressure to the dam to attach it to the fan. If you have any difficulty, determine the placement of the dam on the fan housing, then remove the fan as outlined in the service manual and attach the dam.