S E R V I C E N O T E

SUPERSEDES: NONE

8530A Opt.005(encoder interface capability)
AND Opt. H02 (pulsed capability) Antenna Receiver
with 85370A Antenna Positioner Encoder

Serial Numbers: 0000A00000 / 9999Z99999

"Overspeed" error when 85370A is used, or no display on 85370A

To Be Performed By: Agilent-Qualified Personnel

Parts Required:

24 AWG wire, 12" (wire needs to be soldered to the board) soldering tools

Situation:

- 1. When 8530A Opt.005 is used with 85370A encoder in dual syncro mode and angle domain, the error message "Overspeed: backup" may occur at certain angles. Slowing the speed or decrease the average will not eliminate the problem. When the error occures, 8530 will stop measurement.
- 2. When the 8530A system has both Opt.005 and Opt. H02 (pulse) (the combination is available as 8530A H58), and 85370A encoder is connected, the 85370A will be powered up (LEDs are lit), but there is no angle display on the 85370A front panel. With the Angle display ON on the 8530 CRT, and positioner turning, the angle displayed on 8530 does NOT change.

Continued

DATE: August 1998

ADMINISTRATIVE INFORMATION

| SERVICE NOTE CLASSIFICATION: MODIFICATION RECOMMENDED | | |
|--|---|--|
| ACTION CATEGORY: | ☐ IMMEDIATELY ☐ ON SPECIFIED FAILURE ☐ AGREEABLE TIME | STANDARDS: LABOR 1.0 Hours |
| LOCATION CATEGORY: | ☐ CUSTOMER INSTALLABLE☐ ON-SITE☐ SERVICE CENTER | SERVICE |
| AVAILABILITY: | PRODUCT'S SUPPORT LIFE | AGILENT RESPONSIBLE UNTIL: End of support life |
| AUTHOR: JK | ENTITY: SRSD | ADDITIONAL INFORMATION: None |

© 1998 AGILENT TECHNOLOGIES PRINTED IN U.S.A.



Page 2 Service Note 8530A-01

Solution/Action:

8530a Opt. 005:

• Reorder 08530-60008 board. The modifications are already made at factory production line.

8530A Opt. 005 AND **Opt. H02** (the combination is available as **8530A H58**): (2-steps)

- Reorder 08530-60015 board, which is attached to the 8530A front panel. The modifications are already made at factory production line.
- Modify the mother board (85102-60229) of 85102R.

Procedure:

Power off the 85102R, disconnect it from the system and remove from the system rack. Place 85102R on a ESD safe surface, with bottom up.

Open the bottom cover and following attaching graph to solder the required wires.