DSOX2004A-03 <u>S E R V I C E N O T E</u>

Supersedes: NONE

DSOX2004A – Oscilloscope, Mixed Signal, 4 Channel, 70MHz

Serial Numbers: ALL

 
With the oscilloscope's power on and while under normal operation the unit emits a hissing noise.

Parts Required: P/N	Description	Qty.
9140-6151	Idctr-Fxd 68uH, +/-20Pct, 10.5W-MMX, 10.2LG-mm	2

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:				
MODIFICATION RECOMMENDED				
ACTION CATEGORY:	X ON SPECIFIED FAILURE [[]] AGREEABLE TIME	STANDARDS LABOR: 1.0 Hours		
LOCATION CATEGORY:	[[]] CUSTOMER INSTALLABLE [[]] ON-SITE x SERVICE CENTER [[]] CHANNEL PARTNER	SERVICE [[]] RETURN INVENTORY: [[]] SCRAP [[]] SEE TEXT	USED [[]] RETURN PARTS: x SCRAP [[]] SEE TEXT	
AVAILABILITY: PRODUCT'S SUPPORT LIFE		NO CHARGE AVAILABLE UNTIL: 30-April-2015		
[[]] Calibration Required X Calibration NOT Required		PRODUCT LINE: 1A AUTHOR: EG		
ADDITIONAL INFORMATION:				

© AGILENT TECHNOLOGIES, INC. 2012 PRINTED IN U.S.A.






Situation:

With the oscilloscope power turned on and while under normal operation, the unit emits a hissing noise.

Solution/Action:

 Follow the procedure to remove the acquisition board for the X2000 as in the Agilent 2000/3000 X-Series Oscilloscopes Service Guide (<u>http://cp.literature.agilent.com/litweb/pdf/75019-</u> <u>97039.pdf</u>), pp. 117-121, until you make a visual to the following components:

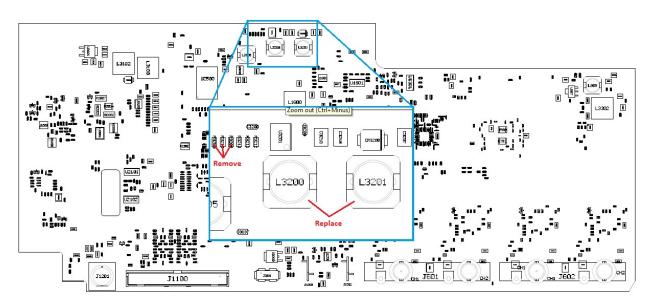

- 2. As the picture indicates, remove the three resistors (0699-7209, 1 Ohm) located at R3208, R3209, and R3210. They are not to be replaced.
- 3. Remove as well the two inductors (9140-6474, 100uH) located at L3200 and L3201 and replace them with inductors with part number 9140-6151 (68 uH).
- 4. Re-assemble to the point where the unit could be powered up to verify that the hissing is indeed gone. If the hissing is not gone, please, check modifications.
- 5. When the hissing is gone, put oscilloscope back together.