								E44	18B	-06
S	Е	R	V	Ι	С	Е	Ν	0	Т	Е
						SI	UPERSEDE	S: NON	E	
E44	18B EP	PM Pow	ver Met	er						
Seria	al Numb	ers:See l	Below							
Def	ective F	Fuse H	older C	lips Ir	n Agiler	nt E4418B	Line Modu	ule		
Dup	licate Se	rvice No	tes:							
	18B-06 19B-06					/ GB402051 / GB402019				
To F	Be Perfor	med By	: Agilent	Qualifi	ed Person	nnel				
Part	s Requir	ed: None	e							
Situ	ation:									
mod		efective	fuse hold		•		scovered that may exhibit i			
view	ed from t	the rear)	has been	formed	incorrec	tly thus prov	e right hand u viding an inter nese fuse clips	mittent co	ontact.	d.
									Continue	ed
						D	ATE: July 20	000		

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLA	_	RECOMMENDED
ACTION CATEGORY:	 IMMEDIATELY ON SPECIFIED FAILURE AGREEABLE TIME 	STANDARDS: LABOR 0.5 Hours
LOCATION CATEGORY:	CUSTOMER INSTALLABLE ON-SITE SERVICE CENTER	SERVICE CRETURN USED RETURN INVENTORY: SCRAP SEE TEXT SEE TEXT
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	AGILENT RESPONSIBLE UNTIL: July 2002
AUTHOR: FC	ENTITY: E600	ADDITIONAL INFORMATION:

© 2000 AGILENT TECHNOLOGIES
PRINTED IN U.S.A.



Solution / Action:

1) Remove the Fuse Box using a flat-blade screwdriver (See Figure 1).

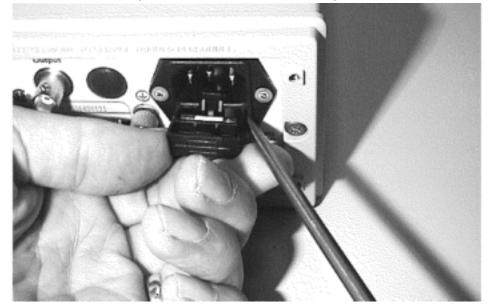


Figure 1. Removing Fuse Box.

- 2) Inspect the Fuse clips.
- 3) If the Fuse Clips look like the ones in Figure 2 then proceed to step 9.



Figure 2. Good Fuse Clips.

4) If the Fuse Clips look like the ones in Figure 3 then check for signs of arcing on the clip.

Continued



Figure 3. Fuse Clips That May be Damaged or Require Bending.

- 5) If there is any evidence of arcing then proceed to step 8.
- 6) If there is no evidence of arcing then bend the fuse clip into the correct position (i.e. level with the left hand clip)using a flat-blade screwdriver as shown in Figure 4. Proceed to step 7.

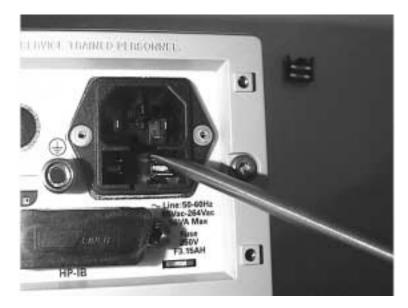


Figure 4. Bending Fuse Clips into Normal Position.7) Ensure the fuse holder clip has not been bent too far (as shown in Figure 5).

Continued

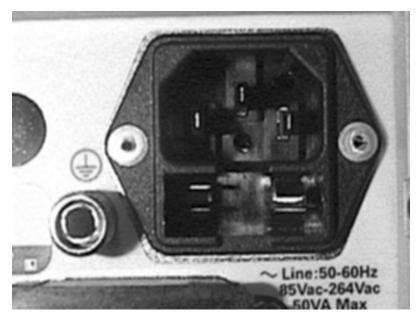


Figure 5. Fuse Clip Holder Excessively Bent.

If it is bent too far, then bend it to the correct position as per step 6. Proceed to step 9.

- 8) Reinsert the fuse holder. Supply EPSG-Q Product Support with the unit Model Number, Serial Number, any Fitted Options, and then return the unit to EPSG-Q for replacement.
- 9) Reinsert the Fuse holder as per Figure 6. and return the unit (or replaced unit if applicable) to the customer.

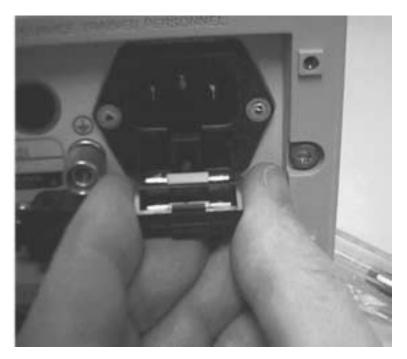


Figure 6. Replacing Fuse Holder