# S E R V I C E N O T E

SUPERSEDES: None

# **J2302B Internet Advisor**

**Serial Numbers:** J2302B-05-S: US35340000-US35359999 EC: Label #09



#### POSSIBLE SHOCK HAZARD

Bottom chassis fastener (screw) may interfere with primary circuit component.

# Parts Required:

5182-6159 Label 0515-1348 Nylon screw

#### **Situation:**

Metal bottom chassis fastener to power supply may defeat the insulation on a primary circuit capacitor if long screw is used and cause the primary voltage to be present on the chassis.

Continued

DATE: August 1996

## **ADMINISTRATIVE INFORMATION**

SERVICE NOTE CLASSIFICATION:		
PRIORITY SAFETY		
ACTION CATEGORY:	IMMEDIATELY	STANDARDS: LABOR 0.5 Hours
LOCATION CATEGORY:	☐ ON-SITE ■ SERVICE CENTER	SERVICE ☐ RETURN USED ☐ RETURN PARTS: ☐ SCRAP SEE TEXT ☐ SEE TEXT
AVAILABILITY:	ALWAYS	AGILENT RESPONSIBLE UNTIL: ALWAYS
AUTHOR: NB	ENTITY: 3801	ADDITIONAL INFORMATION:


© 1996 AGILENT TECHNOLOGIES PRINTED IN U.S.A.



## **Solution:**

1. Note the Location of the metal fastener along the rear bottom chassis, the diagram is shown with the instrument sitting on its back, handle up:

Note: Handle is at top (power cord access is on the left).

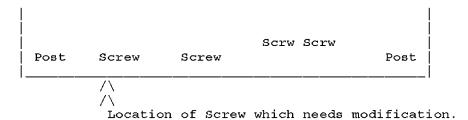

- 2. Remove the metal screw completely. Use tool T10 Torx Driver.
- 3. Install nylon screw (0515-1348) at the same location.

#### **NOTE:**

If nylon screw does not seat fully, the Analyzer power supply must be inspected for Capacitor damage. If component insulation or if the Capacitor location is touching the PEM, the power supply must be replaced.

#### **NOTE:**

It is highly recommended that the nylon screw be installed with a locking compound such as Locktite<sup>TM</sup>, and the head of the nylon be cut off flush with the bottom chassis.

- 4. Affix the label next to the plastic fastener.
- 5. The modification is to prevent further usage of the fastener location.