N4906B-04 <u>S E R V I C E N O T E</u>

Supersedes: None

The N4906B does not respond to network "pings".

Serial Numbers: MY45201000 – MY45201004

Due to a Microsoft Windows configuration problem the N4906B does not respond to network "pings".

Apply the correct configuration steps described below to allow "pings" to be answered by the N4906B.

Parts Required: P/N Description


Qty.

None

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:								
MODIFICATION RECOMMENDED								
ACTION CATEGORY:	[[]] ON SPECIFIED FAILURE XX AGREEABLE TIME	STANDARDS LABOR: 0.25 Hours						
LOCATION CATEGORY:	[[]] CUSTOMER INSTALLABLE XX ON-SITE XX SERVICE CENTER [[]] CHANNEL PARTNER	SERVICE [[]] RETURN INVENTORY: [[]] SCRAP [[]] SEE TEXT	USED [[]] RETURN PARTS: [[]] SCRAP [[]] SEE TEXT					
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	NO CHARGE AVAILABLE UNTIL: 31-Dec-2013						
AUTHOR: HK		PRODUCT LINE: PL24						
ADDITIONAL INFORMATION:								


© AGILENT TECHNOLOGIES, INC. 2012 PRINTED IN U.S.A.

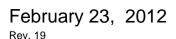



Situation:

A N4906B, which is connected to the network and has a valid IP address should respond to "pings". A "ping" is a computer network administration utility used to test the reachability of a computer system on a network. A "ping" operates by sending an ICMP (Internet Control Message Protocol) echo request packet to the target computer system and waiting for an ICMP response. If the target system does not answer, it records a packet loss.

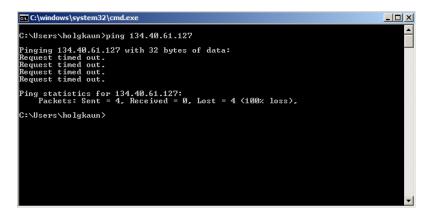

To debug connectivity problems it is often very helpful to have computer system and instruments respond to "pings".


It is possible to configure the Windows Firewall to not allow responses to "pings", i.e. disable incoming ICMP echo requests.

The Windows image on the N4906B systems of the specified serial number range (see above) has disabled "incoming echo requests" by accident.

Solution/Action:


Please perform the following steps in order to enable ICMP echo requests:

- 1. Start the N4906B and wait for the unit to have fully booted.
- 2. Go to the "Control Panel" \rightarrow "Network and Internet Connections" \rightarrow "Windows Firewall"

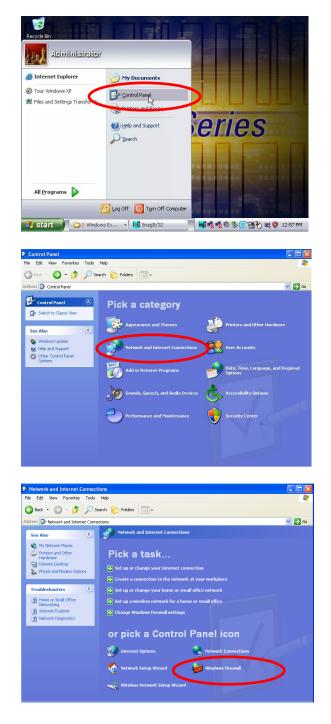


Page 4 of 5

3. On the "Windows Firewall" go to the "Advanced" tab and then on "ICMP Settings":

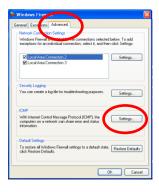

Then check the checkbox "Allow incoming echo request"

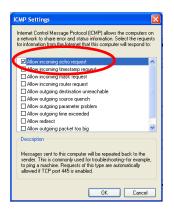


Click "OK" and "OK" again and then close the "Control Panel".

- 4. Now quickly test the solution by trying out a "ping" from a remote computer system to your N4906B.
 - a. Connect the N4906B to the network by connecting 2 LAN cables to the 2 network ports on the back of the instrument. You can also execute the following steps sequentially: one network port after the other.
 - b. Start the Windows explorer on the N4906B, navigate to the directory C:\Windows\sytem32 and find the file "cmd.exe" and double-click on it.

File Edit View Favorites	Tools	Help							1
3 Back • 🕤 · 🤌 ,	€ Se	arch 🜔 F	olders 🛄						
Address 🛅 C:\WINDOWS\system								×	5 60
Folders	×	-		-	-	-	3	-	
iii 😂 system32 Com_dmi 025	0	cdignit.dl	offview.dl	cdm.dll	cdmodern.dl	cdosys.dll	cdplayer.e	certci.dl	
1028			Sec.				410	-	
2 1031							100		
1033		certmgr.dl	certmgr.msc	cewmdm.dll	cfgblend.dl	cfgngr32.dl	charmap.exe	chip.com	
01041		_	_	•	500	a]	_		
042					-			<u> </u>	
2052		chkdsk.exe	chkntfs.exe	ciadmin.dll	ciady.msc	cic.dl	cidaemon.exe	ciodm.dl	
3076	ш.	-	-	-		1	-		
🗟 🧰 CatRoot					-	1	-	3	
III 🤤 CatRoot2		cipher.exe	cieve.eue	dictry.exe	db.db	docates, dl	cbcatq.dl	dearing.exe	
Com	8								
in the		-9			-	1	(f)		
iii 🙆 Directil		-6		7		шэ	12		
🚞 dicache		cliconf.chm	devela di	diconfig.exe	clconfg.rll	clipbrd.exe	dpsrv.exe	clusapi. dl	
🗷 🧰 drivers									
0 0045		1	C.N.L.			1000		- 22	
a export		cmcfg3	and eve	- 432 di	cmd32.exe	cmdlb.wsc		centron32.exe	
ias ias		Crime Web	Machine	adde to	Contraction to Vie	ounder more	entry of the	Access 10161616	
icsoni III 🦳 IME	-			100		65		-	
C INC 3	1	644	10			35			

c. A command window will start. Enter the command "ipconfig":

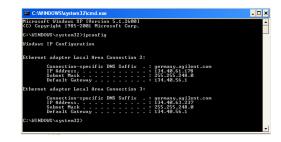

- d. Write down the 2 IP addresses. In the picture above they are: 134.40.61.178 and 134.40.63.237.
- e. Now go to a PC that is connected to the same network, start a command window (description above) and type "ping 134.40.61.178. You should get a response as shown below;

c:\windows\system32\cmd.exe	
C:\Users\holgkaun>ping 134.40.61.178	<u> </u>
Pinging 134.48.61.178 with 32 bytes of data: Reply from 134.48.61.178: bytes= 32 time(ine THL=128 Reply from 134.48.61.178: bytes= 32 time(ine THL=128 Reply from 134.48.61.178: bytes= 32 time(ine THL=128 Reply from 134.48.61.178: bytes= 32 time(ine THL=128	
Fing statistics for 134.40.61.178: Packets: Sent = 4. Received = 4. Lost = 0 (02: loss), Approximate round trij times in milli-seconds: Minimum = Mas. Maximum = Mas. Average = Mms	
C:\Users\holgkaun>_	
	_

Repeat the ping for the other IP address.