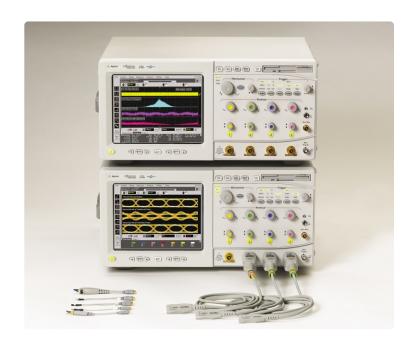


Understanding and Using Offset in InfiniiMax Active Probes

Application Note 1451

This application note explains how offset is applied in the Agilent InfiniiMax Active Probes and how to use offset for various applications. The purpose of offset in active probes or oscilloscope front ends is to allow the subtraction of most or all of the dc component of the input signal so the signal can better utilize the dynamic range of the input. A simplified diagram of how offset is applied for InfiniiMax probes is shown in Figure 1.



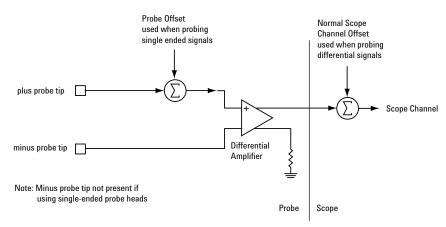


Figure 1. InfiniiMax Probe




The three cases for types of signals and probe head types are:

- 1. A single-ended probe head probing a single-ended signal
- 2. A differential probe head probing a single-ended signal
- 3. A differential probe head probing a differential signal

When using an InfiniiMax probe with an Infiniium oscilloscope you can select the case that applies for your measurement by selecting the "Probes" button under the channel setup menu. This allows you to select which type of probe head is being used and if it is a differential probe head, allows you to select whether you are probing a single-ended or differential signal. With these inputs the oscilloscope will use the proper type of offset for your measurement case. The specifics of each case are:

Case 1: A single-ended probe head probing a single-ended signal. For this case the offset control on the oscilloscope controls the probe offset and the channel offset is set to zero. This allows the offset voltage to be subtracted from the input signal before the signal gets to the differential amplifier. Since this subtraction is done before any active circuits the offset range is large (+/- 12 V for the 113 Xamplifiers and 25 k Ω probe heads). Note that the minus probe tip is not present when using a single-ended probe head which means nothing is plugged into the "-" input of the probe amp. This is normal and causes no problems.

Case 2: A differential probe head probing a single-ended signal. For this case the offset control on the oscilloscope controls the probe offset and the channel offset is set to zero. This allows the offset voltage to be subtracted from the input signal before the signal gets to the differential amplifier. Since this subtraction is done before any active circuits the offset range is large (+/- 12 V for the 113X amplifiers and 25 k Ω probe heads). A differential probe can make higher bandwidth and more accurate measurements on single-ended signals than a single-ended probe (See Related Literature) and this method of applying offset to only the plus side of a differential probe means that there is no sacrificing of offset range.

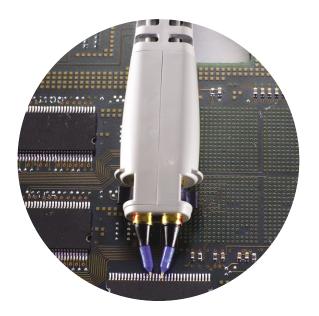

Case 3: A differential probe head probing a differential signal. For this case the offset control on the oscilloscope controls the oscilloscope channels offset. The probe offset is not used and set to zero. Since the plus and minus sides of differential signals have the same dc component, it will be subtracted out and the output of the probe will by definition be centered around ground. The channel offset allows the waveform seen on screen to be moved as desired. The allowable dc component in the plus and minus signals is determined by the common mode range of the probe which for the 113X probe amps and 25 k Ω probe heads is +/- 6.75 V.

Understanding how to properly use offset for your application can insure that you get the maximum performance and dynamic range from your InifiniiMax Probes. Additionally, the unique method of applying probe offset in InfiniiMax differential probes allows the full benefits of differential probing for single-ended signals without sacrificing offset range.

Related Literature

Publication Title	Publication Type	Publication Number
Performance Comparison of Differential and Single-Ended Active Voltage Probes	Application Note 1419-03	5988-8006EN

www.agilent.com

Agilent Technologies' Test and Measurement Support, Services, and Assistance

Agilent Technologies aims to maximize the value you receive, while minimizing your risk and problems. We strive to ensure that you get the test and measurement capabilities you paid for and obtain the support you need. Our extensive support resources and services can help you choose the right Agilent products for your applications and apply them successfully. Every instrument and system we sell has a global warranty. Support is available for at least five years beyond the production life of the product. Two concepts underlie Agilent's overall support policy: "Our Promise" and "Your Advantage."

Our Promise

Our Promise means your Agilent test and measurement equipment will meet its advertised performance and functionality. When you are choosing new equipment, we will help you with product information, including realistic performance specifications and practical recommendations from experienced test engineers. When you use Agilent equipment, we can verify that it works properly, help with product operation, and provide basic measurement assistance for the use of specified capabilities, at no extra cost upon request. Many self-help tools are available.

Your Advantage

Your Advantage means that Agilent offers a wide range of additional expert test and measurement services, which you can purchase according to your unique technical and business needs. Solve problems efficiently and gain a competitive edge by contracting with us for calibration, extra-cost upgrades, out-of-warranty repairs, and on-site education and training, as well as design, system integration, project management, and other professional engineering services. Experienced Agilent engineers and technicians worldwide can help you maximize your productivity, optimize the return on investment of your Agilent instruments and systems, and obtain dependable measurement accuracy for the life of those products.



www.agilent.com/find/emailupdates
Get the latest information on the products and applications you select.

Agilent T&M Software and Connectivity

Agilent's Test and Measurement software and connectivity products, solutions and developer network allows you to take time out of connecting your instruments to your computer with tools based on PC standards, so you can focus on your tasks, not on your connections. Visit www.agilent.com/find/connectivity for more information.

By internet, phone, or fax, get assistance with all your test & measurement needs

Online assistance: www.agilent.com/find/assist

Phone or Fax United States: (tel) 800 452 4844

Canada:

(tel) 877 894 4414 (fax) 905 282 6495

China:

(tel) 800 810 0189 (fax) 800 820 2816

Europe:

(tel) (31 20) 547 2323 (fax) (31 20) 547 2390

Japan:

(tel) (81) 426 56 7832 (fax) (81) 426 56 7840

Korea:

(tel) (82 2) 2004 5004 (fax) (82 2) 2004 5115

Latin America:

(tel) (305) 269 7500 (fax) (305) 269 7599

Taiwan:

(tel) 0800 047 866 (fax) 0800 286 331

Other Asia Pacific Countries:

(tel) (65) 6375 8100 (fax) (65) 6836 0252 Email: tm_asia@agilent.com

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2003 Printed in USA March 31, 2003

5988-9264EN

