

MODIFICATION RECOMMENDED

U1604B-01

**S E R V I C E N O T E**

Supersedes:  
NONE

U1604B Handheld Oscilloscope

Serial Numbers: **KR5000000 - KR50329999**

**BNC cable cannot secure oscilloscope input channel**

**Parts Required:**

P/N	Description	Qty.
U1604-66005	HANDHELD DIGITAL OSCILLOSCOPE, 40MHZ STANDARD OPTION	
Exchange Unit	1	
U1604-66006	HANDHELD DIGITAL OSCILLOSCOPE, 40MHZ USB OPTION Exchange	
Unit	1	

ADMINISTRATIVE INFORMATION

SERVICE NOTE CLASSIFICATION:			
<b>MODIFICATION RECOMMENDED</b>			
ACTION CATEGORY:	X ON SPECIFIED FAILURE <input type="checkbox"/> AGREEABLE TIME	STANDARDS	LABOR: 0.1 Hours
LOCATION CATEGORY:	<input type="checkbox"/> CUSTOMER INSTALLABLE <input type="checkbox"/> ON-SITE X SERVICE CENTER <input type="checkbox"/> CHANNEL PARTNER	SERVICE INVENTORY: X RETURN <input type="checkbox"/> SCRAP <input type="checkbox"/> SEE TEXT	USED PARTS: X RETURN <input type="checkbox"/> SCRAP <input type="checkbox"/> SEE TEXT
AVAILABILITY:	PRODUCT'S SUPPORT LIFE	NO CHARGE AVAILABLE UNTIL: 30 June 2013	
AUTHOR:	TY	PRODUCT LINE: WC	
ADDITIONAL INFORMATION: Only applicable for serial number range above.			

© AGILENT TECHNOLOGIES, INC. 2010  
PRINTED IN U.S.A.

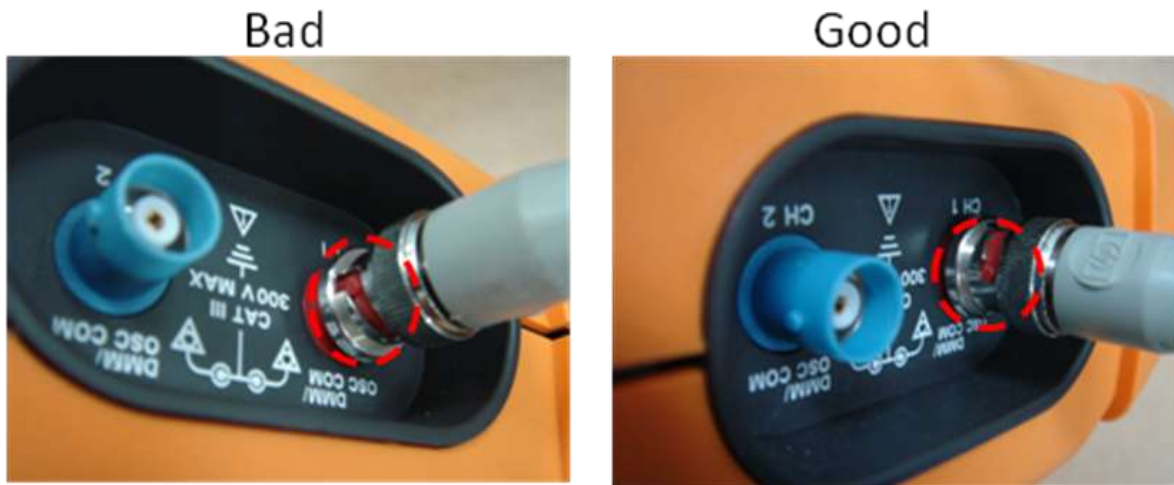
September 27, 2010

Rev. 17



**Situation:**

If customer report about BNC connection cannot lock at Handheld Oscilloscope BNC connect. Please refer to picture below:

**Solution/Action:**

1. Verify customer unit with Agilent BNC cable or Agilent BNC connector (1250-0256)
2. If verification failed, please provide unit exchange with customer.
3. If verification passed, please inform customer the BNC connector is meeting spec and no action required from SSU.