


Product Note 8510-7

 HEWLETT
PACKARD

Microwave Component Measurements
Amplitude & phase measurements
of frequency translation devices
using the HP 8510B network analyzer

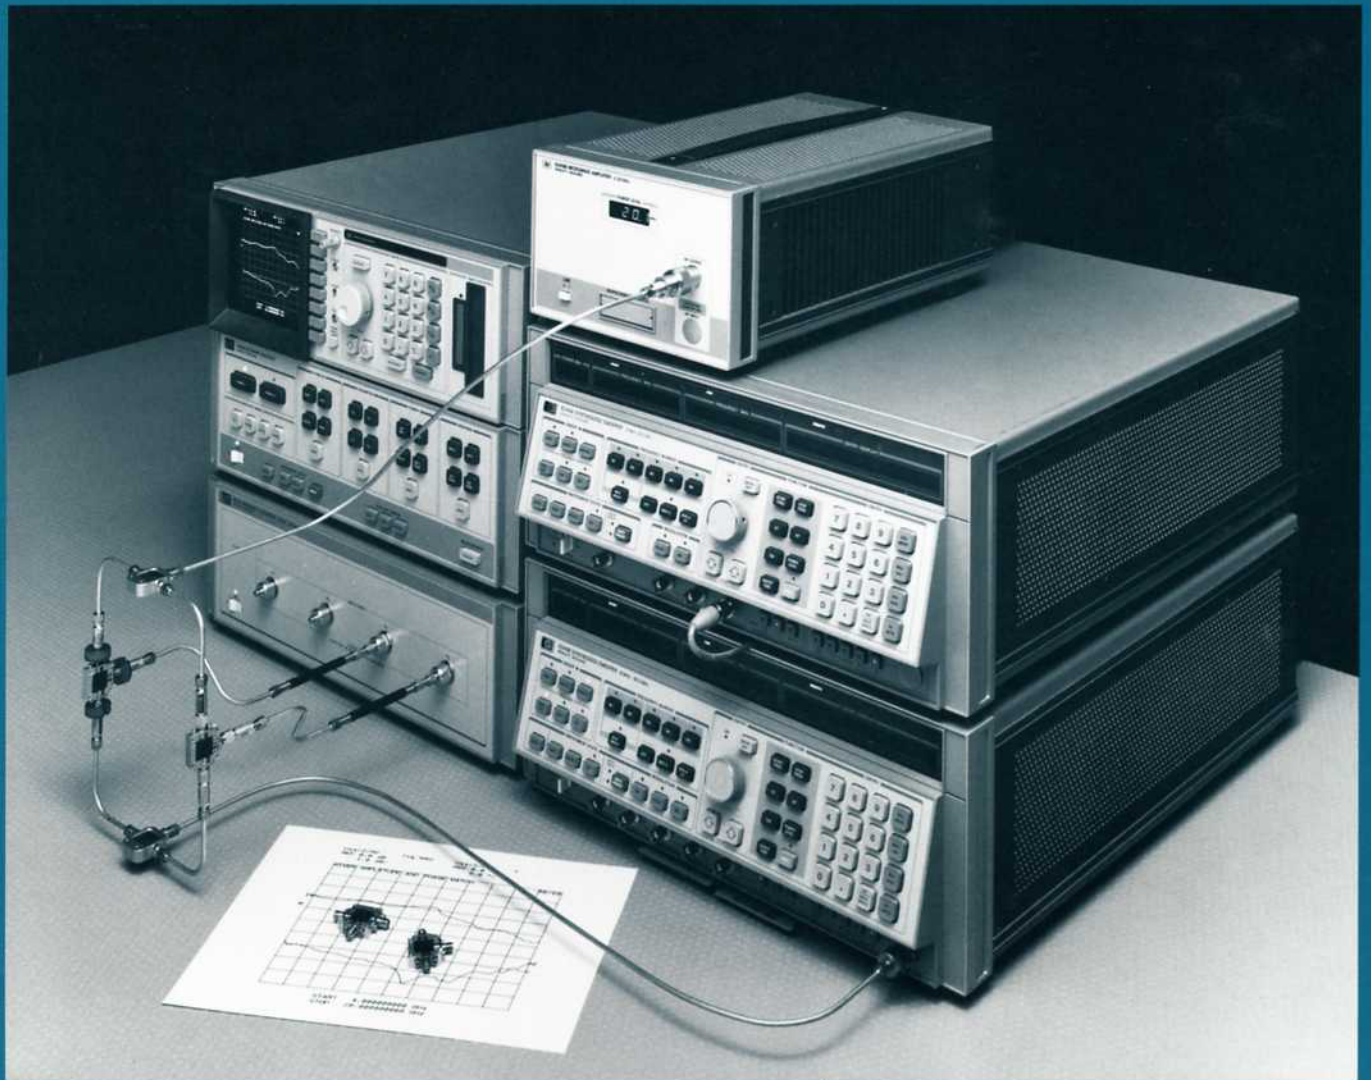

Introduction

The capability to measure the amplitude and phase match between frequency translation devices (FTDs), such as mixers, is increasing in importance as the number of multi-channel signal processing systems increases. These multi-channel systems, such as direction-finding radars, require that the signal transmission through each channel be amplitude and phase matched. To achieve the required match between channels, the manufacturer usually constructs each channel with matched sets of components.

The match between FTDs is defined as the absolute difference in amplitude and/or phase response over a specified frequency range. Also, the tracking between FTDs is an important specification. The tracking between FTDs is essentially how well the devices are matched over a specified interval after the removal of any fixed offset. For example, this interval may be a frequency interval or a temperature interval, or a combination of both.

Traditionally, the measurement of amplitude and phase match between FTDs has been hampered by the need for an external computer to control the frequencies of two sources and a measuring receiver. The HP 8510B network analyzer, with its multiple source feature, may be configured to directly and independently control two

sources as well as its own receiver. This configuration allows for fast and versatile measurements of FTDs without the need for an external controller. Specifically, the HP 8510B with the HP 8511A frequency converter is well suited to take amplitude and phase matching measurements of FTDs.

Figure 1 shows a typical test setup for measuring the amplitude and phase match between mixers. This setup is capable of measuring fixed or swept IF signals from 45 MHz to 26.5 GHz and supplying RF and LO signals from 10 MHz to 26.5 GHz. The range of the RF and/or LO signals may be extended into millimeter-wave frequency bands by the addition of the appropriate millimeter-wave source module(s) available from Hewlett-Packard Co.

This note describes the basic test setup, measurement procedure, and expected performance of the HP 8510B when applied to the measurement of amplitude and phase match between frequency translation devices. Also, this note describes how to measure input impedance and port to port isolation of FTDs using the HP 8510B.

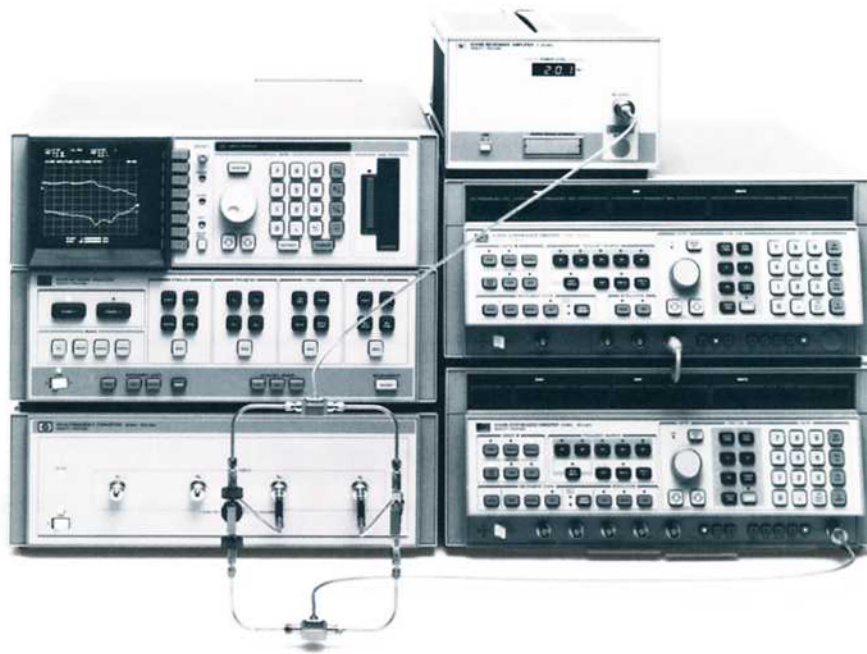


Figure 1. HP 8510B Mixer Test System.

System Description and Installation

Figure 2 shows a detailed block diagram of the HP 8510B-based system shown in Figure 1. The complete measurement system consists of an HP 8510B network analyzer, an HP 8511A frequency converter, any combination of two HP 8341B or HP 8340B synthesized sweepers, and an HP 8349B microwave amplifier. (The LO synthesizer may be replaced with an HP 8350B sweep oscillator when maximum frequency accuracy is not required.)

Also shown in Figure 2 is a detailed block diagram of a test fixture used to aid in the measurement of the amplitude and phase match between mixers. This mixer test fixture consists of two HP 11667B power splitters, six HP 8493C fixed attenuators (four 6dB and two 10dB), various semi-rigid coax cables, and two filters to eliminate spurious mixing products from entering the HP 8511A. In this case, two 1.5 GHz low-pass filters are used. (The exact function of this mixer test fixture will be discussed later.)

The instruments should be connected to the HP 8510B system bus, and interconnected with BNC and interface cables as shown in Figure 2. Once the HP 8510B system has been configured as described above, it may be turned on. At this point, the HP 8510B sweep mode should be set to **STEP** sweep via the **STIMULUS MENU** softkeys. (In general, step sweep is not required. However, for this configuration, step sweep is used). Also, it is important to make sure that the instrument HP-IB addresses are set correctly. The multiple source mode of operation may now be accessed to directly and independently control the two sources and the HP 8511A receiver.

Note that after the system has been turned on, and prior to the activation of multiple source mode, a "CAUTION: NO IF FOUND" or "CAUTION: PHASE LOCK FAILURE" message may appear on the HP 8510B display and a warning beeper may sound — do not be alarmed. Realize that not until multiple source mode is activated, and the HP 8511A receives a signal that it can phase-lock to, will the error message cease. In the meantime, the beeper may be turned off via the **BEEPER OFF** softkey which is located under the HP 8510B **SYSTEM** key.

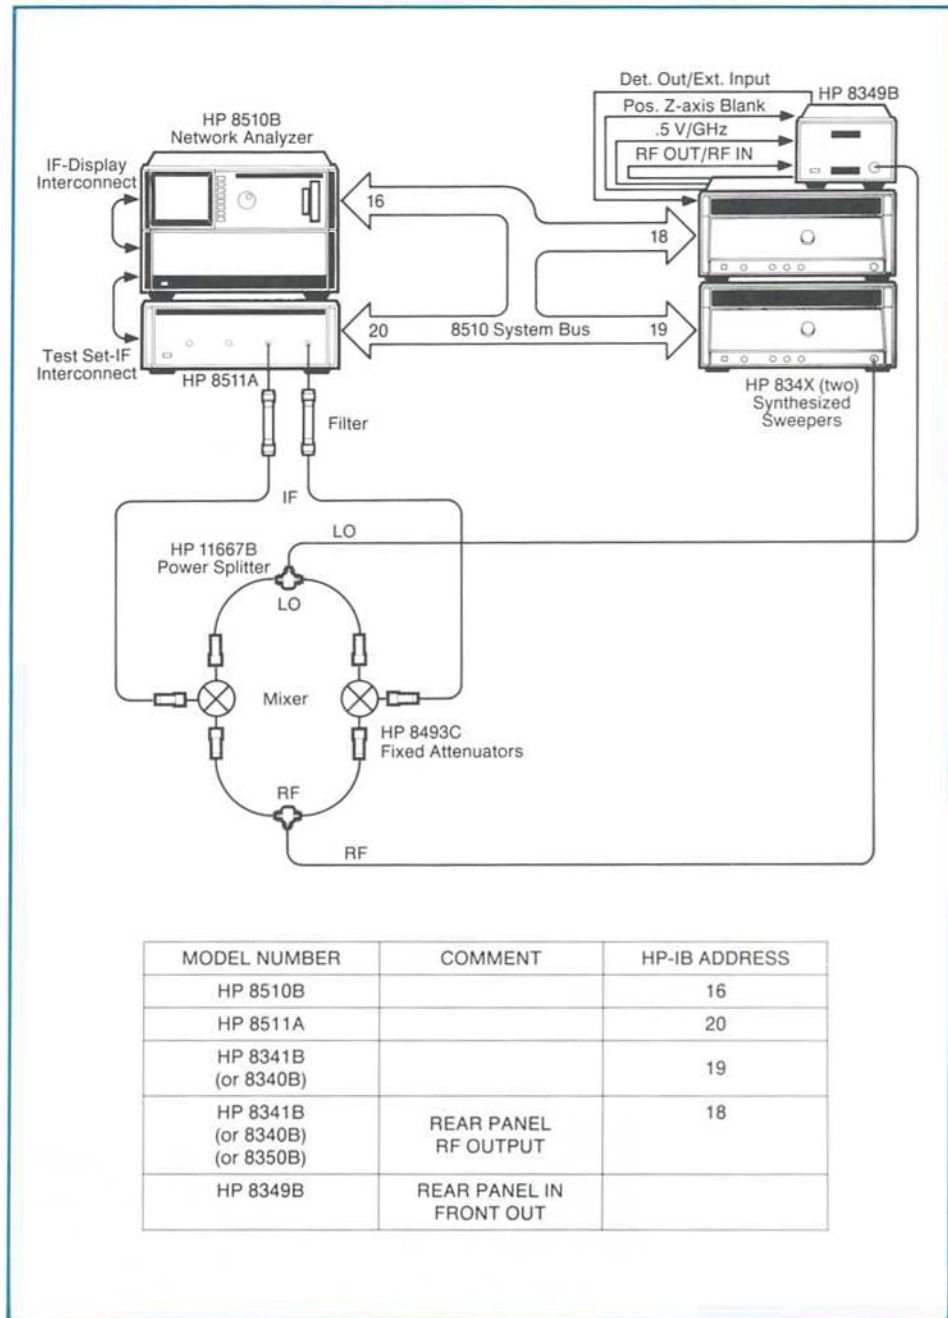


Figure 2. Multiple Source Mode Configuration with Mixer Test Fixture and a List of Recommended Instruments.

Multiple Source Operation

Accessing Multiple Source Mode

The multiple source mode of operation and the multiple source definition menu may be accessed through the **EDIT MULT. SRC.** softkey which is located under the **SYSTEM** key of the HP 8510B. Figure 3 shows the multiple source definition section and how to access it through various HP 8510B menus. Also shown in Figure 3 are the multiple source definitions used for the measurement shown in Figure 1.

Defining the Source/Receiver Frequencies

As shown in Figure 3, the operating frequencies of each of the two sources and the HP 8511A receiver may be defined as a function of the DUT frequency specification (FREQ). FREQ is entered in the conventional way by use of the **START/STOP-NUMBER OF POINTS** method, the **FREQUENCY LIST** method, or the **SINGLE POINT** method.

The **SOURCE 1** and **SOURCE 2** frequencies may be defined as a fraction, or a multiple, of **FREQ** and an offset frequency. The multiplier, whether a fraction or a multiple, must be a positive ratio of integers, such as 1/3, 1, 2, or 5/2. The frequency offset may be negative as long as the resultant frequencies, defined by the equation, are positive and fall within the limits of the source. The **SOURCE 1** and **SOURCE 2** frequencies may also be defined to be constant (or **CW**) frequencies.

The HP 8511A (or other test set) measurement frequencies may be defined in the same fashion as the source frequencies, with the added flexibility that the multiplier may be a positive, or a negative, ratio of integers. Again, the resultant measurement frequencies, as defined by the equation, must be positive and fall within the limits of the HP 8511A frequency converter.

For the case shown in Figure 3, **FREQ** is defined to be a 201 point, stepped-sweep from 2-20 GHz. **SOURCE 1** (the RF source) is defined to step from 2.0-20.0 GHz. **SOURCE 2** (the LO source) is defined to step from 1.8-19.8 GHz, or 200 MHz below the RF source. The HP 8511A **RECEIVER** (the IF receiver) is defined to measure the fixed IF of 200 MHz at each of the 201 measurement points.

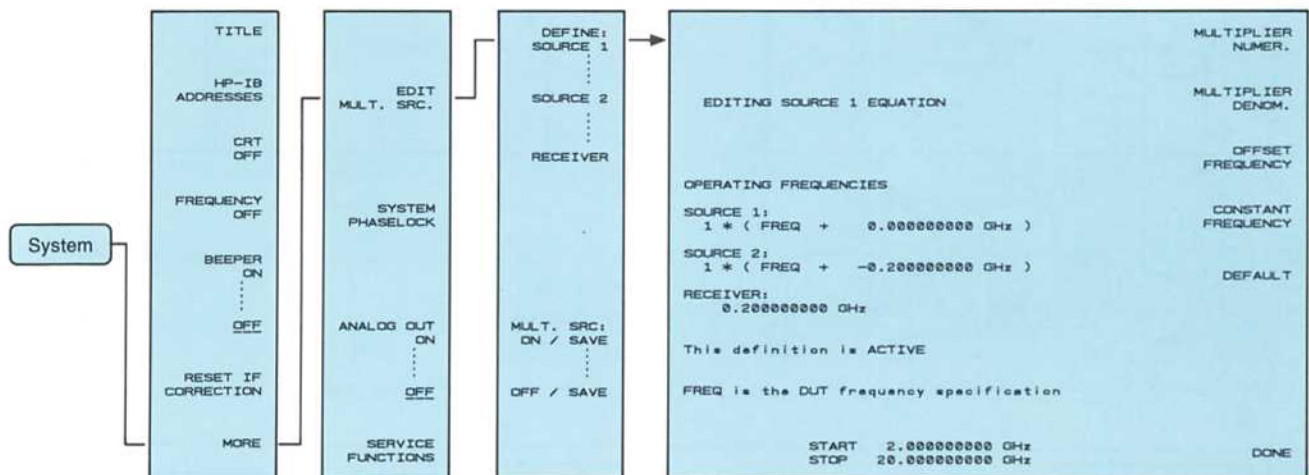


Figure 3. Multiple Source Access Path and Source/Receiver Definition Menu.

As another example, Figure 4 shows the multiple source definitions used for two different swept IF mixer measurements. Both measurements use a fixed LO (SOURCE 2) of 18 GHz. In one case, the LO is a "low-side" LO. In the other case, it is a "high-side" LO. Notice that in one case the IF steps up in frequency, while in the other case the IF steps down.

After the multiple source definitions have been completed, multiple source mode may be activated via the **MULT. SRC: ON / SAVE** softkey. (When multiple source mode is active, the letter "M" appears in the enhancement label area of the HP 8510B display). The **MULT. SRC: (ON/OFF) / SAVE** softkeys serve the dual purpose of turning on/off multiple source mode and saving the multiple source definitions in the HP 8510B hardware state.

Adjusting the Output Power of both Sources

The output power of each source may also be controlled directly from the HP 8510B front panel via the **POWER MENU** softkeys in the **STIMULUS MENU** section. For the case shown in Figures 1 and 2, the LO synthesizer (SOURCE 2) uses external power levelling to achieve a levelled signal at the output of the HP 8349B amplifier. With the HP 8349B interfaced to the LO synthesizer as shown in Figure 2, external levelling may be activated by first setting the HP 8510B system bus to **LOCAL**, and then pressing **XTAL** on the

LO synthesizer. Finally, the system bus is set back to **REMOTE** and the levelled output power of the HP 8349B is controlled via the **POWER SOURCE 2** softkey on the HP 8510B.

Once the multiple source mode has been activated and the source output powers have been set to their desired levels, the mixer (or other FTD) measurement procedure may commence.

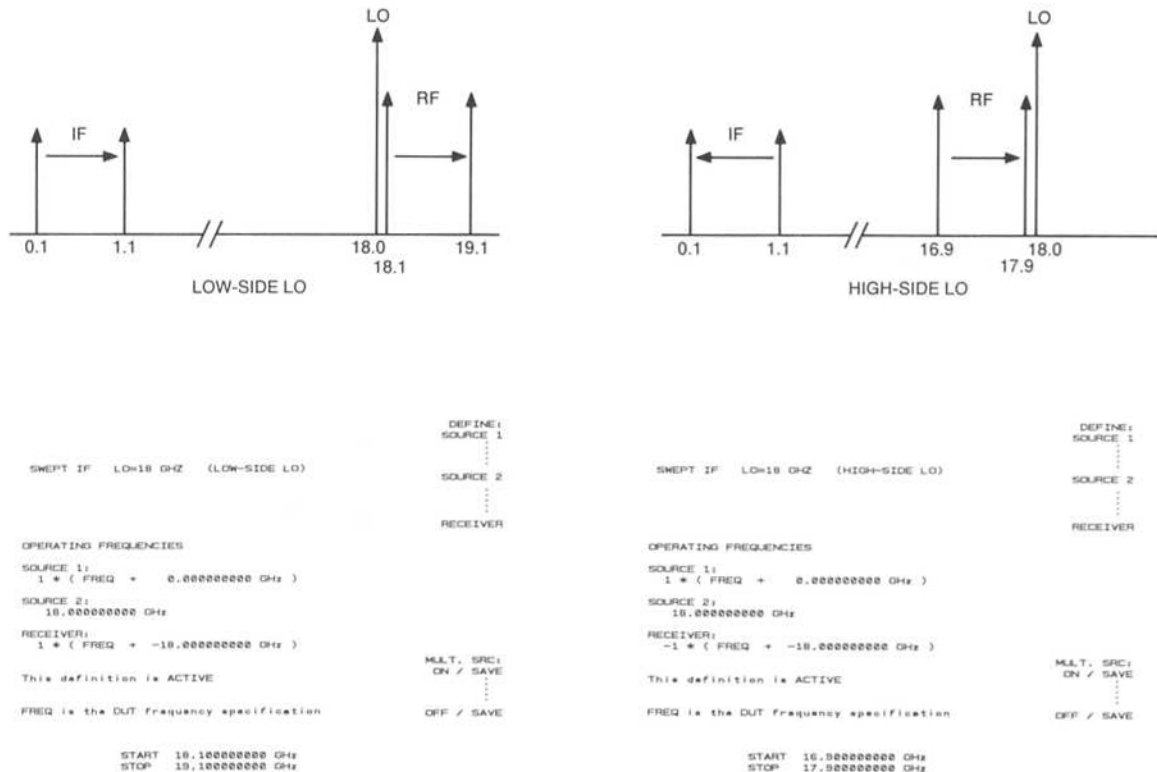


Figure 4. Source/Receiver Definitions for Swept IF Measurements Using Low-Side & High-Side LO.

The Hardware State

The HP 8510B hardware state contains the multiple source definitions and their on/off status, the HP-IB addresses of the system instruments, and the system phase-lock status. For instance, the hardware state of the system shown in Figures 1 and 2 contains the multiple source definitions shown in Figure 3, the HP-IB addresses shown in Figure 2, and a system phase-lock status set to internal phase-lock. This hardware state is a user-defined description of how the HP 8510B-based system is configured, and unlike the instrument state, it is not subject to change when the **PRESET** key is pressed or when the system is powered up.

Hardware states may be stored and loaded from the HP 8510B internal tape or external disc via the softkey menus located under the **TAPE** key. The ability to store and load hardware states from tape or disc allows for the fast reconfiguration of the HP 8510B from one measurement application to another. For example, a single HP 8510B-based system may be quickly changed from a mixer test system to an antenna or millimeter-wave device measurement system simply by configuring the necessary instruments (hardware) and loading a previously stored hardware state.

The newly loaded hardware state contains the HP-IB addresses, system phase-lock status, and multiple source definitions necessary for the system to function properly. (After the hardware state is loaded, multiple source mode will automatically be turned on or off depending on the state in which it was saved).

Once the appropriate hardware state has been loaded, various instrument states, calibration sets, etc. may also be loaded from tape or disc to complete the instrument set up. For example, consider the case where a group of three users wants to use an HP 8510B for taking mixer measurements, and another group of five users wants to use the same HP 8510B to measure devices using TRL and/or noninsertable calibration methods. To compound the matter, the users within each group have different measurement parameters such as frequency span, cal kit type, etc. To solve this matter, each group uses its own hardware state stored on tape or disc, and the individual users within each group use their own instrument state, cal kit, etc., stored on tape or disc as well. By loading the appropriate hardware state, instrument state, etc., these users save valuable setup time and possibly the cost of another system.

Amplitude & Phase Matching of Mixers

In the case of mixers and other FTD components, a test fixture similar to the one shown in Figures 1 and 2 is necessary to measure the amplitude and phase match between individual components. A block diagram of the test fixture with two mixers in place (mixers A & B) is shown in Figure 5. For the example shown in Figure 5, multiple source mode is activated with the source/receiver frequency definitions shown in Figure 3.

The measurement procedure consists of first measuring the ratio of the two channels (User2 = $b2/a2$) and storing that ratio in display memory. Next, one of the two original mixers (preferably the b2-channel mixer, mixer B) is replaced by a third mixer (mixer C), and the ratio of the two channels is taken again. This ratio is compared to the ratio in memory by use of the DATA/MEM display function. This display of DATA/MEM is the amplitude and phase match between the third mixer and the original mixer it replaced (mixer C/mixer B).

This procedure may be continued indefinitely, comparing many mixers (mixers C, D, et al) to the original mixer (mixer B) and thus indirectly comparing them all to each other. By using all eight of the HP 8510B display memories in the manner mentioned above, it is possible to directly compare any mixer to eight other mixers (one stored in each memory 1-8) with only one connection.

The fundamental principle behind this measurement procedure lies in the fact that the only thing that has changed as one mixer is replaced by another is the response of the mixer. Since the rest of the test fixture has not changed, what is measured is the difference between the mixers. This normalization procedure removes the effects of the power splitters, HP 8511A channels, and the rest of the mixer test fixture from the measurement. Notice that mixer A is not compared to the other mixers, it serves as a measurement and phase-lock reference only.

When comparing several mixers, it is good measurement procedure to periodically reinsert the original mixer (mixer B) and observe the display of DATA/MEM. This display of DATA/MEM should be flat as shown in step 1 of Figure 5. This procedure will verify that the measurement system has not changed with time, and that the comparison of each mixer is as good as the first comparison.


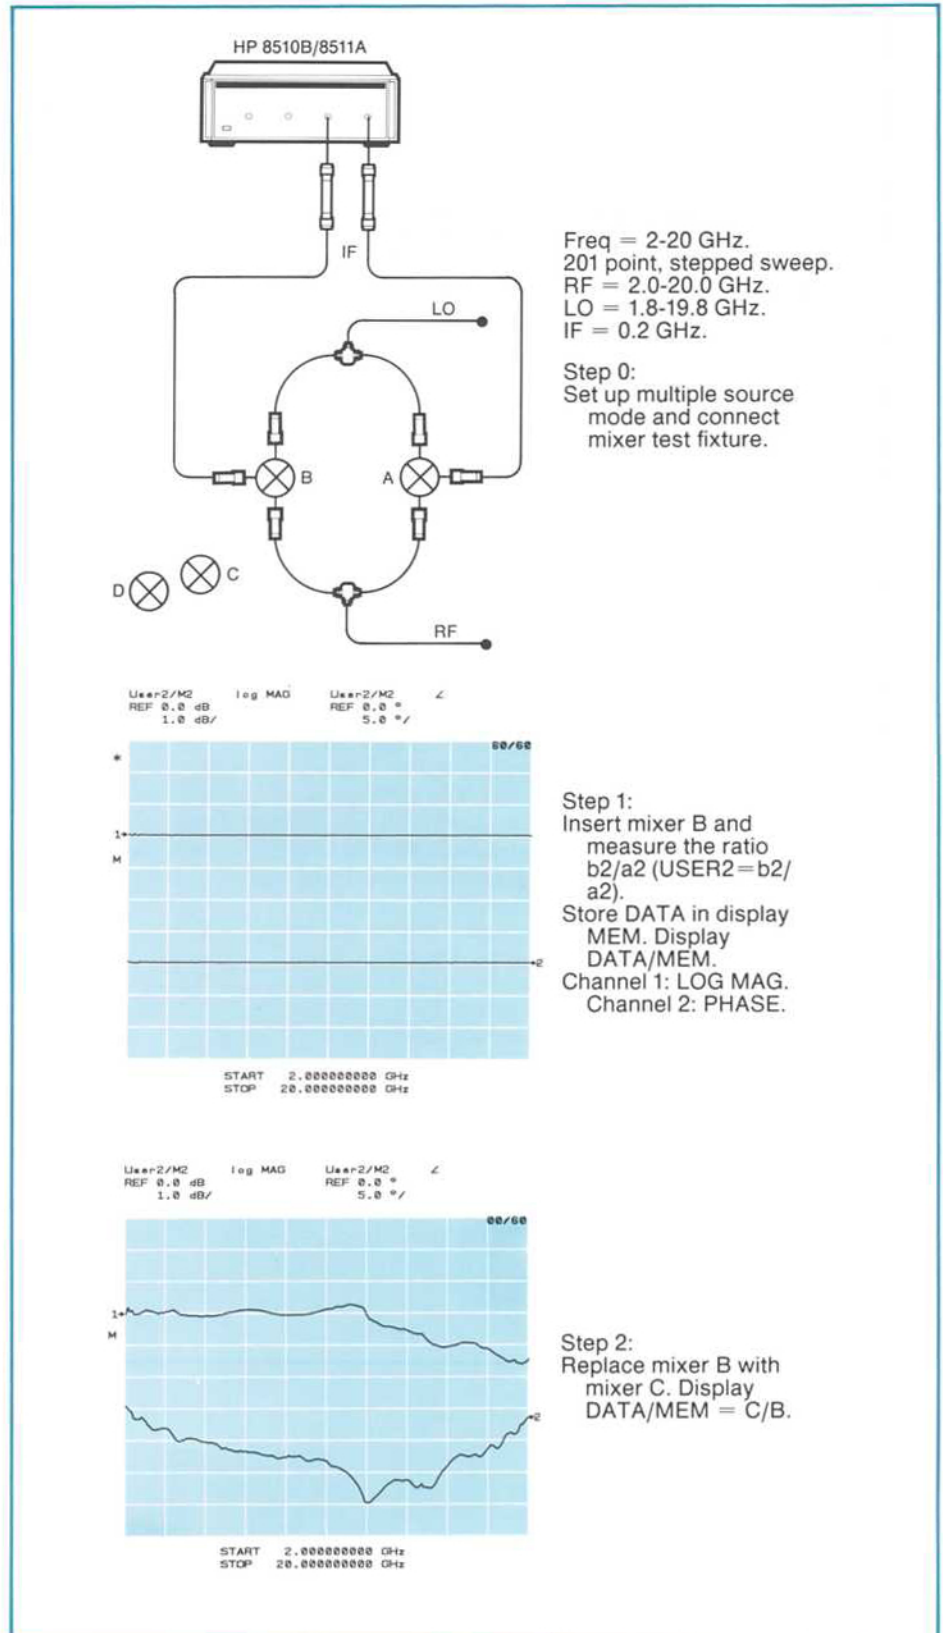


Figure 5. Mixer Matching Measurement Procedure.

Accuracy Considerations

There are three principal sources of measurement inaccuracy associated with the mixer measurement system described above. These three sources of error are nonideal system port matches, crosstalk from one channel of the test fixture to the other, and spurious responses caused by unwanted mixing products which enter the HP 8511A.

Because the measurements are not corrected for source and load match, it is necessary to pad all of the mixer ports. This will reduce the measurement errors associated with the interaction between the mixer port matches and the system port matches. To reduce crosstalk between channels, it is important to use two-resistor power splitters such as the HP 11667B rather than three-resistor power dividers. Also, because the HP 8511A is a sampler-based receiver, care must be taken to insure that spurious mixing products do not interfere with the measurement. For the case shown in Figure 5, a 1.5 GHz LPF was used to eliminate the spurs. For further discussion on the topic of identifying and reducing the effect of spurs on the measurement results, see Appendix A.

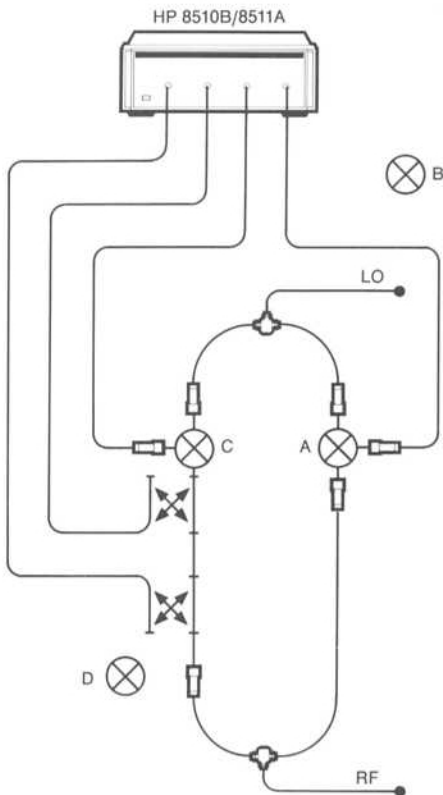

Measuring Mixer Input Impedance and Port to Port Isolation

As shown in Figure 6, a reflectometer may be included in the mixer test fixture. This configuration allows for measuring the amplitude and phase match between mixers, the RF input impedance, and the RF port to IF port isolation of each mixer with only one insertion of the mixer into the mixer test fixture. Notice that the IF filters shown in Figure 5 are not present in Figure 6. The filters are not present so that the RF to IF isolation may be measured. If the measurement of the RF to IF isolation is not necessary, then the filters do not need to be removed. (Even with IF filters to eliminate spurs from the amplitude and phase matching measurement, spurs may still occur in the measurements of the RF input impedance).

To eliminate spurious responses in all three of the measurements described above, the HP 8510B frequency list mode is used to select measurement frequencies at which no spurs occur. Shown in Figure 6 is the frequency list used for all three measurements. This simple frequency list was generated with the aid of the spur analysis program described in Appendix A. (In general, a frequency list may consist of up to thirty-one segments with any number of points per segment, as long as the sum of all points is not greater than 401).

Notice that although the frequency list is the same for all three measurements, the multiple source definition is not the same. (Frequency list defines **FREQ** which is used in the multiple source definitions). For measuring the amplitude and phase match between mixers, the **RECEIVER** is defined to measure the constant IF of 200 MHz. For measuring the RF input impedance and the RF to IF isolation, the **RECEIVER** is defined to measure the RF signal.


SEG	START (GHz)	STOP (GHz)	STEP (GHz)	CENTER	SPAN	NUMBER of POINTS	STEP SIZE	OK	DONE
M -> 1	5.007000000	20.007000000	0.100000000						
END									
NUMBER OF LIST POINTS: 151									

DEFINITION	SOURCE 1	SOURCE 2	RECEIVER
MIXER AMPLITUDE AND PHASE MATCH			
OPERATING FREQUENCIES	SOURCE 1) 1 * (FREQ + 0.200000000 GHz)		
	SOURCE 2) 1 * (FREQ + -0.200000000 GHz)		
	RECEIVER) 0.200000000 GHz		
THIS DEFINITION IS ACTIVE			
FREQ IS THE DUT Frequency specification			
	START 5.007000000 GHz	STOP 20.007000000 GHz	


DEFINITION	SOURCE 1	SOURCE 2	RECEIVER
MIXER RF INPUT IMPEDANCE AND RF TO IF ISOLATION			
OPERATING FREQUENCIES	SOURCE 1) 1 * (FREQ + 0.000000000 GHz)		
	SOURCE 2) 1 * (FREQ + -0.200000000 GHz)		
	RECEIVER) 1 * (FREQ + 0.000000000 GHz)		
THIS DEFINITION IS ACTIVE			
FREQ IS THE DUT Frequency specification			
	START 5.007000000 GHz	STOP 20.007000000 GHz	

Figure 6. Mixer Amplitude & Phase Matching Fixture with RF VSWR and RF-IF Isolation Measurement Capability.

Using the frequency list shown above and the appropriate multiple source definition, the amplitude and phase match between mixers is measured as described in Figure 5; the result is shown in Figure 6. At this point the "amplitude and phase matching" hardware and instrument states are saved on tape or disc.

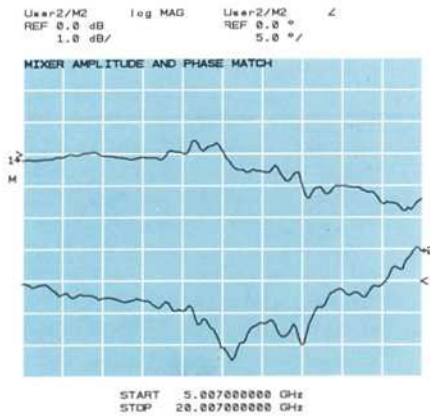

Next, the multiple source definition is changed to accommodate the measurement of the RF input impedance and RF to IF isolation. Then, an S11 1-port calibration and an S21 thru response calibration are performed and saved to provide error corrected measurements of the RF input impedance and the RF to IF isolation. The multiple source definition and the measurement results are shown in Figure 6. Finally, the "RF input impedance/RF to IF isolation" hardware and instrument states are saved on the same tape or disc as the "amplitude and phase matching" hardware and instrument states.

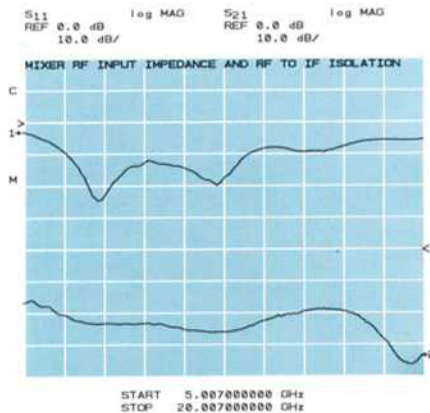

This measurement system and procedure allows for measuring amplitude and phase matching, RF input impedance, and RF to IF isolation of mixers simply by inserting the mixer and recalling the appropriate hardware and instrument states.

When the amplitude and phase match between mixers is not important, or when spur avoidance becomes difficult, the measurement system shown in Figure 7 may be used to measure the RF and LO input impedance, the LO to RF isolation, and the RF to LO isolation separately from the amplitude and phase match.

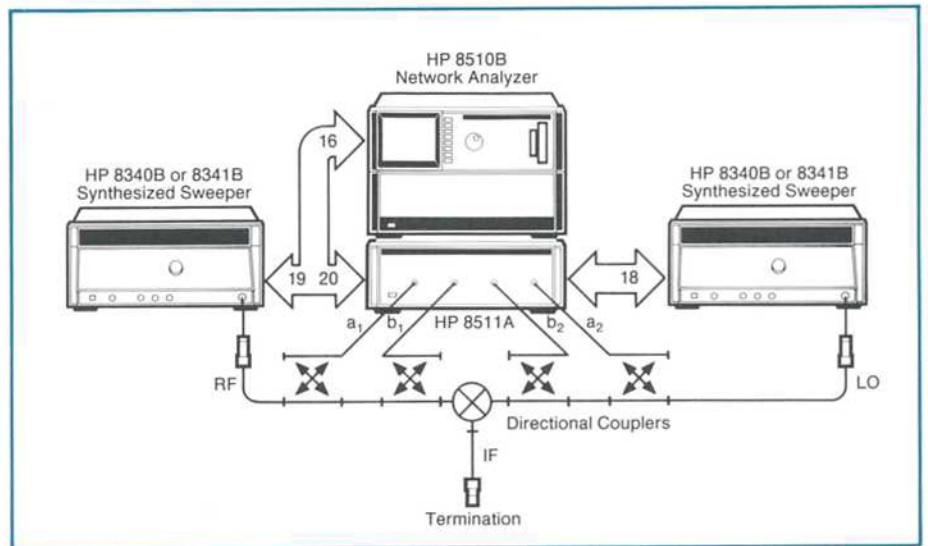


Figure 7. Mixer Input Impedance and Isolation Measurement System.

Amplitude & Phase Matching of Receiver Channels

In the case of amplitude and phase matching between channels of a multi-channel receiver, it is often necessary to measure all of the channels simultaneously. In this case the method used to measure the amplitude and phase match between individual components such as mixers, one at a time, will not work. Some other method must be used to eliminate the effects of any external power splitters and the HP 8511A frequency converter.

For example, consider the measurement block diagram of the dual-channel receiver shown in Figure 8. The measurement system is the standard system as described in Figure 2 (without the mixer test fixture).

Multiple source mode is used to supply the dual-channel receiver under test with RF and LO signals, and also to measure its IF output signals.

In this example, the source/receiver frequencies are defined as shown in Figure 9. The RF (SOURCE 1) and LO (SOURCE 2) sources are defined to step-sweep (201 points) from 9.7-9.9 GHz and from 9.4-9.6 GHz respectively. The HP 8511A frequency converter is defined to measure a constant IF of 300 MHz at each measurement point of the 201 point stepped-sweep.



Figure 9. Multiple Source Mode Frequency Definitions for Measurement of Dual-Channel Receiver.

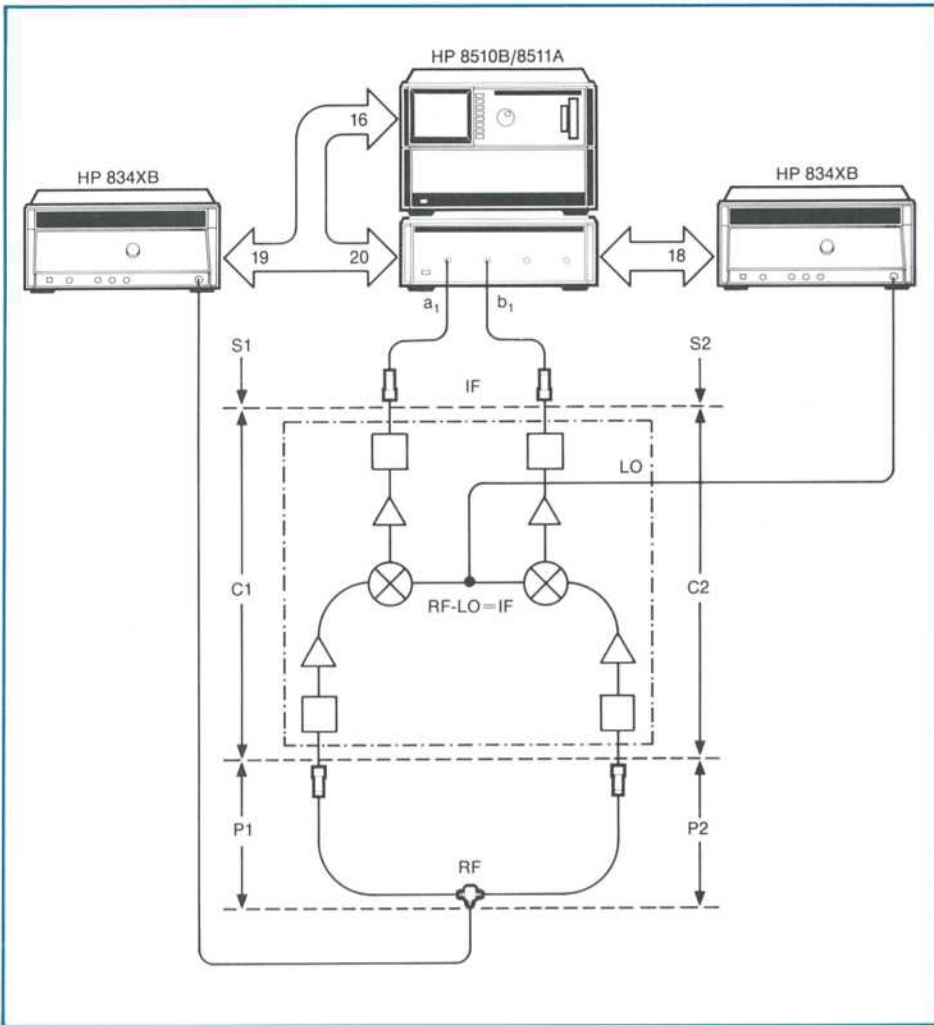


Figure 8. Dual-Channel Receiver Measurement System Block Diagram.

Normalizing the Test Setup

To accurately measure the amplitude and/or phase match between the receiver channels, the difference in frequency response between the RF power splitter arms and between the HP 8511A channels must be removed. (The effect of the LO power splitter should not be removed because it is internal to the dual-channel receiver).

Measurement of the RF Power Splitter

The normalization procedure begins by measuring the difference in S21 between the arms (P1 & P2) of the RF power splitter over the RF span (9.7-9.9 GHz, 201 points). As shown in Figure 10, these measurements are best made with an HP 8510B and HP 8515A (or other S-parameter test set) based system using full 2-port error correction. Multiple source mode is not active at this time.

First, P1 is measured and the result is stored in the HP 8510B display memory. Then, P2 is measured and DATA/MEM is displayed. The result of these measurements (P2/P1, amplitude & phase) is transferred to an external computer and stored on a disc (See Appendix B for the computer program used during this procedure).

As shown in Figure 10, the RF power splitter may actually consist of a power splitter, some fixed attenuators, and various coaxial cables or waveguide sections for interfacing to the RF inputs of the dual-channel receiver. All of these components must be included in the measurement of (P2/P1).

Measurement of the HP 8511A Channels

The procedure used to measure the difference between the HP 8511A channels (at the IF frequency of 300 MHz) begins by measuring the difference in S21 between the arms of an "IF power splitter". This IF power splitter is used only during the measurement of the HP 8511A channels and will not be used during the actual measurement of the dual-channel receiver.

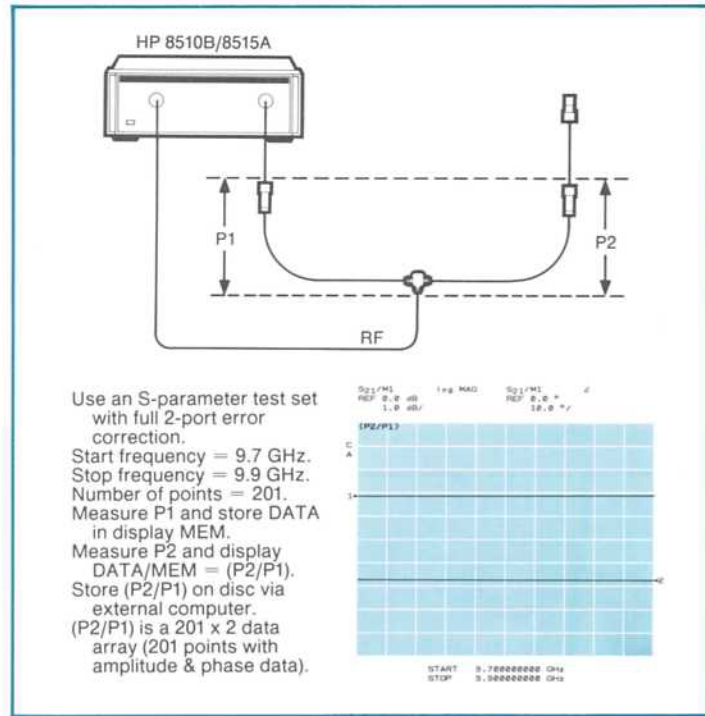


Figure 10. RF Power Splitter Measurement.

Also, the IF power splitter arms should interface to the HP 8511A exactly as the IF outputs of the dual-channel receiver will, i.e. they should have the same connector type and geometry.

As shown in Figure 11, the difference in S21 between the arms of the IF power splitter (P4/P3) is measured using full 2-port error correction at the C.W. frequency of 300 MHz. The result (P4/P3) is transferred to an external computer and stored on the disc with the RF power splitter result.

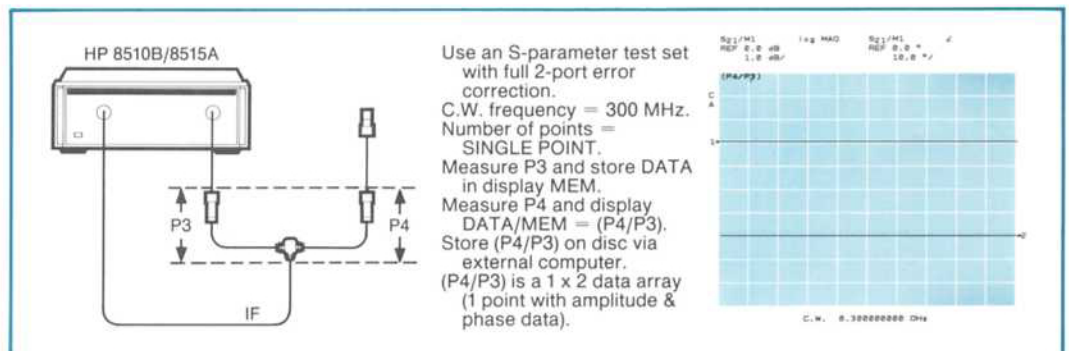


Figure 11. IF Power Splitter Measurement.

Next, the IF power splitter is connected to the HP 8510B and HP 8511A system as shown in Figure 12, and the ratio of the two channels $[(b1/a1) = (S2/S1) * (P4/P3)]$ is measured at the C.W. frequency of 300 MHz. This ratio is then read from the HP 8510B to an external computer and stored with the RF and IF power splitter results. Note that the HP 8511A channels (S1 & S2) must be measured with any cables and attenuators which will be in place during the actual measurement of the dual-channel receiver. After this measurement of the HP 8511A channels, the IF power splitter is no longer required.

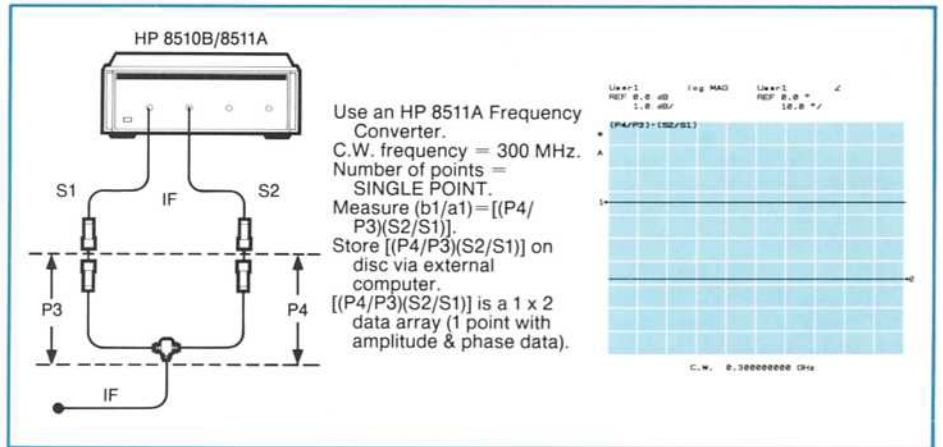


Figure 12. HP 8511A Channel Measurement.

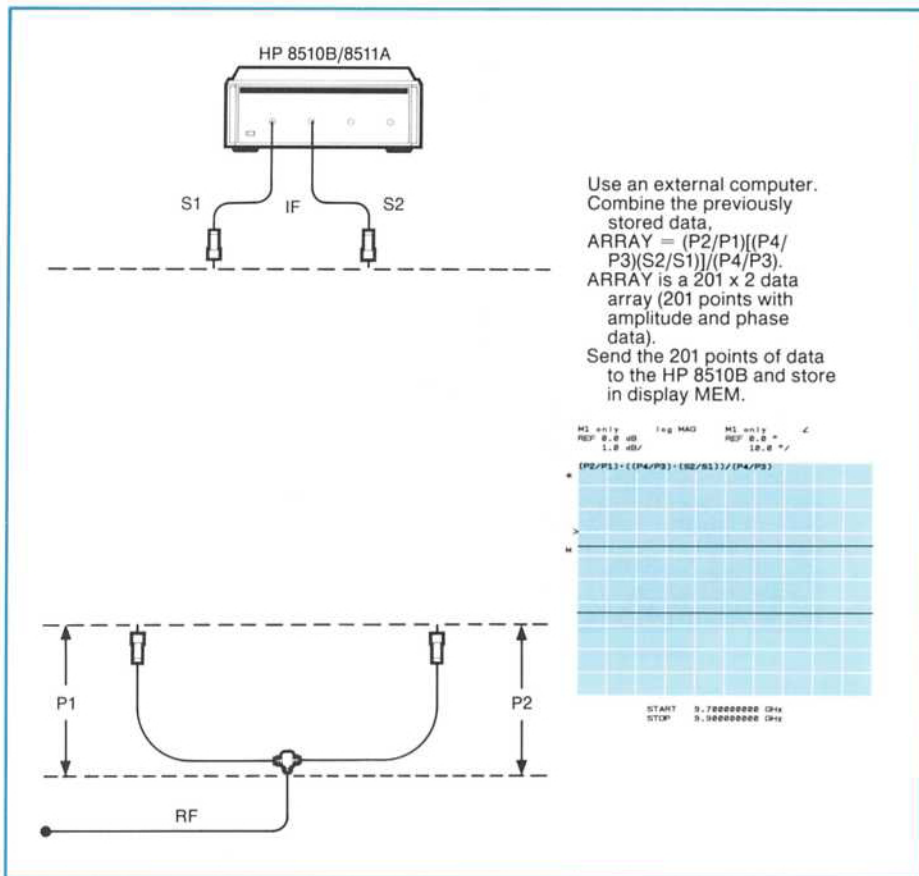


Figure 13. Combining Normalization Data.

Combining Normalization Data

Once the results of the RF and IF power splitter measurements and the HP 8511A measurements have been stored in an external computer, they are combined as shown in Figure 13. This combined normalization data is then sent to the HP 8510B and stored in display memory. Once the normalization data has been sent to the HP 8510B, the external computer is no longer required.

Normalized Measurements of Dual-Channel Receivers

Finally, the dual-channel receiver is inserted into the test system (inserted between the RF power splitter and the HP 8511A), multiple source mode is activated (see Figure 9 for the multiple source definitions), and the ratio of the two channels is measured using the DATA/MEM display mode. As shown in Figure 14, the result of this measurement procedure is the amplitude and phase match between the channels of the dual-channel receiver with the effects of the RF power splitter and the HP 8511A receiver channels removed.

Now, if desired, each channel of the dual-channel receiver may be adjusted (or tuned) to improve the match between channels, and the result will be shown on the HP 8510B display. After one dual-channel receiver has been adjusted satisfactorily, it may be removed so that other dual-channel receivers may be inserted and adjusted in turn.

The measurement procedure described above may be extended to three or four channel receivers by the use of three or four channels of the HP 8511A and two or

three HP 8510B display memories respectively. Also, when measuring two or three channel receivers, it is possible to store the normalization data in an HP 8510B calibration set and use this calibration set (rather than the display memories) to provide the DATA/MEM display function. This method will free-up all eight display memories for other uses.

Accuracy Considerations

As with the measurement of the match between individual FTD components, the measurement of the match between channels of multi-channel receivers has three principal sources of measurement inaccuracy. These sources are, non-ideal system port matches, crosstalk from one channel of the test system to the other, and unwanted mixing products which enter the HP 8511A.

To improve the system port matches, fixed attenuators should be used at the RF power splitter and HP 8511A as shown in Figure 8. Also, the RF power splitter should provide good isolation between channels to reduce system crosstalk. Usually, these multi-channel receivers provide their own internal filtering to eliminate unwanted mixing products. In case they do not have internal filtering, an external bandpass filter centered at the IF and inserted before the HP 8511A will eliminate any unwanted mixing products and their associated spurious responses.

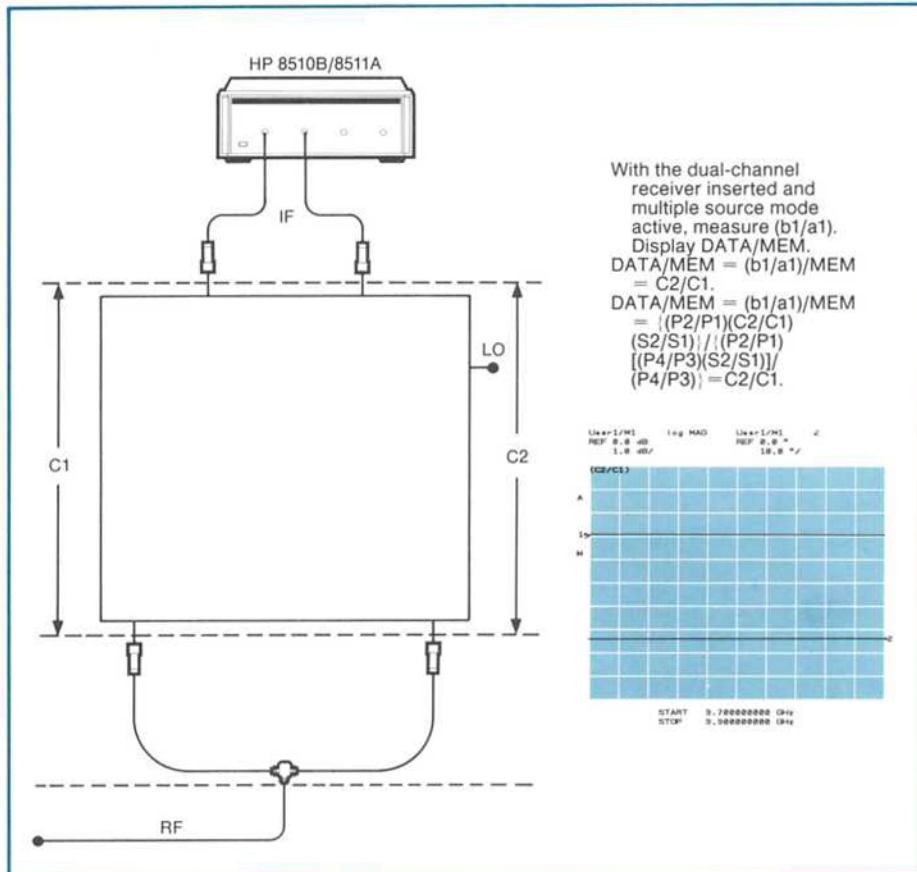


Figure 14. Normalized Measurement of Dual-Channel Receiver.

Appendix A: Spur Analysis and Avoidance

Spur Analysis

To aid in the following analysis, it is assumed that the frequency translation device (FTD) under test is a mixer. (The concept behind this analysis is easily extended to other types of FTDs). As shown in Figure A1, the mixer under test has RF and LO inputs and an IF output. In this case, $IF = RF - LO$. Also emanating from the IF port are several other mixing products of the RF and LO signals. These unwanted mixing products can cause spurious measurement responses; these spurious responses must be avoided or reduced to an insignificant level.

During the measurement of the mixer, the HP 8510B, which is in multiple source mode, is controlling both the RF and LO sources and the HP 8511A receiver (the IF receiver). As the RF and LO sources are stepped through their frequency ranges, the HP 8511A is stepped through its range of $IF = RF - LO$. At each measurement point (201, 401, 801, Freq List, etc.), the HP 8511A frequency converter phase-locks onto the incoming IF signal and downconverts it to 20 MHz. This 20 MHz signal continues on, inside the HP 8510B, and is further downconverted to 100 kHz. The 100 kHz signal is then processed by the

HP 8510B internal computer to extract information about the original IF signal. This information is then displayed on the HP 8510B screen.

The method used to downconvert the original IF signal to 20 MHz is called sampling. The sampling method presents all the frequency harmonics of the test set voltage tuned oscillator (VTO) to the incoming IF signal. The VTO is pretuned and phase-locked so that one of its harmonics mixes with the incoming IF signal to give exactly 20 MHz. An internal 20 MHz bandpass filter (BPF) stops all other mixing products of the RF, LO, and VTO, which are not at 20 MHz, from continuing on inside the HP 8510B and causing spurious measurement results.

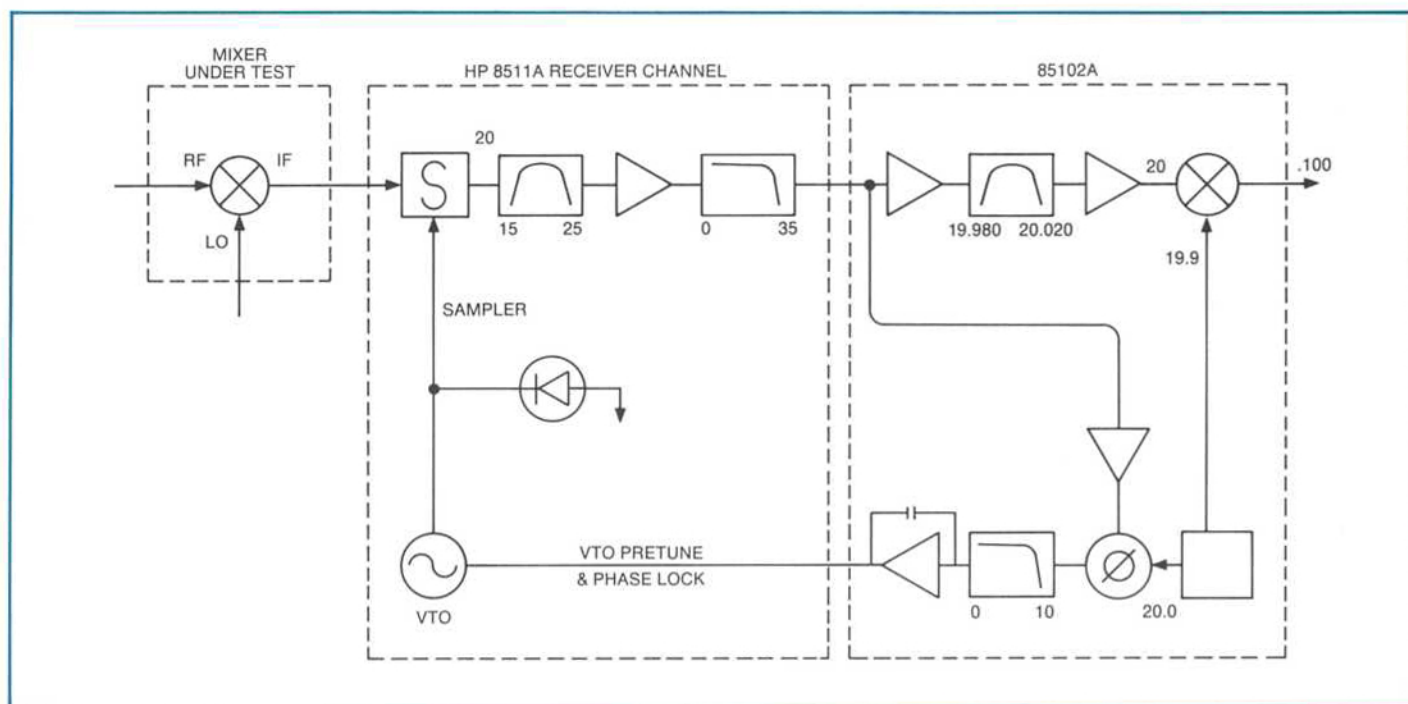


Figure A1. Spur analysis block diagram.


However, if the incoming IF signal is actually composed of many different frequency components, it is possible that some other component of the IF signal will combine with a different harmonic of the VTO and also produce a signal at 20 MHz. This spurious response will then proceed through the internal 20 MHz BPF, along with the desired signal, and cause a spurious measurement result.

The Spur Program

The first step toward avoiding or eliminating spurs is to determine at which frequencies they may occur. Included at the end of this appendix is a spur analysis program which can predict the occurrence of spurs for mixer measurements when using the HP 8510B and HP 8511A-based system shown above. Although the spur program has been specialized for the measurement of downconverting mixers, it can easily be modified for use when measuring upconverters, harmonic mixers, VSWR of mixers, or other frequency translation devices. This program only predicts the possible occurrence of a spur, it does not predict its power level. Also, this program does not consider RF or LO source subharmonics. (If the RF or LO synthesizer is replaced by a sweeper, then the spur program should be modified to account for the sweeper frequency inaccuracy.)

Spur Avoidance

As described above, the spur problem stems from unwanted mixing products of the RF and LO signals and the sampling method used in the HP 8511A. The easiest way to eliminate these spurs is to stop the unwanted mixing products of the RF and LO signals from entering the HP 8511A frequency converter. For fixed IF mixer measurements, this is easily accomplished by the use of a BPF centered around the mixer IF signal. This BPF is inserted after the mixer IF port and before the HP 8511A input port. For swept IF measurements, filtering may not work. In this case, it may be necessary to select measurement frequencies, using the HP 8510B frequency list mode, at which no spurs occur. The spur program may be used to determine at which frequencies there are no spurs. In some cases, a combination of filtering and selectively choosing the measurement frequencies may eliminate any spurious responses.

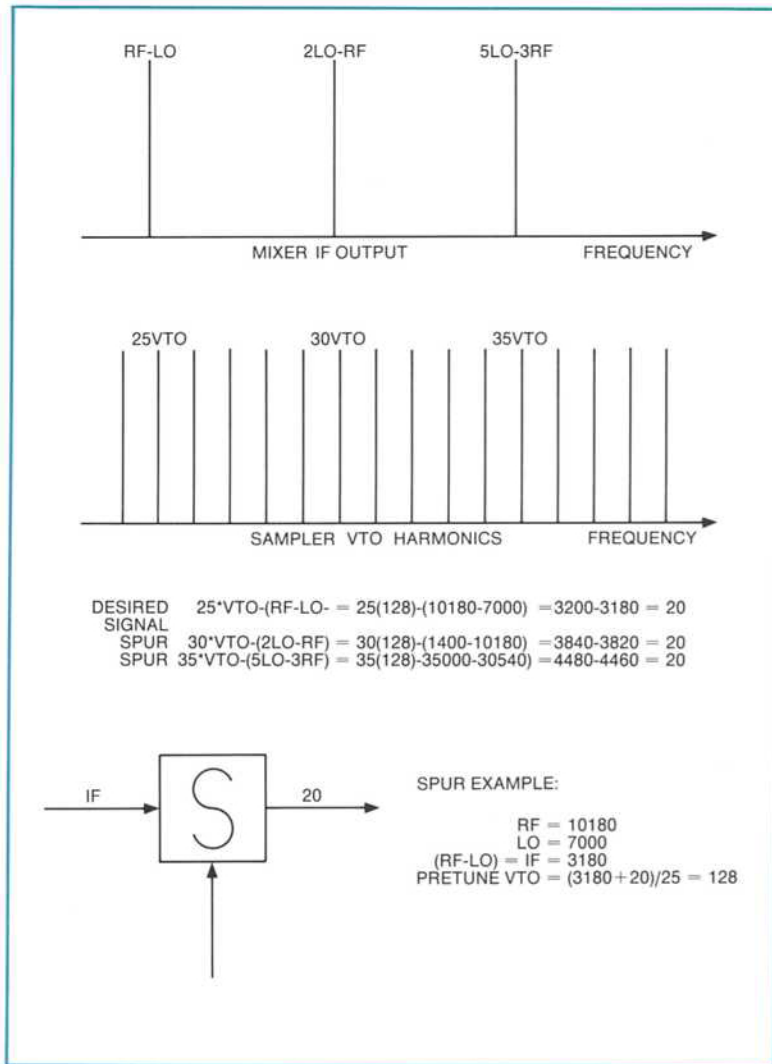

```

10 ! TSET_SPUR
20 ! 8510 MIXER SPUR PROGRAM
30 OUTPUT KBD;CHR$(255)&CHR$(75);
40 INPUT "ENTER RF START FREQ (MHz)",R_start
50 INPUT "ENTER RF STOP FREQ (MHz)",R_stop
60 PRINT USING "2(3A,5D.3D)";"R=",R_start," - ",R_stop
70 INPUT "ENTER LO START FREQ (MHz)",L_start
80 INPUT "ENTER LO STOP FREQ (MHz)",L_stop
90 PRINT USING "2(3A,5D.3D)";"L=",L_start," - ",L_stop
100 INPUT "ENTER NUMBER OF 8510 TRACE POINTS",N_pnts
110 PRINT USING "14A,4D";"NO. OF POINTS=",N_pnts
120 INPUT "ENTER IF FILTER LOWER FREQ EDGE (MHz)",B_start
130 INPUT "ENTER IF FILTER UPPER FREQ EDGE (MHz)",B_stop
140 PRINT USING "13A,6D.3D,1X,3A,4X";"Filter start=",B_start,"MHz","Filter stop
=",B_stop,"MHz"
150 PRINT " "
160 PRINT " R L I F_vto* X= Y mL -
nR= Spur"
170 !
180 Mm=1 ! I=(Mm*L+Nn*R)
190 Nn=-1 ! I=( 1*L+-1*R)
200 R_step=(R_stop-R_start)/(N_pnts-1)
210 L_step=(L_stop-L_start)/(N_pnts-1)
220 FOR Pnt=0 TO N_pnts-1
230 R=R_start+Pnt*R_step
240 L=L_start+Pnt*L_step
250 I=ABS(Mm*L+Nn*R) ! DETERMINES I
260 CALL Vto(I,V) ! DETERMINES Vto FREQUENCY
270 !
280 FOR M=0 TO 10 ! CONSIDER 0-10 L HARMONIC
290 FOR N=-10 TO 10 ! CONSIDER 0-10 R HARMONIC
300 IF M=Mm AND N=Nn THEN Necst ! Mm*L+Nn*R=I, IS NOT SPUR
310 CALL Spur(M,L,N,R,V,B_start,B_stop) ! DETERMINES SPUR FREQUENCY
320 Necst:NEXT N
330 NEXT M
340 NEXT Pnt
350 END
360 !
370 SUB Vto(I,V) ! V=(8510 Vto FREQUENCY)
380 V=(I+20)/90
390 IF I<20000 THEN V=(I+20)/69
400 IF I<13500 THEN V=(I+20)/47
410 IF I<7000 THEN V=(I+20)/25
420 IF I<2400 THEN V=(I+20)/9
430 IF I<840 THEN V=(I+20)/3
440 IF I<250 THEN V=(I+20)/1
450 SUBEND
460 SUB Spur(M,L,N,R,V,B_start,B_stop)
470 X=ABS(M*L+N*R)
480 IF X<B_start OR X>B_stop THEN Here ! IF FILTER SECTION
490 P=X DIV V
500 IF P>(30000/V) THEN Here !CONSIDER ONLY Vto HARMONICS UP TO 30GHZ
510 FOR H=0 TO 1
520 Y=ABS(X-(P+H)*V)
530 IF Y<20.025 AND Y>19.975 THEN !8510 RECIEVER HAS 50KHz WIDE BPF
540 PRINT USING "3(5D.3D,4X),3D.3D,1A,3D,1A,5D.3D,3X,2D,1A,3D,2A,5D.3D";R
,L,ABS(L-R),V,"*",P+H,"=",V*(P+H),M,"L",N,"R=",X
550 END IF
560 NEXT H
570 Here:SUBEND

```


Appendix B

```
10 ! RECEIVER HEWLETT-PACKARD CO. NMD
20 ! 8510 DUAL-CHANNEL RECEIVER MEASUREMENT PROG. REV. 1.0 5/15/87 TR
30 DEG
40 OPTION BASE 1
50 COM Prf(201,2),Prfm(201,2),Prfp(201,2),Ri(201,2)
60 COM Pif(2),Psif(2)
70 ASSIGN @Nwa TO 716
80 ASSIGN @Nwa_data2 TO 716;FORMAT OFF
90 INTEGER Size,Preamble
100 Begin: !
110 ON KEY 1 LABEL "MEASURE P_RF" GOSUB P_rf
120 ON KEY 2 LABEL "MEASURE P_IF" GOSUB P_if
130 ON KEY 3 LABEL "MEASURE PS_IF" GOSUB Ps_if
140 ON KEY 5 LABEL "COMBINE MEASMENTS" GOSUB Combine
150 ON KEY 6 LABEL "DATA TO 8510 MEM" GOSUB Data_mem
160 ON KEY 8 LABEL "QUIT" GOTO Stp
170 Here:GOTO Here
180 Stp:STOP
190 !*****
200 P_rf:! MEASURE RF POWER SPLITTER (P2/P1) & STORE DATA ON DISC
210 DISP "CAL 8510/8515 FOR RF POWER SPLITTER MEAS. - PRESS CONTINUE WHEN READY"
220 PAUSE
230 DISP "MEAS (P2/P1)_RF USING DATA/MEM - PRESS CONTINUE WHEN READY"
240 PAUSE
250 DISP "TAKING DATA - STANDBY"
260 OUTPUT @Nwa;"CHAN1;NUMG1;FORM3;OUTPFORM;" !
270 ENTER @Nwa_data2;Preamble,Size,Prfm(*) !READ (P2/P1) MAG (dB)
280 OUTPUT @Nwa;"CHAN2;FORM3;OUTPFORM;" !
290 ENTER @Nwa_data2;Preamble,Size,Prfp(*) !READ (P2/P1) PHASE
300 OUTPUT @Nwa;"CONT;"
310 FOR P=1 TO 201 !STORE (P2/P1) DATA IN Prf(*)
320 Prf(P,1)=Prfm(P,1) !Prf(P,1)=(P2/P1) MAG (dB)
330 Prf(P,2)=Prfp(P,1) !Prf(P,2)=(P2/P1) PHASE
340 PRINT P,Prf(P,1),Prf(P,2) !PRINT: (P2/P1) 201 POINTS
350 NEXT P
360 INPUT "ENTER FILE NAME TO STORE RF PWR SPLITTER DATA",P_rf$
370 CREATE ASCII P_rf$,32 !CREATE FILE TO STORE (P2/P1)
380 ASSIGN @File TO P_rf$
390 OUTPUT @File;Preamble,Size,Prf(*) !STORE (P2/P1) ON DISC
400 DISP "RF PWR SPLITTER DATA STORED IN FILE NAMED - ";P_rf$
410 RETURN
420 !*****
430 P_if: ! MEASURE IF POWER SPLITTER (P4/P3) & STORE DATA ON DISC
440 DISP "CAL 8510/8515 FOR IF POWER SPLITTER MEAS. - PRESS CONTINUE WHEN READY"
450 PAUSE
460 DISP "MEAS (P4/P3)_IF USING DATA/MEM - PRESS CONTINUE WHEN READY"
470 PAUSE
480 DISP "TAKING DATA - STANDBY"
490 OUTPUT @Nwa;"CHAN1;NUMG1;FORM3;OUTPFORM;"
500 ENTER @Nwa_data2;Preamble,Size,Pifm,Useless ! READ (P4/P3) MAG (dB)
510 OUTPUT @Nwa;"CHAN2;FORM3;OUTPFORM;"
520 ENTER @Nwa_data2;Preamble,Size,Pifp,Useless ! READ (P4/P3) PHASE
530 OUTPUT @Nwa;"CONT"
540 Pif(1)=Pifm !Pif(1)=(P4/P3) MAG (dB) SINGLE POINT
550 Pif(2)=Pifp !Pif(2)=(P4/P3) PHASE FOR FIXED IF
560 PRINT 1,Pif(1),Pif(2) !PRINT: (P4/P3) MAG (dB) & PHASE
570 INPUT "ENTER FILE NAME TO STORE IF PWR SPLITTER DATA",P_if$
580 CREATE ASCII P_if$,4 !CREATE FILE TO STORE (P4/P3)
590 ASSIGN @File TO P_if$
600 OUTPUT @File;Pif(*) !STORE (P4/P3) ON DISC
610 DISP "IF PWR SPLITTER DATA STORED IN FILE NAMED - ";P_if$
620 RETURN
630 !*****
640 Ps_if: ! MEASURE DIFFERENCE IN 8511A CHANNELS & STORE DATA ON DISC
650 DISP "CONFIGURE 8510/8511 SYSTEM FOR RECEIVER TEST - PRESS CONTINUE WHEN READY"
```

```

660 PAUSE
670 DISP "MEAS [(P4/P3)_IF]*[(S2/S1)_IF] USING DATA/MEM - PRESS CONTINUE WHEN R
EADY"
680 PAUSE
690 OUTPUT @Nwa;"CHAN1;NUMG1;FORM3;OUTPFORM;"
700 ENTER @Nwa_data2;Preamble,Size,Psifm,Useless !READ [(P4/P3)*(S2/S1)] MAG
710 OUTPUT @Nwa;"CHAN2;FORM3;OUTPFORM;"
720 ENTER @Nwa_data2;Preamble,Size,Psifp,Useless !READ [(P4/P3)*(S2/S1)] PHASE
730 OUTPUT @Nwa;"CONT;"
740 Psif(1)=Psifm !Psif(1)=[(P4/P3)*(S2/S1)] MAG (dB) SINGLE POINT
750 Psif(2)=Psifp !Psif(2)=[(P4/P3)*(S2/S1)] PHASE FOR FIXED IF
760 PRINT 1,Psif(1),Psif(2) !PRINT: [(P4/P3)*(S2/S1)] MAG (dB) & PHASE
770 INPUT "ENTER FILE NAME TO STORE IF PWR SPLITTER/RECEIVER DATA",Ps_if$
780 CREATE ASCII Ps_if$,4 !CREATE FILE TO STORE [(P4/P3)*(S2/S1)]
790 ASSIGN @File TO Ps_if$
800 OUTPUT @File;Psif(*); !STORE [(P4/P3)*(S2/S1)] ON DISC
810 DISP "IF PWR SPLITTER/RECEIVER DATA STORED IN FILE NAMED - ";Ps_if$
820 RETURN
830 !*****
840 Combine: ! COMBINE NORMALIZATION DATA
850 DISP "STANDBY TO COMBINE NROMALIZTAION DATA - PRESS CONTINUE WHEN READY"
860 PAUSE
870 INPUT "ENTER RF PWR SPLITTER DATA FILE NAME",P_rf$
880 DISP "LOADING RF PWR SPLITTER DATA - STANDBY"
890 ASSIGN @File TO P_rf$
900 ENTER @File;Preamble,Size,Prf(*) !READ (P2/P1) 201 POINTS
910 INPUT "ENTER IF PWR SPLITTER DATA FILE NAME",P_if$
920 ASSIGN @File TO P_if$
930 ENTER @File;Pif(*) !READ (P4/P3) SINGLE POINT
940 INPUT "ENTER IF PWR SPLITTER/RECEIVER DATA FILE NAME",Ps_if$
950 ASSIGN @File TO Ps_if$
960 ENTER @File;Psif(*) !READ [(P4/P3*(S2/S1))] SINGLE POINT
970 DISP "COBINING NORMALIZATION DATA - STANDBY"
980 WAIT 2
990 FOR P=1 TO 201 !FOR ALL 201 MEASUREMENT POINTS COMBINE NORMALIZATION DATA
1000 M=10^(.05*(Prf(P,1)+Psif(1)-Pif(1))) !COMBINE MAGNITUDE DATA
1010 Ph=Prf(P,2)+Psif(2)-Pif(2) !COMBINE PHASE DATA
1020 Ri(P,1)=M*COS(Ph) !PUT NORMALIZATION DATA IN REAL AND IMAGINARY
1030 Ri(P,2)=M*SIN(Ph) !FOR EASY INPUT INTO 8510B DISPLAY MEMORY
1040 NEXT P
1041 !BECAUSE THE MEASUREMENT SYSTEM USES FIXED ATTENUATORS TO PROVIDE GOOD
1042 !SOURCE AND LOAD MATCH TO THE DUT THE ABOVE COMBINATION OF THE
1043 !NORMALIZATION DATA IS VALID. OTHERWISE WE WOULD HAVE TO USE TRUE
1044 !VECTOR MATH TO ACHIEVE ERROR CORRECTION, AND VECTOR MATH THROUGH
1045 !FREQUENCY TRANSLATION DEVICES IS MEANINGLESS.
1050 INPUT "ENTER FILE NAME TO STORE NORMALIZATION DATA",Ri$
1060 CREATE ASCII Ri$,32 !CREATE FILE TO STORE NORMALIZATION DATA
1070 ASSIGN @File TO Ri$
1080 OUTPUT @File;Preamble,Size,Ri(*) !STORE NORMALIZATION DATA
1090 DISP "NORMALIZATION DATA STORED IN FILE NAMED - ";Ri$
1100 RETURN
1110 !*****
1120 Data_mem: !TRANSFER NORMALIZATION DATA BACK TO 8510B DISPLAY MEMORY
1130 INPUT "ENTER NAME OF FILE WHICH CONTAINS DATA FOR 8510 MEM",Ri$
1140 ASSIGN @File TO Ri$
1150 DISP "ENTERING DATA FROM COMPUTER MEMORY - STANDBY"
1160 ENTER @File;Preamble,Size,Ri(*)
1170 DISP "ENTERING DATA INTO 8510 DISPLAY MEMORY - STANDBY"
1180 OUTPUT @Nwa;"HOLD;CHAN1;FORM3;INPU DATA;"
1190 OUTPUT @Nwa_data2;Preamble,Size,Ri(*)
1200 OUTPUT @Nwa;"CHAN2;FORM3;INPU DATA;"
1210 OUTPUT @Nwa_data2;Preamble,Size,Ri(*)
1220 OUTPUT @Nwa;"CHAN1;DATI;DISPMATH;"
1230 OUTPUT @Nwa;"CHAN2;DATI;DISPMATH;CONT;"
1240 DISP "MEMORY TRANSFER COMPLETE - BEGIN RECEIVER MEASUREMENTS"
1250 RETURN
1260 !*****
1270 END

```

For information about Hewlett-Packard products and services, telephone the local Hewlett-Packard sales and support office listed in your telephone directory. Or write to the appropriate address listed below.

U.S.A.

Hewlett-Packard
4 Choke Cherry Road
Rockville, MD 20850

Hewlett-Packard
5201 Tollview Drive
Rolling Meadows, IL 60008

Hewlett-Packard
2000 South Park Place
Atlanta, GA 30339

Hewlett-Packard
5161 Lankershim Blvd.
North Hollywood, CA 91601

Canada

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
Mississauga, Ontario L4V 1M8
Tel: (416) 678-9430

United Kingdom

Hewlett-Packard Ltd.
King Street Lane
Winkersley, Wokingham
Berkshire RG11 5AR
Tel: 734/78 47 74

France

Hewlett-Packard France
Parc d'activités du Bois Briard
2, avenue du Lac
91040 Evry Cedex
Tel: 1 60 77 83 83

German Federal Republic

Hewlett-Packard GmbH
Hewlett-Packard-Strasse
Postfach 1641
D-6380 Bad Homburg
West Germany
Tel: 06172/400-0

Italy

Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio 9
I-20063 Cernusco Sul
Naviglio (Milano)
Tel: 02/92 36 91

Benelux and Scandinavia

Hewlett-Packard S.A.
Uilenstede 475
P.O. Box 999
NL-1183 AG Amstelveen
The Netherlands
Tel: (31) 20/43 77 71

Mediterranean and Middle East

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
32 Kifissias Avenue
Paradissos-Amarousion, Athens
Greece
Tel: (30) 682 88 11

South and East Europe, Africa

Hewlett-Packard S.A.
7, rue du Bois-du-Lan
CH-1217 Meyrin 2, Geneva
Switzerland
Tel: (41) 22/83 12 12

Japan

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku, Tokyo 168
Tel: 03 (331) 6111

Asia

Hewlett-Packard Asia Ltd.
47/F, 26 Harbour Road,
Wanchai, Hong Kong
G.P.O. Box 863, Hong Kong
Tel: (852) 5-8330833

Australasia

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
Blackburn, Victoria 3130
Australia
Tel: (61) 895-2895

Other International Areas

Hewlett-Packard
Intercontinental Headquarters
3495 Deer Creek Road
Palo Alto, CA 94304

Corporate Headquarters
Hewlett-Packard
3000 Hanover Street
Palo Alto, CA 94304