

---

TECHNICAL MANUAL

OPERATOR'S ORGANIZATIONAL,  
DIRECT SUPPORT AND GENERAL SUPPORT

MAINTENANCE MANUAL  
(INCLUDING REPAIR PARTS  
AND SPECIAL TOOLS LIST)

FOR

SIGNATURE ANALYZER TS-3791/U  
(HEWLETT-PACKARD MODEL 5004A)

(OPT H10)

(NSN 6625-01-068-8641)

This manual includes copyright material reproduced by permission of the HEWLETT-PACKARD Company.

TECHNICAL MANUAL  
NO. 11-6625-2967-14&P



TM 11-6625-2967-14&P

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
Washington, DC 28 January 1980

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT AND  
GENERAL SUPPORT MAINTENANCE MANUAL  
(INCLUDING REPAIR PARTS AND SPECIAL TOOLS LISTS)  
FOR**

SIGNATURE ANALYZER TS-3791/U

(HEWLETT-PACKARD MODEL 500XA)

(OPT H10)

(NSN 6625-01-068-8641)

**REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be forwarded direct to you.

**SERIAL NUMBERS**

This manual applies directly to instruments with serial numbers prefixed 1704.

This manual is an authentication of the manufacturer's commercial literature which, through usage, has been found to cover the data required to operate and maintain this equipment. Since the manual was not prepared in accordance with military specifications and AR 310-3, the format has not been structured to consider levels of maintenance.

### **SAFETY PRECAUTIONS**

A periodic review of safety precautions in TB 385-4 is recommended. When the equipment is operated with covers removed while performing maintenance, **DO NOT TOUCH** exposed connections or components. **MAKE CERTAIN** you are not grounded when making connections or adjusting components inside the power supply.

### **WARNING**

**HIGH VOLTAGE** is used during the performance of maintenance as instructed in this manual. **DEATH ON CONTACT** may result if personnel fail to observe safety precautions.

### **WARNING**

**DO NOT ATTEMPT** to make internal connections or adjustments unless another person, capable of performing first aid, is present.

### **WARNING**

For electric shock protection, use only extension cords and power receptacles with a safety-ground connector, or otherwise connect the chassis to a safety ground system.

### **CERTIFICATION**

*Hewlett-Packard Company certifies that this instrument met its published specifications at the time of shipment from the factory. Hewlett-Packard Company further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.*

### **WARRANTY AND ASSISTANCE**

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of one year from the date of shipment. Hewlett-Packard will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard, and provided the preventive maintenance procedures in this manual are followed. Repairs necessitated by misuse of the product are not covered by this warranty. **NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT PACKARD IS NOT LIABLE FOR CONSEQUENTIAL DAMAGES.**

Service contracts or customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

TABLE OF CONTENTS

Section	Title	Page
0	INSTRUCTIONS	0-1
	0-1 Scope	0-1
	0-2 Indexes of Publications	0-1
	0-3 Forms and Records	0-1
	0-4 Reporting Equipment Improvement Recommendations	0-1
	0-5 Administrative Storage	0-1
	0-6 Destruction of Army Electronics Materiel	0-1
I	GENERAL INFORMATION.....	1-1
	1-1 Introduction .....	1-1
	1-3 Safety Considerations.....	1-1
	1-6 Options (Line Voltages).....	1-1
	1-8 Instruments Covered by Manual .....	1-1
	1-13 Specifications .....	1-1
	1-15 Description of 5004A Signature Analyzer.....	1-2
	1-17 Signature Analysis.....	1-2
	1-19 Accessories Supplied.....	1-3
	1-21 Recommended Test Equipment .....	1-3
II	INSTALLATION.....	2-1
	2-1 Introduction .....	2-1
	2-3 Initial Inspection .....	2-1
	2-5 Preparation for Use .....	2-1
	2-6 Power Requirements.....	2-1
	2-8 Line Voltage Selection .....	2-1
	2-10 Line Voltage Label .....	2-1
	2-12 Power Cable.....	2-1
	2-14 Operating Environment .....	2-2
	2-18 Storage and Shipment .....	2-3
	2-19 Environment.....	2-3
	2-22 Packaging .....	2-3
III	OPERATION.....	3-1
	3-1 Introduction .....	3-1
	3-3 Panel Features.....	3-1
	3-5 Signature Display.....	3-1
	3-8 Hexadecimal Number System Symbols (Digits) .....	3-1
	3-10 Test Terminal Grabber Connectors .....	3-1
	3-12 Operator's Maintenance.....	3-5
	3-14 Operator Self-Test of 5004A .....	3-5
	3-16 Instruments Compatible with 5004A.....	3-7
	3-18 Operating Instructions .....	3-7
	3-20 Typical Connections of 5004A to Device Under Test .....	3-8
	3-22 Probe, Pod, and Power Cable Storage.....	3-9
	3-24 Troubleshooting with the 5004A Signature Analyzer .....	3-9
IV	PERFORMANCE TESTS.....	4-1
	4-1 Introduction .....	4-1
	4-3 Test Equipment Required .....	4-1
	4-4 Logic Level Performance Test .....	4-1
	4-6 Positive Pulse Performance Test.....	4-2
	4-8 Negative Pulse Performance Test .....	4-3
	4-10 Data Probe Setup Time Performance Test.....	4-3
	4-12 Data Probe Hold Time Performance Test.....	4-5
	4-14 Test Record .....	4-5

**TABLE OF CONTENTS (Continued)**

Section	Title	Page
V	ADJUSTMENTS.....	5-1
	5-1 Introduction .....	5-1
	5-3 Data Probe Threshold Voltage Check and Adjustments .....	5-1
	5-5 Power Transformer Primary Line Voltage Change Procedure.....	5-1
VI	REPLACEABLE PARTS .....	6-1
	6-1 Introduction .....	6-1
	6-4 Ordering Information .....	6-3
	6-6 HP Part Number Organization .....	6-3
	6-8 Component Parts and Materials .....	6-3
	6-11 General Usage Parts.....	6-4
	6-13 Specific Instrument Parts .....	6-4
	6-15 Mechanical Parts.....	6-4
VII	MANUAL CHANGES .....	7-1
	7-1. Introduction .....	7-1
VIII	SERVICE .....	8-1
	8-1 Introduction .....	8-1
	8-3 Safety Considerations .....	8-1
	8-9 Recommended Test Equipment .....	8-1
	8-11 Logic Symbols.....	8-2
	8-13 Logic Concepts .....	8-2
	8-15 Negation.....	8-2
	8-17 Logic Implementation and Polarity Indication.....	8-3
	8-26 Other Symbols .....	8-5
	8-28 Dependency Notation "C" "G" "V" "F".....	8-6
	8-30 Control Blocks.....	8-7
	8-32 Complex Logic Devices .....	8-8
	8-34 Troubleshooting (Failure Analysis).....	8-9
	8-38 Troubleshooting Flowchart.....	8-9
	8-40 Major Test Point Signatures.....	8-9
	8-42 Troubleshooting Signatures with SELF-TEST and NORMAL/ SERVICE Switches.....	8-9
	8-44 Disassembly and Reassembly Procedures .....	8-14
	8-46 Data Probe Disassembly and Reassembly.....	8-15
	8-48 Gating Signals Pod Disassembly and Reassembly .....	8-15
	8-50 Block Diagram Description.....	8-16
	8-54 Clock, Start, and Stop Signal Paths.....	8-16
	8-56 Scan/Test Oscillator (Internal Clock) .....	8-16
	8-58 Self-Test.....	8-16
	8-60 Display Scan and Comparator Strobe.....	8-18
	8-62 Service (Troubleshooting) Mode.....	8-18
	8-64 Power Supply .....	8-18
	8-66 Circuit Theory (Principles of Operation).....	8-18
	8-68 Purpose of 5004A .....	8-18
	8-70 Schematic Diagram.....	8-18
	8-72 Gating Signals Pod .....	8-18
	8-74 Edge Selection.....	8-18
	8-76 ECL-to-TTL Level Converters .....	8-19
	8-78 Gate Control.....	8-19
	8-80 State Diagram .....	8-19
	8-82 Data Signal Flow.....	8-19
	8-86 Pseudo-Random Word Generator (Data Signal Path Continued) .....	8-20

**Model 5004A  
Table of Contents**

**TABLE OF CONTENTS**

<b>Section</b>	<b>Title</b>	<b>Page</b>
8-88	Display Control (Data Signal Path Continued).....	8-21
8-90	Signature Comparator (UNSTABLE Signature Lamp).....	8-21
8-92	Scan/Test Oscillator.....	8-21
8-94	Display Scan.....	8-21
8-98	NORMAL/SERVICE Test Switch.....	8-21
8-100	Input Signal Timing.....	8-21

**APPENDICES**

		<b>Page</b>
APPENDIX A	References.....	A-1
APPENDIX B	Components of End Item List	
Section	I. Introduction.....	B-1
	II. Integral Components of End Item.....	B-2
	III. Basic Issue Items.....	B-2
APPENDIX C	Additional Authorization List.....	C-1
APPENDIX D	Maintenance Allocation	
Section	I. Introduction.....	D-1
	II. Maintenance Allocation Chart.....	D-3
	III. Tools and Test Equipment Requirements.....	D-4
APPENDIX E	Manual Backdating Changes.....	E-1

**LIST OF TABLES**

<b>Table</b>	<b>Title</b>	<b>Page</b>
1-1	Specifications.....	1-2
1-2	Recommended Test Equipment.....	1-3
4-1	Test Equipment Required.....	4-1
4-2	Performance Test Record.....	4-5a
6-1	Replaceable Parts.....	6-5
6-2	Manufacturers Code List.....	6-9
8-1	Troubleshooting Signatures Major Test Points.....	8-11
8-2	SELF-TEST and NORMAL/SERVICE Signatures.....	8-13

**LIST OF FIGURES**

<b>Figure</b>	<b>Title</b>	<b>Page</b>
1-1	Model 5004A Signature Analyzer.....	1-0
2-1	Power Cable HP Part Numbers Versus Mains Plugs Available.....	2-2
3-1	Front Panel, Probe, and Pod Features.....	3-2
3-2	Operator Self-Test.....	3-4
3-3	Operating Instructions.....	3-6
3-4	Typical Connections of 5004A to Device Under Test.....	3-8
3-5	Probe, Pod, and Power Cable Storage.....	3-9

**Model 5004A  
Table of Contents**

**LIST OF FIGURES**

<b>Figure</b>	<b>Title</b>	<b>Page</b>
4-1	Logic Level Performance Test Setup .....	4-2
4-2	Positive Pulse Performance Test Setup .....	4-2
4-3	Negative Pulse Performance Test Setup .....	4-3
5-1	Data Probe $V_{CC}$ -- $V_{ref}$ Graph .....	5-2
5-2	Fuse and Line Voltage Selection .....	5-3
6-1	Mechanical Parts.....	6-10
8-1	Troubleshooting Flowchart.....	8-11
8-2	Heat Sink Screws Locations .....	8-14
8-3	5004A Circuit Block Diagram .....	8-17
8-4	Gate Control State Diagram.....	8-20
8-5	Input Signals Timing.....	8-21
8-6	Schematic Diagram Notes .....	8-22
8-7	Probe and Pod (A3 and A4) Component Locations.....	8-24
8-8	Display Board and Main Board (A1) Component Location .....	8-25
8-9	Schematic Diagram.....	8-27

**SAFETY CONSIDERATIONS**

**GENERAL**

This is a Safety Class I instrument. This instrument has been designed and tested according to IEC Publication 348, "Safety Requirements for Electronic Measuring Apparatus."

**OPERATION**

BEFORE APPLYING POWER verify that the power transformer primary is matched to the available line voltage and the correct fuse is installed (see Section II). Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuseholders must be avoided.

**SERVICE**

Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition. Service and adjustments should be performed only by qualified service personnel. Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

**Model 5004A  
Safety Considerations**

**WARNING**

**IF THIS INSTRUMENT IS TO BE ENERGIZED VIA AN AUTOTRANSFORMER (FOR VOLTAGE REDUCTION) MAKE SURE THE COMMON TERMINAL IS CONNECTED TO THE EARTHED POLE OF THE POWER SOURCE.**

**WARNING**

**BEFORE SWITCHING ON THE INSTRUMENT, THE PROTECTIVE EARTH TERMINALS OF THE INSTRUMENT MUST BE CONNECTED TO THE PROTECTIVE CONDUCTOR OF THE (MAINS) POWER CORD. THE MAINS PLUG SHALL ONLY BE INSERTED IN A SOCKET OUTLET PROVIDED WITH A PROTECTIVE EARTH CONTACT. THE PROTECTIVE ACTION MUST NOT BE NEGATED BY THE USE OF AN EXTENSION CORD (POWER CABLE) WITHOUT A PROTECTIVE CONDUCTOR (GROUNDING).**

**WARNING**

**THE SERVICE INFORMATION FOUND IN THIS MANUAL IS OFTEN USED WITH POWER SUPPLIED AND PROTECTIVE COVERS REMOVED FROM THE INSTRUMENT. ENERGY AVAILABLE AT MANY POINTS MAY, IF CONTACTED, RESULT IN PERSONAL INJURY.**

**CAUTION**

**BEFORE SWITCHING ON THIS INSTRUMENT:**

- 1. MAKE SURE THE INSTRUMENT IS SET TO THE VOLTAGE OF THE POWER SOURCE.**
- 2. ENSURE THAT ALL DEVICES CONNECTED TO THIS INSTRUMENT ARE CONNECTED TO THE PROTECTIVE (EARTH) GROUND.**
- 3. ENSURE THAT THE LINE POWER (MAINS) PLUG IS CONNECTED TO A THREE-CONDUCTOR LINE POWER OUTLET THAT HAS A PROTECTIVE (EARTH) GROUND. (GROUNDING ONE CONDUCTOR OF A TWO-CONDUCTOR OUTLET IS NOT SUFFICIENT.)**
- 4. MAKE SURE THAT ONLY FUSES WITH THE REQUIRED RATED CURRENT AND OF THE SPECIFIED TYPE (NORMAL BLOW, TIME DELAY, ETC.) ARE USED FOR REPLACEMENT. THE USE OF REPAIRED FUSES AND THE SHORT-CIRCUITING OF FUSE HOLDERS MUST BE AVOIDED.**



## SECTION 0 INTRODUCTION

### 0-1. SCOPE

a. This manual describes Signature Analyzer TS-3791/U (fig. 1-1) and provides maintenance instructions. Throughout this manual, TS-3791/U is referred to as the Hewlett Packard (HP) Model 5004A Signature Analyzer.

### 0-2. INDEXES OF PUBLICATIONS.

a. *DA Pam 3104.* Refer to the latest issue of DA Pam 310-4 to determine whether there are new editions, changes, or additional publications pertaining to the equipment.

b. *DA Pam 310-7.* Refer to DA Pam 310-7 to determine whether there are modification work orders (MWO's) pertaining to the equipment.

### 0-3. FORMS AND RECORDS.

a. *Reports of Maintenance and Unsatisfactory Equipment.* Maintenance forms, records, and reports which are to be used by maintenance personnel at all maintenance levels are listed in and prescribed by TM 38-750.

b. *Report of Packaging and Handling Deficiencies.* Fill out and forward DD Form 6 (Packaging Improvement Report) as prescribed in AR 70058/NAVSUPINST 4030.29/AFR 71-13/MCO P4030.29A and DLAR 4145.8.

c. *Discrepancy in Shipment Report (DISREP) (SF 361).* Fill out and forward Discrepancy in Shipment

Report (DISREP) (SF 361) as prescribed in AR 55-38/NAVSUPINST 4610.33B/AFR 7518/MCO P4610.19C and DLAR 4500.15.

### 0-4. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR).


EIR's will be prepared using SF 368 (Quality Deficiency Report). Instructions for preparing EIR's are provided in TM 38-750, the Army Maintenance Management System. EIR's should be mailed direct to Commander, US Army Communication and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703. A reply will be furnished direct to you.

### 0-5. ADMINISTRATIVE STORAGE.

Administrative storage of equipment issued to and used by Army activities shall be in accordance with TM 740-90-1 and paragraph 2-8.

### 0-6. DESTRUCTION OF ARMY ELECTRONICS MATERIEL.

Destruction of Army electronics materiel to prevent enemy use shall be in accordance with TM 750-244-2.

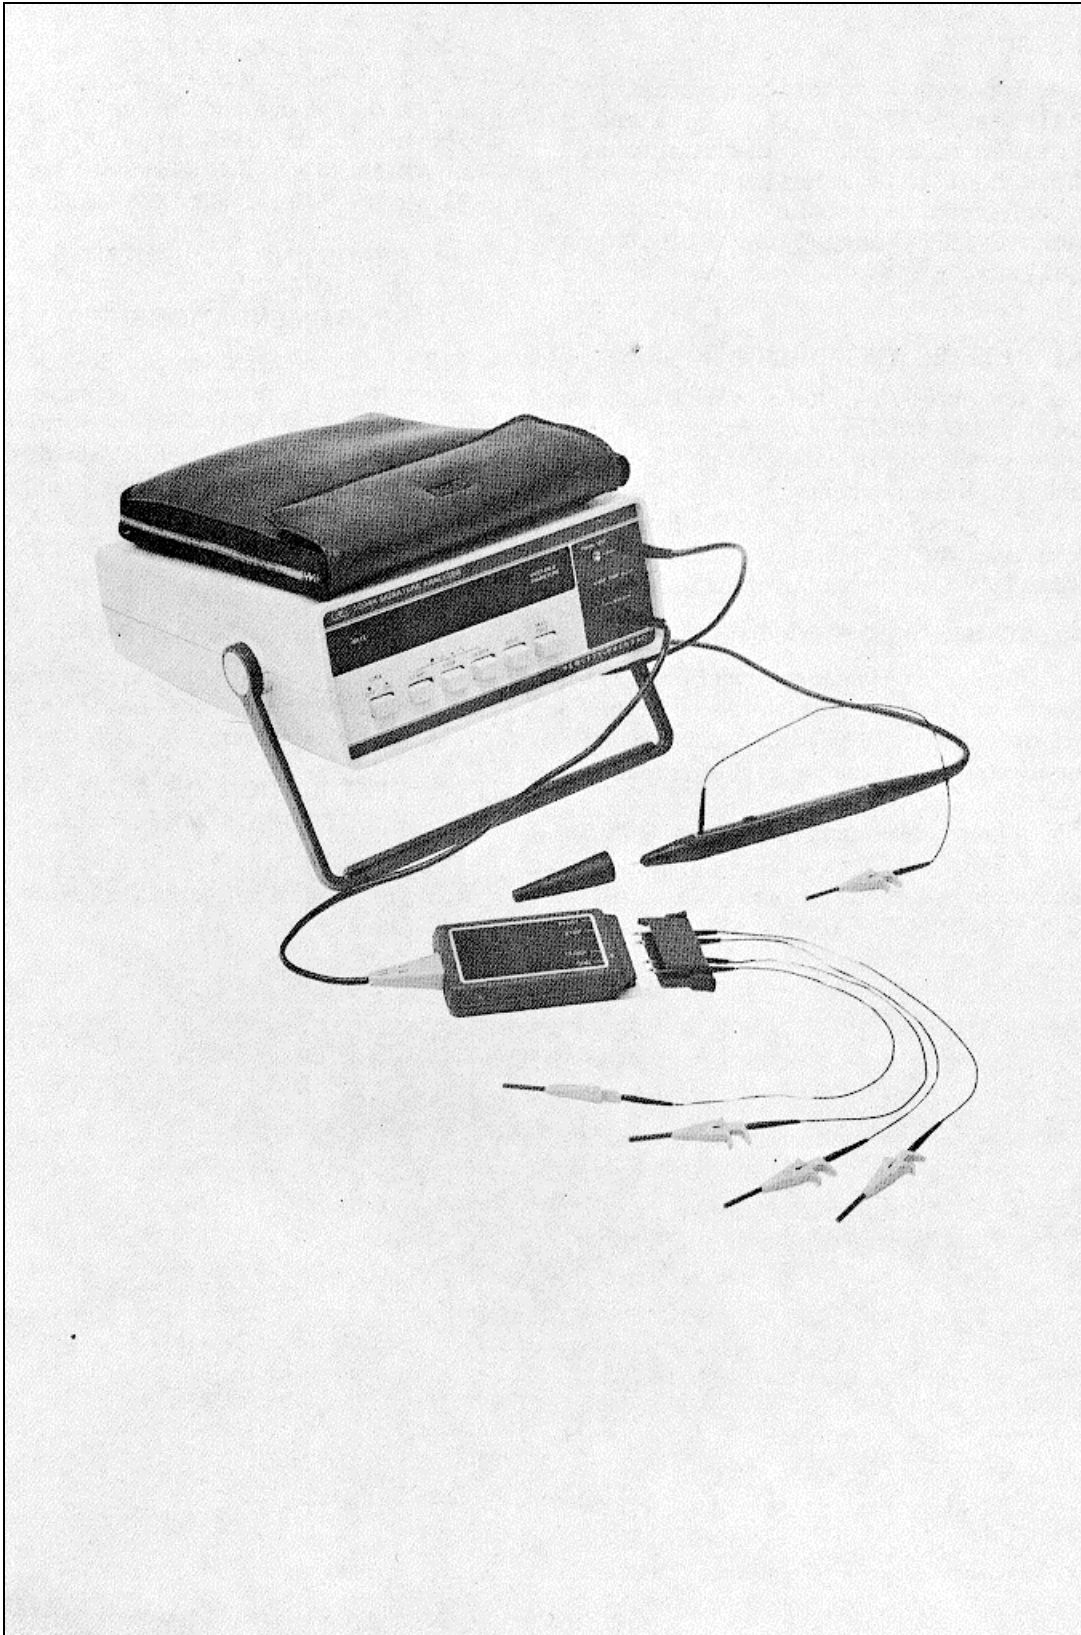

*Figure 1-1. Model 5004A Signature Analyzer*

## SECTION I GENERAL INFORMATION

### 1-1. INTRODUCTION

1-2. This operating and service manual contains information needed to operate, test, and service the Hewlett-Packard Model 5004A Signature Analyzer. Figure 1-1 shows the 5004A.

### 1-3. SAFETY CONSIDERATIONS

1-4. The 5004A Signature Analyzer is a Safety Class I instrument. This instrument has been designed according to international safety standards.

1-5. This operating and service manual contains information, cautions, and warnings which must be followed by the user to ensure safe operation and keep the instrument in safe condition.

### 1-6. OPTIONS (LINE VOLTAGES)

1-7. Options for the 5004A are the four possible line voltage settings for the instrument. (Any 5004A may be set for any of the four line voltages, but the cabinet must be opened to change the line voltage setting.) The four option numbers are the same as the corresponding line voltages: 100, 120, 220, and 240, (e.g., Option 120 is for 120 Volt line supply). The procedure to change the line voltage setting is given in Section V.

### 1-8. INSTRUMENTS COVERED BY MANUAL

1-9. Attached to the instrument is a serial number plate. The serial number is in the form: 0000A00000. It is in two parts; the first four digits and the letter are the serial prefix and the last five digits are the suffix. The prefix is the same for all identical instruments; it changes only when a change is made to the instrument. The suffix however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the serial number prefix(es) listed under SERIAL NUMBERS on the title page.

1-10. An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates the instrument is different from those described in this manual. The manual for this newer instrument is accompanied by a yellow Manual Changes supplement. This supplement contains "change information" that explains how to adapt the manual to the newer instrument.

1-11. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified with the manual print date and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-12. For information concerning a serial number prefix that is not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

### 1-13. SPECIFICATIONS

1-14. Overall specifications for the 5004A are given in Table 1-1.

Table 1-1. Specifications

**DISPLAY:**

**Signature:** Four-digit hexadecimal. Characters 0,1,2,3,4,5,6,7,8,9,A,C,F,H,P,U.

**GATE, UNSTABLE SIGNATURE indicators:** Panel Lights. Stretching: 100 milliseconds.

**Probe-tip indicator:** Light indicates high, low, bad-level, and pulsing states.

Minimum pulse width: 10 nanoseconds. Stretching: 50 milliseconds.

**PROBABILITY OF CLASSIFYING CORRECT DATA STREAM AS CORRECT:** 100%.

**PROBABILITY OF CLASSIFYING FAULTY DATA STREAM AS FAULTY:** 99.998%.

**MINIMUM GATE LENGTH:** One clock cycle.

**MINIMUM TIMING BETWEEN GATES (from last STOP to next START):** One clock cycle.

**DATA PROBE:**

**Input Impedance:** 50 K $\Omega$  to 1.4 Volt, nominal. Shunted by 7 pF, nominal.

**Threshold:** Logic one: 2.0 Volt  $\pm$ .2 -.3. Logic zero: .8 Volt,  $\pm$ .3 -.2.

**Setup Time:** 15 nanoseconds, with .2 volt over-drive. (Data required to be valid at least 15 nanoseconds before selected clock edge.)

**Hold Time:** 0 nanoseconds. (Data required to be held until occurrence of selected clock edge.)

**GATING INPUT LINES:**

**START, STOP, CLOCK inputs:** Input Impedance: 50  $\Omega$  to 1.4 volt, nominal. Shunted by 7 pF, nominal. Threshold: 1.4 volt  $\pm$ .6 (.1 volt hysteresis, typical).

**START, STOP inputs:**

**Setup Time:** 25 nanoseconds. (START, STOP to be valid at least 25 nanoseconds before selected clock edge.)

**Hold Time:** Zero nanoseconds (START, STOP to be held until occurrence of selected clock edge).

**CLOCK INPUT:**

**Maximum clock frequency:** 10 MHz.

**Minimum Clock Time in High or Low State:** 50 nanoseconds.

**VOLTAGE OVERLOAD PROTECTION:** All inputs  $\pm$  150 volts continuous.  
 $\pm$  250 volts intermittent.  
250 volts ac for 1 minute.

**OPERATING ENVIRONMENT:**

**Temperature:** 0-55°C.

**Relative Humidity:** 95% at 40°C.

**Altitude:** 4,600M.

**POWER REQUIREMENTS:**

**Option 100:** 100V ac line, +5%, -10%, 48-440 Hz

**Option 120:** 120V ac line, +5%, -10%, 48-440 Hz

**Option 220:** 220V ac line, +5%, -10%, 48-66 Hz

**Option 240:** 240V ac line, +5%, -10%, 48-66 Hz

**WEIGHT:** Net: 2.5 kg, 5.5 lbs. Shipping: 7.7 kg, 17 lbs.

**DIMENSIONS:**

90 mm high x 215 mm wide x 300 mm deep (3 1/2 in. x 5 1/2 in. x 12 in.)

Dimensions exclude tilt bale, probes, and pouch.

**1-15. DESCRIPTION OF 5004A SIGNATURE ANALYZER**

1-16. The HP Model 5004A Signature Analyzer is a test instrument for troubleshooting complex electronic logic circuits. It uses the signature analysis technique of troubleshooting.

**1-17. Signature Analysis**

1-18. Signature analysis is a method of troubleshooting complex electronic logic circuits to the individual component level. To use signature analysis with the 5004A, the unit to be tested must have certain characteristics included with the original design.

Typically a logic product intended for signature analysis troubleshooting will have a programmed controller and a stored short test program that can exercise most of the unit. Usually the test program is started by a "self-test" mode of the instrument. With the test program running, the 5004A (connected to the unit being tested) will display a unique hexadecimal signature for each signature analysis test point in the unit being tested. The 5004A requires four signals from the unit being tested: Clock, Start, Data, and Stop. The CLOCK signal synchronizes the two instruments. The exactly repetitive START and STOP signals define a window during which the DATA signal is being received by the 5004A. After the STOP signal the 5004A displays the unique hexadecimal signature of the data received.

**1-19. ACCESSORIES SUPPLIED**

- 1-20.** The accessories supplied with the 5004A are shown in Figure 1-1.
- a. Depending on the customer's location, the line power cable may be supplied with one of four line (mains) connectors. Refer to the "Power Cable" paragraph in Section II.
  - b. Five detachable "grabber" test connectors are supplied with the 5004A. Refer to Section III for a description and use.
  - c. One ground wire for the data probe is supplied with the 5004A.

**1-21. RECOMMENDED TEST EQUIPMENT**

**1-22.** Table 1-2 lists recommended test equipment to test, maintain, and troubleshoot the 5004A.

*Table 1-2. Recommended Test Equipment*

<b>INSTRUMENT</b>	<b>CRITICAL SPECS</b>	<b>RECOMMENDED HP MODEL</b>
Pulse Generator	5 ns-100 ns delay	8007B
Pulse Generator	10 MHz, 5 volts pulse	8013B
Oscilloscope with dual-trace vertical amp.	100 MHz	18X, 1805A/1825A
Power Supply	5 volts	6111A
Digital Voltmeter	10 volts	3476A
Resistor	1000Ω 5% 1/4W	0683-1025
Resistor	50Ω 5% 2W	0698-3311
Capacitor	0.1 μF +20% 25V	0170-0022
Capacitor	10 μF +75 -10% 25V	0180-0059
Logic Probe	TTL compatibility	545A
Logic Pulser	TTL compatibility	546A
Logic Current Tracer	1 ma-1 A Range	547A

## SECTION II INSTALLATION

### 2-1. INTRODUCTION

2-2. This section provides information for inspection, installation, and preparation for use of the 5004A Signature Analyzer.

### 2-3. INITIAL INSPECTION

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1; procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the 5004A does not pass the performance tests, notify the nearest Hewlett-Packard office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for carrier's inspection. The HP office will arrange for repair or replacement at HP option without waiting for claim settlement.

### 2-5. PREPARATION FOR USE

#### 2-6. Power Requirements

2-7. The 5004A requires a power source as shown in Section I, Specifications.

#### 2-8. Line Voltage Selection

2-9. Changing the 5004A power source voltage setting requires the 5004A cabinet to be opened. Instructions for changing the line voltage setting are given in Section V.

#### 2-10. Line Voltage Label

2-11. The original line voltage setting for each 5004A as manufactured is printed on a label on the back panel of each 5004A. Check this label and compare the voltage (100, 120, 220, or 240) with your local line voltage supply. If you do not have the correct line voltage for your 5004A, notify a qualified technician and refer to Section V of this manual.

#### 2-12. Power Cable

2-13. The 5004A is shipped with a three-wire power cable. When the cable is connected to an appropriate ac power source, this cable grounds internal "grounds" in the 5004A and the two exposed screws on the rear panel heat sink. The type of power cable plug shipped with each instrument depends on the country of destination. Refer to Figure 2-1 for the part numbers of the power cable and plug configurations available.

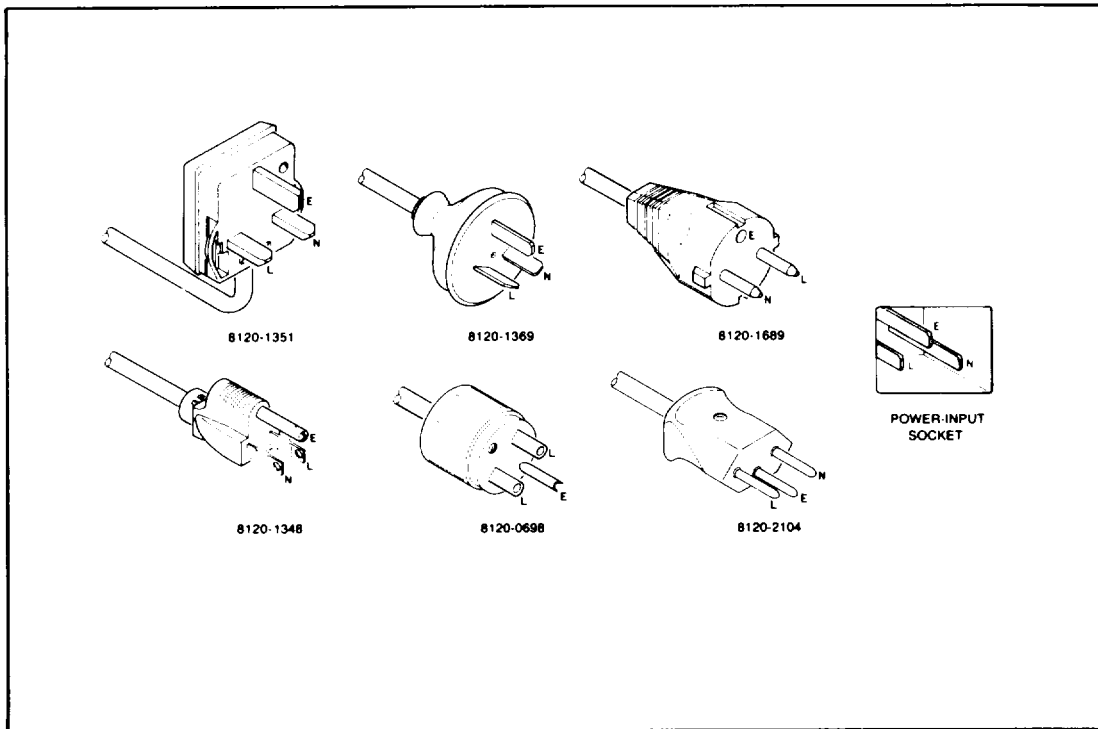


Figure 2-1. Power Cable HP Part Numbers Versus Mains Plugs Available

**WARNING**

**BEFORE SWITCHING ON THIS INSTRUMENT, THE PROTECTIVE EARTH TERMINALS OF THIS INSTRUMENT MUST BE CONNECTED TO THE PROTECTIVE CONDUCTOR OF THE (MAINS) POWER CORD. THE MAINS PLUG SHALL ONLY BE INSERTED IN A SOCKET OUTLET PROVIDED WITH A PROTECTIVE EARTH CONTACT. THE PROTECTIVE ACTION MUST NOT BE NEGATED BY THE USE OF AN EXTENSION CORD (POWER CABLE) WITHOUT A PROTECTIVE CONDUCTOR (GROUNDING).**

**2-14. Operating Environment**

**2-15. TEMPERATURE.** The 5004A may be operated in temperatures from 0°C to +55°C.

**2-16. HUMIDITY.** The 5004A may be operated in environments with humidity up to 95%. However, it should be protected from temperature extremes which cause condensation in the instrument.

**2-17. ALTITUDE.** The 5004A may be operated at altitudes up to 4,600 meters.

## 2-18. STORAGE AND SHIPMENT

### 2-19. Environment

2-20. The instrument may be stored or shipped in environments within the following limits:

Temperature ..... -40°C to +75°C  
Humidity ..... Up to 95%  
Altitude ..... 4,600 meters (15,000 feet)

2-21. The instrument should also be protected from temperature extremes which cause condensation within the instrument.

### 2-22. Packaging

2-23. ORIGINAL PACKAGING. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to ensure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-24. OTHER PACKAGING. The following general instructions should be used for repacking with commercially available materials:

- a. Wrap instrument in heavy paper or plastic. (If shipping to Hewlett-Packard office or service center, attach tag indicating type of service required, return address, model number, and full serial number.)
- b. Use strong shipping container. A double-wall carton made of 350-pound test material is adequate.
- c. Use a layer of shock-absorbing material 70 to 100 mm (3- to 4-inch) thick around all sides of the instrument to provide firm cushioning and prevent movement inside container. Protect control panel with cardboard.
- d. Seal shipping container securely.
- e. Mark shipping container FRAGILE to ensure careful handling.
- f. In any correspondence, refer to instrument by model number and full serial number.



## SECTION III OPERATION

### 3-1. INTRODUCTION


3-2. This section explains the functions of the operating controls, indicators, probe, and test connectors of the 5004A Signature Analyzer. An operator's self-test is given, and the normal operating modes are described.

### 3-3. PANEL FEATURES

3-4. Front panel features of the Signature Analyzer are described in Figure 3-1. This figure contains a detailed description of the controls, connectors, and indicators.

### 3-5. SIGNATURE DISPLAY

3-6. The 5004A Signature Analyzer presents digital signatures with a four-character (symbol) display on its front panel. Each character, which can be any one of 16 symbols, is shown on a 7-segment light-emitting-diode display 10 by 7 millimeters. The 16 possible characters are:

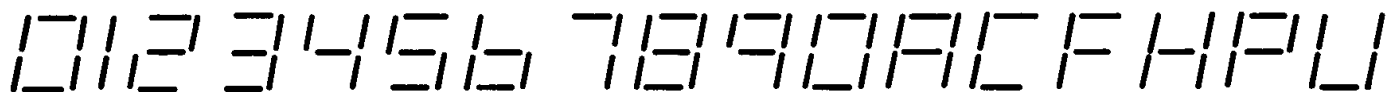

0 1 2 3 4 5 6 7 8 9 0 A C F H U

3-7. The characters presented on the display are a hexadecimal number which is the residue of a count in the 5004A after a START and a STOP signal have been received with some data bits in between.

#### NOTE

No signature appearing on the 5004A display has any particular significance beyond being a correct (expected) signature or an incorrect signature. The number is, however, a count residue in the 5004A converted to and displayed in hexadecimal.

### 3-8. HEXADECIMAL NUMBER SYSTEM SYMBOLS (DIGITS)

3-9. The four-digit front panel display presents numbers in a special set of hexadecimal symbols (see preceding paragraph). Note that the final six symbols are not the common hexadecimal symbols ABCDEF because the seven-segment display of the 5004A can not show a B or D that would be different from an 8 or 0 respectively (and several other symbols could be ambiguous).

### 3-10. TEST TERMINAL GRABBER CONNECTORS

3-11. Five test-terminal grabber-connectors are supplied with the 5004A. The grabbers are push-on pull-off connectors. A grabber can be used on the end of the active test pod test leads to make reliable electrical connections from the 5004A to the instrument being tested. Figure 3-1 shows grabbers connected to the pod test leads. Figure 3-4 shows grabbers connected to a device being tested. The removeable ground (common) test lead for the probe also has a grabber.

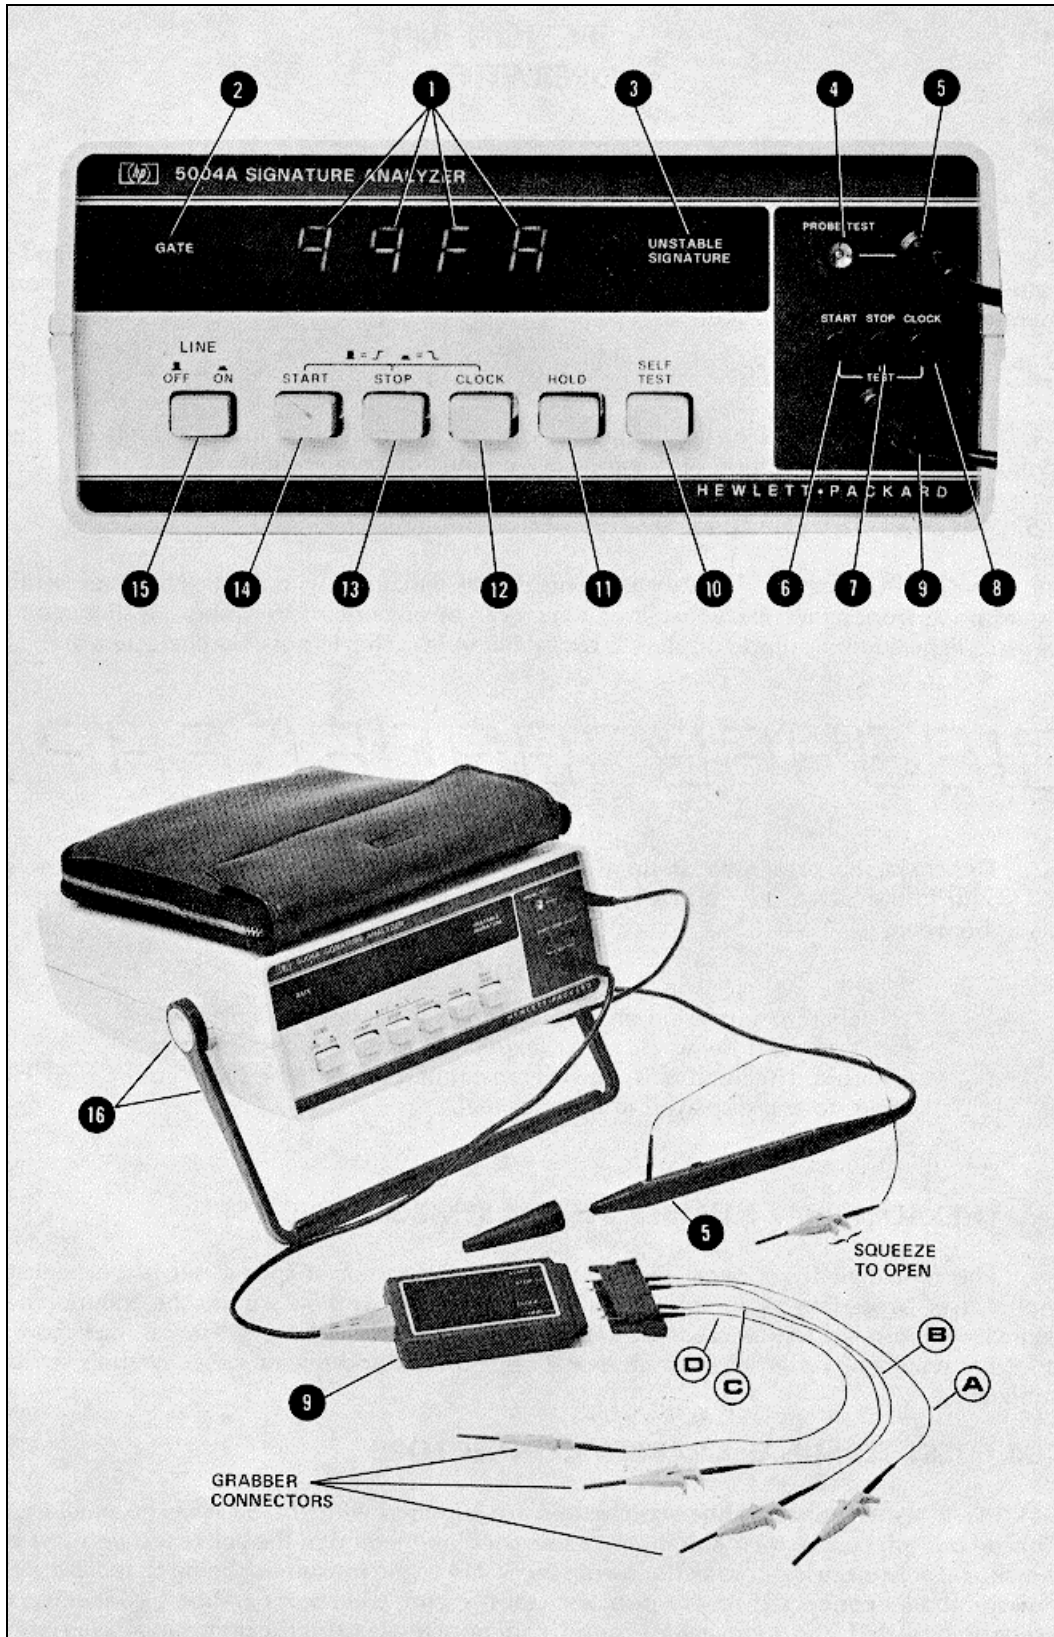


Figure 3-1. Front Panel, Probe, and Pod Features

**FRONT PANEL FEATURES**

- ① **FOUR-DIGIT DISPLAY:** Shows the unique signature stimulated by the input signals.
- ② **GATE Lamp:** Regular blinking of GATE lamp indicates proper START/STOP gating signals.
- ③ **UNSTABLE SIGNATURE Lamp:** Intermittent or occasional blinking of this lamp indicates a difference between successive signatures inputted to the 5004A.
- ④ **PROBE TEST Connector:** Test point for 5004A data probe in SELF-TEST mode.
- ⑤ **DATA PROBE:** Point of entry for data from unit being tested by 5004A. Lamp near probe tip indicates logic level at tip: On Bright = High, On Dim = Bad-level, Off = Low, 10 ns or greater pulses are stretched to 100 ms. Note side ground connector for fast circuits and RESET switch.
- ⑥ **START Test Point:** Test point for the START test connector on the active pod in the SELF-TEST mode.
- ⑦ **STOP Test Point:** Test point for the STOP test connector on the active pod in the SELF-TEST mode.
- ⑧ **CLOCK Test Point:** Test point for the CLOCK test connector on the active pod in the SELF-TEST mode.
- ⑨ **Active Test Pod:** Four test inputs START, STOP, CLOCK, and a common GND (ground) are extended with this active pod for fast rise time signals and low circuit loading.
- Ⓐ **START Test Lead:** Point of entry for START signal from the unit being tested by the 5004A.
- Ⓑ **STOP Test Lead:** Point of entry for STOP signal from the unit being tested by the 5004A.
- Ⓒ **CLOCK Test Lead:** Point of entry for CLOCK signal from the unit being tested by the 5004A.
- Ⓓ **GND Test Lead:** Common (ground) test lead for connection to unit being tested by the 5004A.

**SWITCH NOTE**

The following six switches ⑩, ⑪, ⑫, ⑬, ⑭, and ⑮ are all pushed once to lock in-on and push again to release out-off switches.

- ⑩ **SELF-TEST Switch:** When pushed and locked in, this test puts the 5004A in the SELF-TEST mode. (See SWITCH NOTE above.)
- ⑪ **HOLD Signature Switch:** When pushed and locked in, this switch will hold a single, one-time signature for comparison or recording. (See SWITCH NOTE above.)
- ⑫ ⑬ ⑭ **CLOCK, STOP, and START Switches:** These three switches are set to select either the positive-going (▬ · /) (indicates switch position) transition or the negative-going (▬ = \) (indicates switch position) transition of the respective signals as the active control for that signal. The CLOCK, STOP, and START switches are respectively the active control switches for the CLOCK, STOP, and START test inputs on the active pod. (See the SWITCH NOTE.)
- ⑮ **LINE OFF ON Switch:** (Indicates switch position.) This switch controls application of mains line power to the 5004A. Line power is applied when the switch is pushed and locked in. Line power is disconnected when the switch is out. (See SWITCH NOTE.)
- ⑯ **Handle-Stand:** The combination handle and stand can be rotated by pulling gently at the side pivot points both sides simultaneously and turning the handle to the desired position.

Figure 3-1. Front Panel, Probe, and Pod Features (Continued)

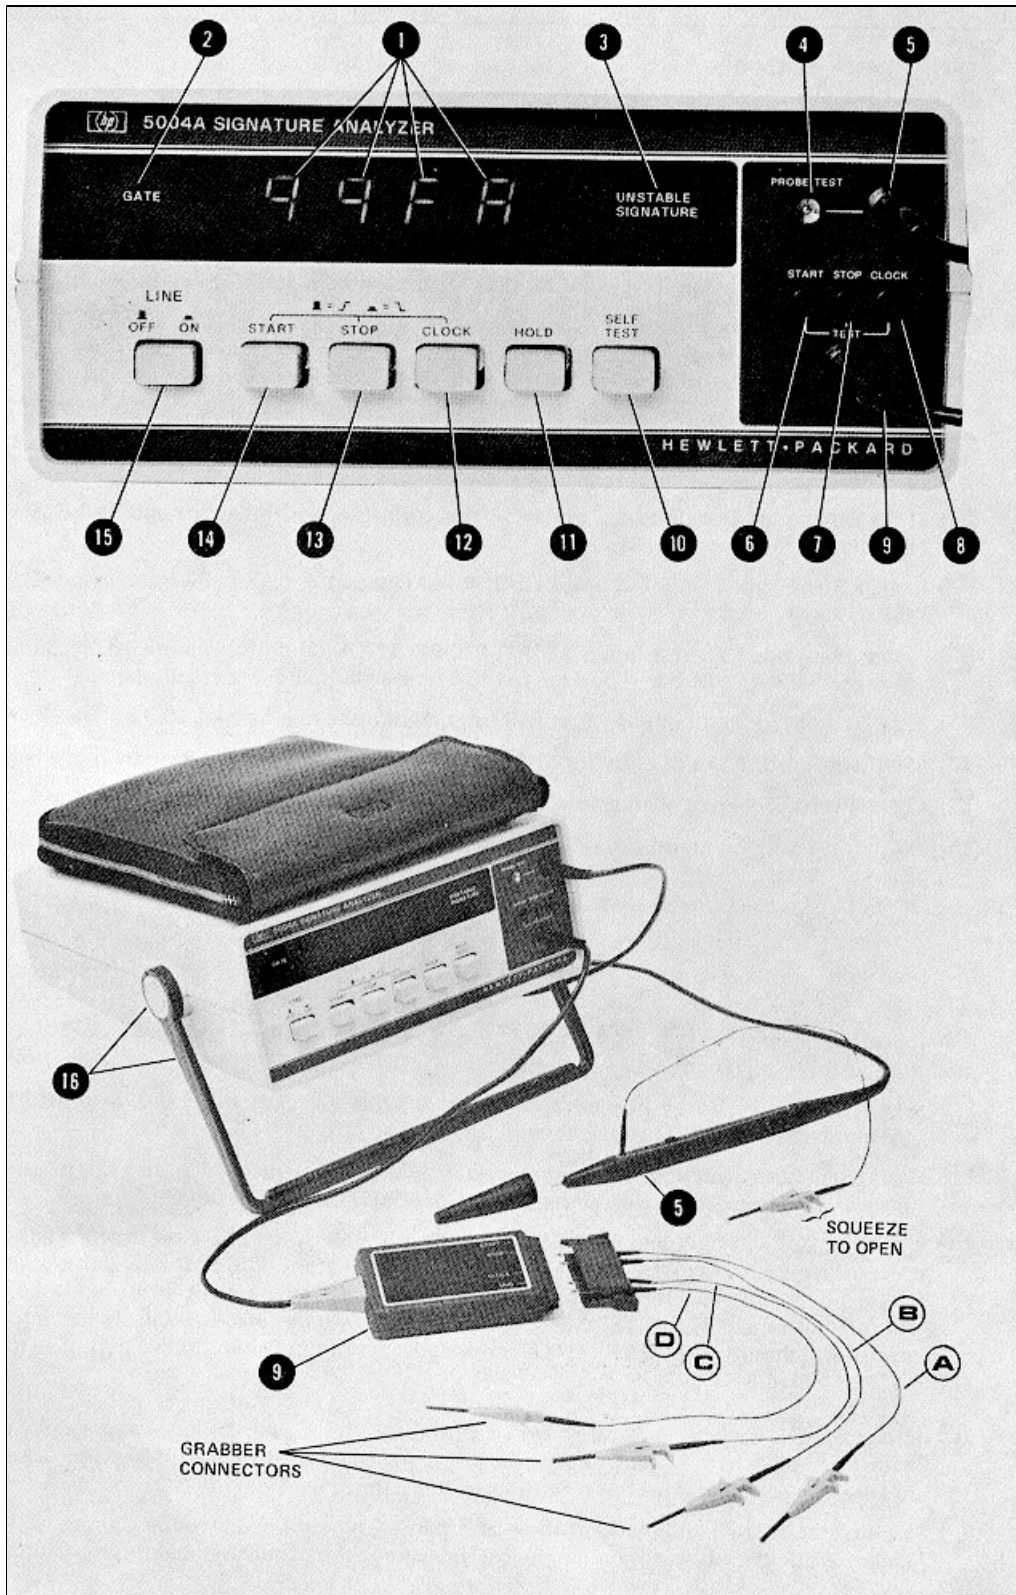


Figure 3-2. Operator Self-Test

**3-12. OPERATOR'S MAINTENANCE**

3-13. There are no operator's maintenance procedures for the 5004A.

**FUSE NOTE**

The 5004A power line fuse is inside the cabinet. If a 5004A seems to NOT operate as if a fuse were blown refer the unit to qualified maintenance personnel.

**3-14. OPERATOR SELF-TEST of 5004A**









3-15. The 5004A Signature Analyzer has a SELF-TEST (front panel switch) mode which can be used to check the condition of the unit thoroughly. Use the procedure in Figure 3-2 to SELF-TEST a 5004A.

1. Before applying power to the 5004A check that the line (mains) voltage available matches the label on the 5004A rear panel.

**CAUTION**

**THE 5004A HAS INTERNALLY-SWITCHABLE OPTIONAL DIFFERENT POWER LINE VOLTAGES. REFER TO SECTION V FOR LINE VOLTAGE CHANGE PROCEDURE.**

2. Remove the grabber connectors from the pod test leads, and connect the pod (START, STOP, and CLOCK) leads to the matching START, STOP, and CLOCK receptacles on the 5004A front panel.
3. Connect the 5004A data probe to the PROBE TEST receptacle on the 5004A front panel. Push the probe tip point gently and firmly into the PROBE TEST receptacle until the point is held securely.
4. Connect the 5004A power cable to the correct power source and set the 5004A front panel as follows for the displays shown:

Switch Settings			Displays			
START	STOP	CLOCK	Four Seven-Segment (See Note)	GATE	UNSTABLE SIGNATURE	PROBE TIP LIGHT
(in) 	(in) 	or  	UP73 then ACA2	flickers	Flickers except when good signature is on	Flickers when "ACA2" is on
(out) 	(out) 	or (out)  (in) 	3951 then 2P61	flickers	Flickers except when good signature is on	Flickers when "2P61" is on

**NOTE**

In SELF-TEST mode the four 7-segment displays first have all seven segments lit dimly, 8 , for about 1-second (tests all segments) and then have one of the signature sets listed above for about 1-second. If the probe RESET switch is pressed during the SELF-TEST mode, the four 7-segment-digit displays will show 0000 (all zeros) except when all segments are dimly lit 8888

**CAUTION**

**THE 5004A HAS INTERNALLY-SWITCHABLE OPTIONAL DIFFERENT POWER LINE VOLTAGES. REFER TO SECTION V FOR LINE VOLTAGE CHANGE PROCEDURE.**

Figure 3-2. Operator Self-Test (Continued)

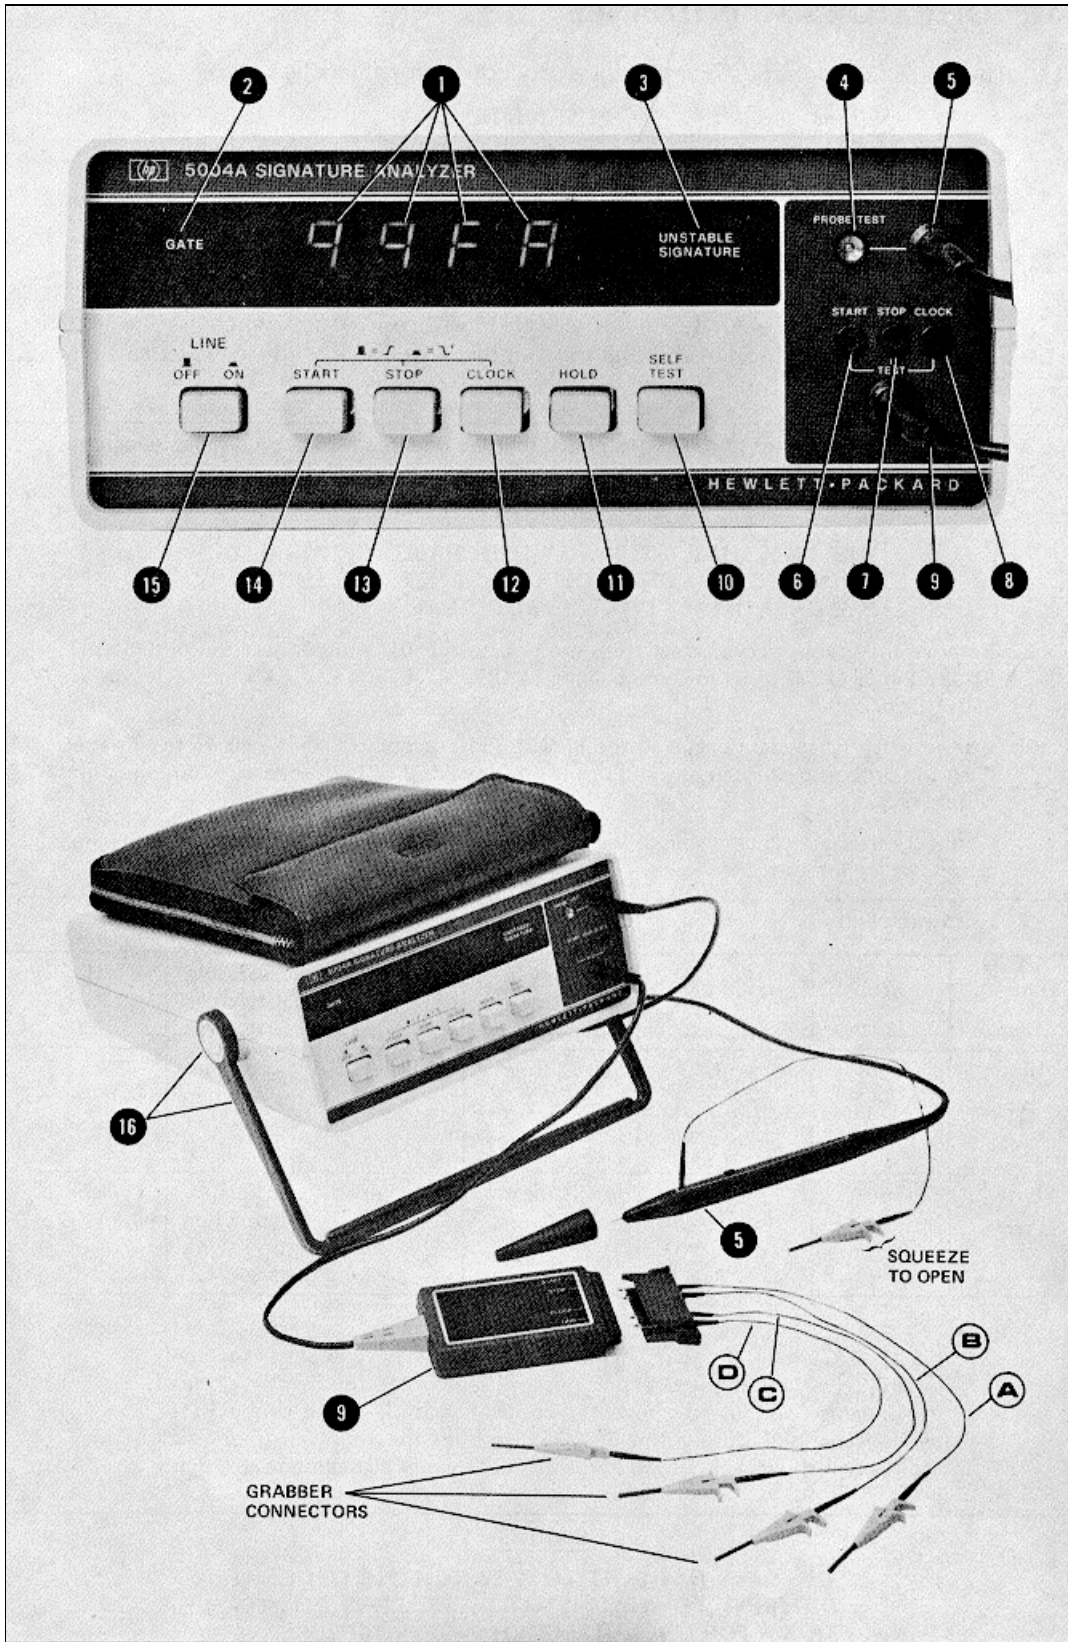


Figure 3-3. Operating Instructions

### 3-16. INSTRUMENTS COMPATIBLE WITH 5004A

3-17. The 5004A is used to check the operation of electronic digital logic instruments with built-in capability to be tested with the signature analysis method. Instruments to be checked by the 5004A must be compatible with the 5004A. Refer to the specifications and other details in Section I of this manual for compatibility information.

### 3-18. OPERATING INSTRUCTIONS


3-19. Figure 3-3 shows operating procedures for the 5004A Signature Analyzer. Refer to the instruction manual of the instrument to be tested for detailed steps for use of the 5004A Signature Analyzer.

**OPERATING INSTRUCTIONS**

1. Before applying power to the 5004A study and learn the information given in *Figure 3-1, Front Panel Features* and perform the Operators Self-Test in *Figure 3-2*.
2. Refer to the instruction manual for the instrument or system to be tested.

**NOTE**

Correct (expected) "signatures" for the device under test (D.U.T.) must be known for proper use of the 5004A. Signatures will usually be in the troubleshooting section of the D.U.T. manual.

3. Connect the 5004A START, STOP, CLOCK, and GND test inputs **9** on the test pod to the specified test points of the D.U.T. (Refer to D.U.T. manual.)
4. Set the 5004A front panel START **14**, STOP **13**, and **12** CLOCK  (edge select) switches as stated in the D.U.T. manual.

**NOTE**

The edge select switches allow flexibility in selection of START and STOP signals. For example, one long pulse can be used for both START and STOP if the rising edge is START and the falling edge is STOP.

**NOTE**

The (11) HOLD and (10) SELF-TEST switch buttons should normally be in the out position.

5. Use the 5004A Data Probe **5** to check the signature nodes of the D.U.T., and compare the signatures found with the signatures given in the D.U.T. manual.

**NOTE**

Especially when slow clock signals are used, the first one or two signatures displayed may be wrong. Two successive identical signatures indicate the signature of that point.

6. If one or more incorrect signatures are found, refer to the troubleshooting procedures in the DUT manual.

**NOTE**

If most or all signatures are incorrect, check the preliminary settings given in the DUT manual.

**NOTE**

Using the HOLD function (HOLD switch **11** in) allows observation of a signature occurring once. (The DATA PROBE **5** RESET switch will erase a HELD signature.)

Figure 3-3. Operating Instructions (Continued)



### 3-20. TYPICAL CONNECTIONS OF 5004A TO DEVICE UNDER TEST

3-21. Figure 3-4 shows the 5004A Signature Analyzer connected to another device to take "signatures"

#### **CAUTION**

The black finned heat sink on the rear of the cabinet is "grounded" (connected) to the power line "earth" terminal.

#### **NOTE**

The bottom of the 5004A is insulating plastic material so it will not cause any electrical short circuits.



Figure 3-4. Typical Connections of 5004A to Device Under Test



### 3-22. PROBE, POD, AND POWER CABLE STORAGE

3-23. Figure 3-5 shows the gating signals pod, data probe, line power cable in the recommended storage positions. The storage case on top of the 5004A should be used to store these components when the 5004A is not in use or is being transported.

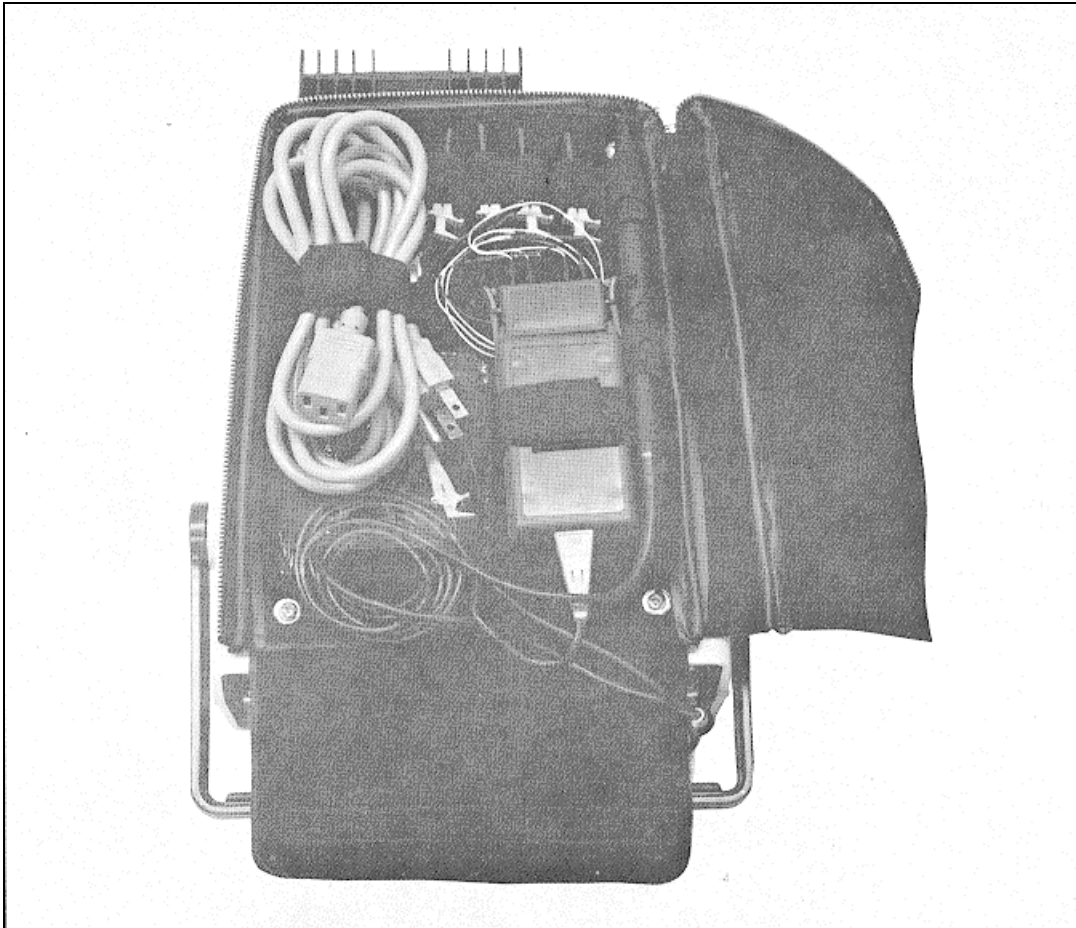


Figure 3-5. Probe, Pod, and Power Cable Storage

### 3-24. TROUBLESHOOTING WITH THE 5004A SIGNATURE ANALYZER

3-25. Digital instruments designed to be serviced with Signature Analysis will have a listing of correct signatures available either in a service manual or in some other form (e.g., a listing of correct signatures and conditions could be printed on an instrument top or bottom cover, or on a card inside the cabinet). Whatever form the list takes the Signature Analyzer can be used in much the same manner as a meter or oscilloscope to trace correct signals.

#### NOTE

**A system with signatures will usually be setup so data paths can be signature checked in "signal tracing" fashion.**

3-26. The traditional "half-split" method of signal tracing can be used with a Signature Analyzer.

## SECTION IV PERFORMANCE TESTS

### 4-1. INTRODUCTION

4-2. The procedures in this section test the instrument's electrical performance using the specifications of Table 1-1 as the performance standards. All tests can be performed without access to the interior of the 5004A. A simpler operational test is included in Section III under Operator's Check.

### 4-3. TEST EQUIPMENT REQUIRED (see Table 4-1)

*Table 4-1. Required Test Equipment*

INSTRUMENT	CRITICAL SPECS	RECOMMENDED HP MODEL
Pulse Generator	5 ns-100 ns delay	8007B
Pulse Generator	10 MHz, 5 volts pulse	8013B
Oscilloscope with dual-trace vertical amp.	100 MHz	182C, 1805A/1825A
Power Supply	5 volts	6111A
Digital Voltmeter	10 volts	3476A
Resistor	1000Ω 5% 1/4W	0683-1025
Resistor	50Ω 5% 2W	0698-3311
Capacitor	0.1 μF ±20% 25V	0170-0022
Capacitor	10 μF +75 -10% 25V	0180-0059

### 4-4. LOGIC LEVEL PERFORMANCE TEST

4-5. With test equipment connected as shown in Figure 4-1, proceed as follows:

- a. Turn power ON on 5004A, all other switches OUT.
- b. Adjust the 6111A Power Supply to 0 volts. Probe indicator light should be off.
- c. Vary the Power Supply until probe indicator just light up dimly. Probe tip voltage should be +0.8V, +0.3V, -0.2V.
- d. Increase power supply voltage until indicator reaches full brilliance. Probe tip voltage should be 2.0V, +0.2V, -0.3V.
- e. Disconnect test equipment.

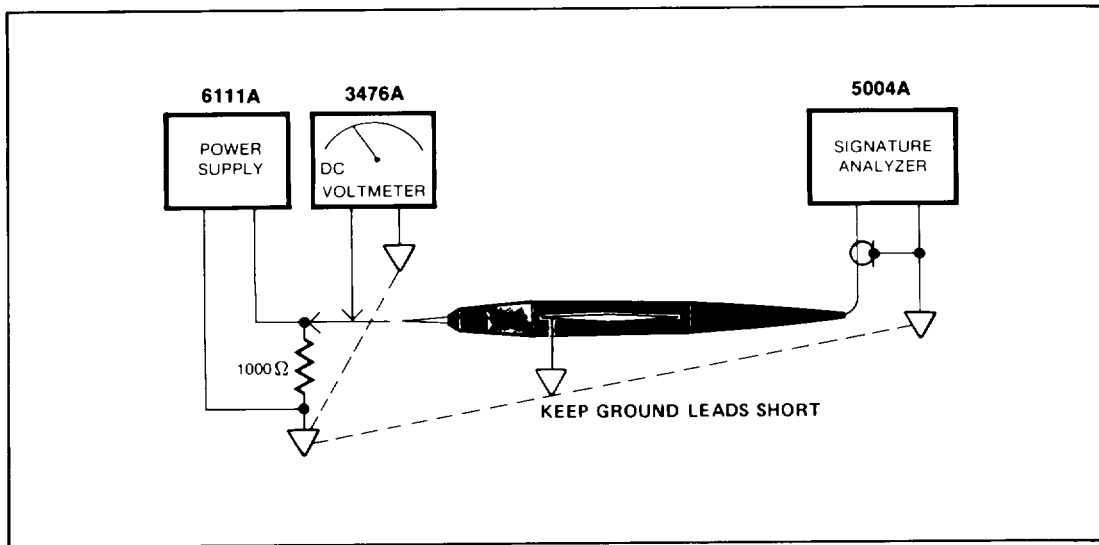


Figure 4-1. Logic Level Performance Test Setup

**4-6. POSITIVE PULSE PERFORMANCE TEST**

4-7. With test equipment connected as in Figure 4-2, proceed as follows:

- a. Set Pulse Generator to output a positive-going 5-volt/10 ns pulse.
- b. Set Pulse Generator repetition rate to approximately one-pulse-per-second. The probe indicator should flash once every second.
- c. Disconnect test equipment.

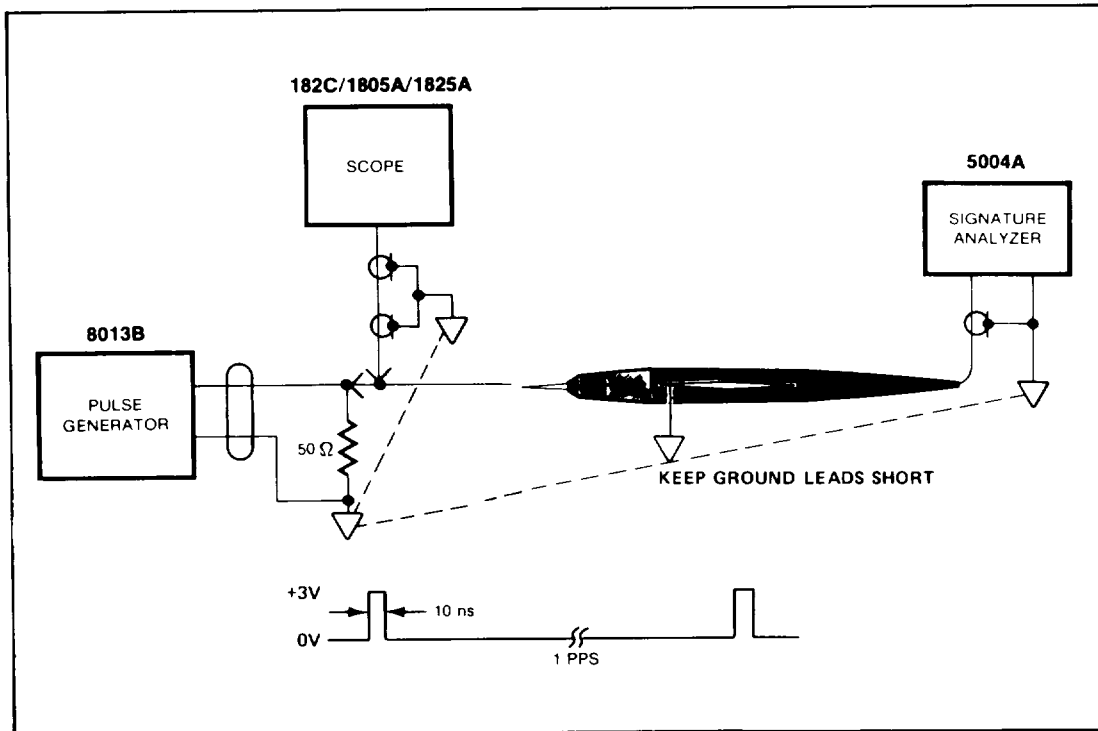


Figure 4-2. Positive Pulse Performance Test Setup

**4-8. NEGATIVE PULSE PERFORMANCE TEST**

- 4-9. With test equipment connected as in Figure 4-3, proceed as follows:
- Set pulse generator to output a negative-going pulse.
  - Adjust pulse generator to give waveform at probe tip as shown in Figure 4-3, with a repetition rate of one-pulse-per-second. Probe indicator should flash off approximately once per second.
  - Disconnect test equipment.

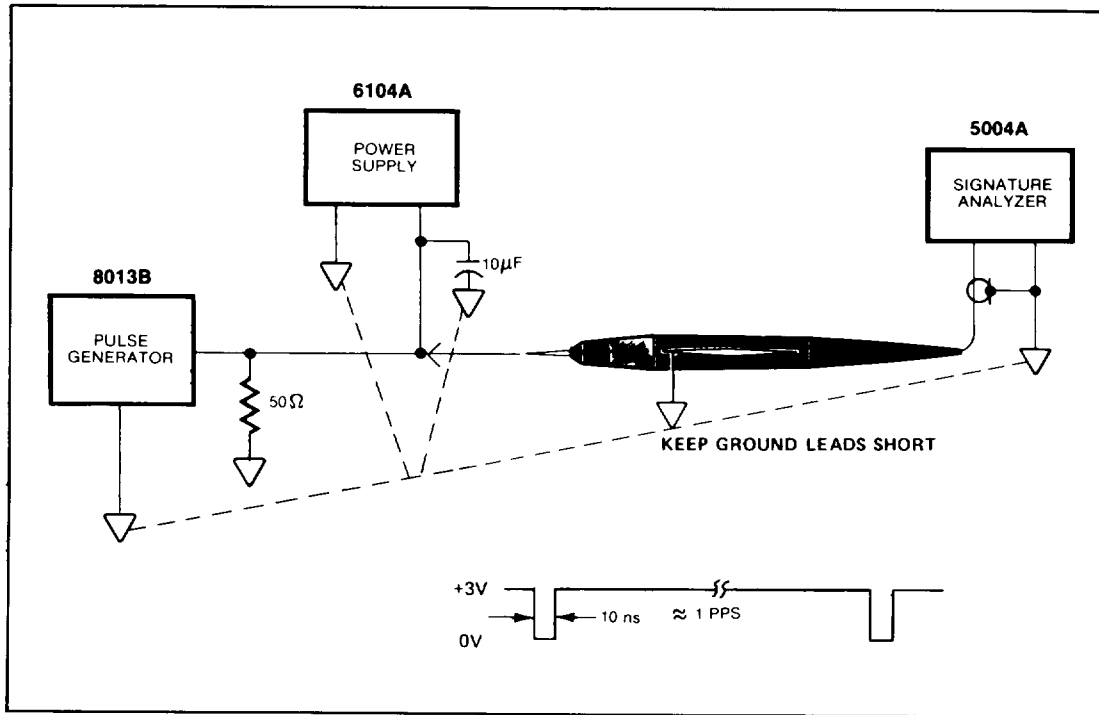


Figure 4-3. Negative Pulse Performance Test Setup

**4-10. DATA PROBE SETUP TIME PERFORMANCE TEST**

- 4-11. Connect the equipment as shown in Figure 4-4. Equipment front panel settings:

**8013B Front Panel Settings:**

Pulse period = 200 ns (5 MHz) in 20 n position  
 Pulse width = square wave  
 Amplitude = 5V.

**NOTE**

Adjust the 8007B pulse width to obtain approximately the same pulse period of 8013B throughout the frequency range.

**8007B Front Panel Settings:**

External Input - Ext. Trigger  
 Pulse delay - 5.0 ns position  
 Pulse width - 5.0 ns position  
 Slope Polarity +  
 Transition time - 2.0 ns Leading edge: Fully CCW. Trailing edge: Fully CCW  
 Symm/Norm/Compl - NORM  
 Amplitude = +5V  
 Output Pulse Polarity +

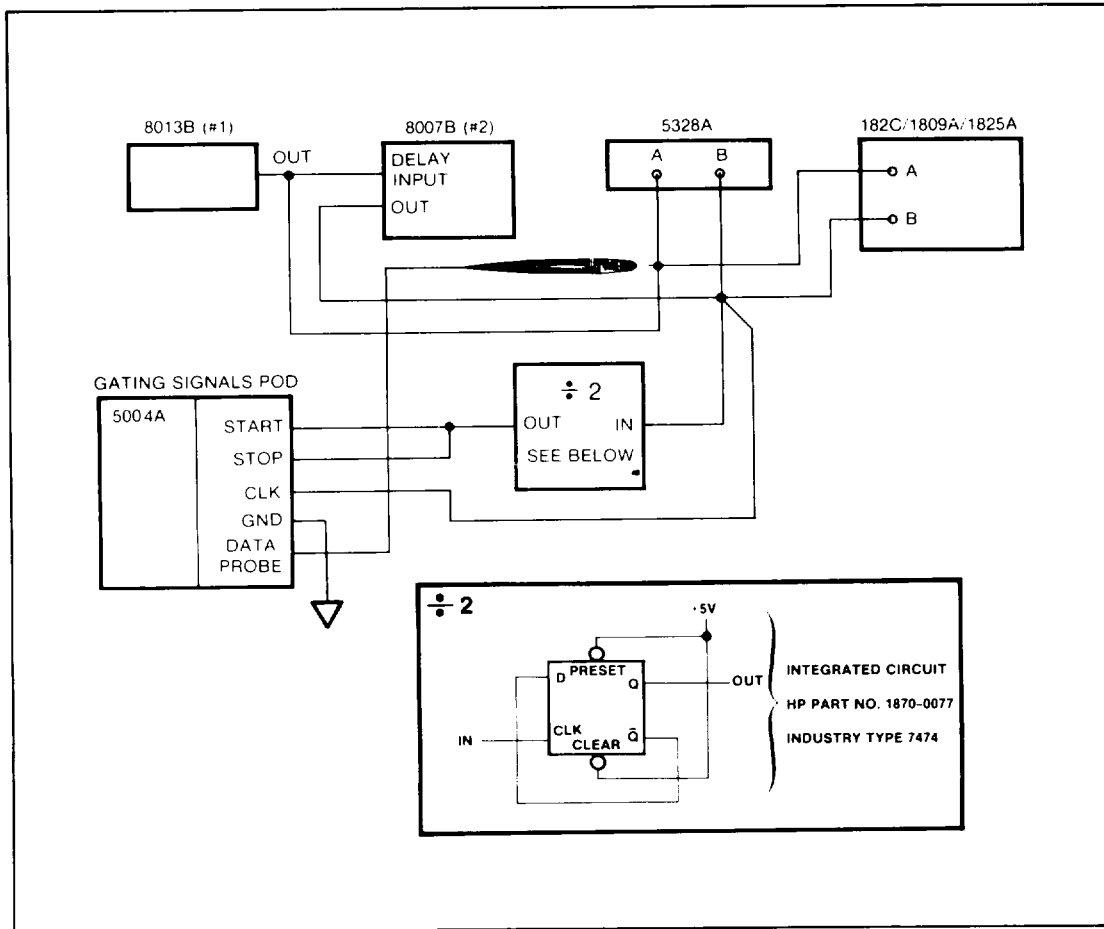


Figure 4-4. Data Probe Setup Time Performance Test

**5328A with Options 040 and 021 Settings:**

- Function switch TI AVG A-B
- Frequency Resolution 106
- Trigger level 1.40 volts
- Slope -
- CH A +
- CH B +
- Attenuator -
- CH A X1, DC Trig.
- CH B X1, DC Trig.
- COM switch - SEP
- Z<sub>IN</sub> - 1 MΩ

**Oscilloscope 182C/1809A/1825A Settings** (the two coax cables must be same length):

- Volt/Div - 2V
- 50 ns/div (positive edge)
- 50Ω termination

**5004A Logic Tracer Settings:**

- START, STOP, CLOCK, HOLD, SELF-TEST buttons OUT
- LINE OFF/ON - ON

## Test Procedure:

1. Adjust the 8007A Pulse Width vernier to approximately midrange.
2. Set the 8007B Pulse Delay vernier to a minimum (CCW). The 5004A Signature Analyzer display should be all zeros (0000).
3. Turn the 8007B Pulse Delay vernier slowly clockwise until the display on the 5004A is 0003; the counter display will be <15 ns.
4. On the 5004A Signature Analyzer, push the START and STOP buttons IN. Repeat steps 2 and 3 above. The counter display will be <15 ns.
5. On 5004A Signature Analyzer, push the START or STOP button IN. Repeat step 2. Turn the 8007B Pulse Delay vernier slowly clockwise until the display on the 5004A is 0001; the counter display will be <15 ns. The display is also indicative of the minimum gate time (one clock pulse between START and STOP signals).
6. Set 5328A Universal Counter FUNCTION switch to FREQ A. Set 5004A Signature Analyzer START and STOP switches OUT ( ).
  - a. On 8013B Pulse Generator change the pulse period to 100 ns. Counter display should read 10 MHz.
  - b. Set 5328A Universal Counter FUNCTION switch to TI AVE A → B.
  - c. On 8007B Pulse Generator change the Pulse Delay and Pulse Width switches to the 5 ns position.
  - d. Repeat steps 2 and 3.
7. Vary the frequency of 8013B Pulse Generator from 1 Hz to 10 MHz. Adjust the 8007B Pulse Width to obtain approximately the same pulse width of 8013B throughout the frequency range. Results should be as in step 3.
8. Disconnect test equipment.

**4-12. DATA PROBE HOLD TIME PERFORMANCE TEST**

4-13. With test equipment connected as in *Figure 4-4*, and settings as in "SETUP TIME PERFORMANCE TEST" proceed as follows:

1. Set the counter's Channel A slope to "-". Set scope's time base to negative edge.
2. Set the 5328A Universal Counter FUNCTION switch to FREQ A position. Set the 8007B Pulse Delay vernier to near midrange; the counter's displays should be 1.00000. The display of the 5004A Signature Analyzer should be 0003. Change 5328A FUNCTION switch to TI AVG A → B. The counter reading should be zero nanoseconds. Turn the Pulse Delay vernier slowly clockwise until the 5004A display reads 0000. The counter will read greater than zero nanosecond, indicating that the data doesn't have to remain valid after the clock pulse occurs.
3. Vary the frequency of 8013B Pulse Generator from 1 Hz to 10 MHz. Adjust the 8007B Pulse Width to obtain approximately the same duty cycle of 8013B throughout the frequency range. Results should be as in step 2.
4. Disconnect test equipment.

**4-14. TEST RECORD**

4-15. *Table 4-2* is a blank performance test record which may be duplicated and used to keep a permanent periodic record of the performance of a 5004A Signature Analyzer.

Table 4-2. Performance Test Record

HEWLETT-PACKARD COMPANY		Date: _____		
MODEL 5004A SIGNATURE ANALYZER		Tested By: _____		
SERIAL NUMBER _____				
Paragraph Number	Test	Min.	Results Actual	Max.
4-4	Logic Level (Data Probe Light)			
	Voltage applied: Light Off	0	_____	0
	Light Dim	+1.6	_____	+1.1
	Light Bright	+1.7	_____	+2.2
4-6	Positive Pulse (Data Probe Light)			
	Light Flashing No Spec No Spec	No Spec	_____	No Spec
4-8	Negative Pulse Performance			
	Light Flashing No Spec No Spec	No Spec	_____	No Spec
4-10	Data Probe Setup Time			
	Step 2	0000	_____	0000
	Step 3	15 ns	_____	<15 ns
	Step 4	15 ns	_____	<15 ns
	Step 5	15 ns	_____	<15 ns
	Step 6a	10 MHz	_____	10 MHz
	Step 6d(2)	0000	_____	0000
	Step 6d(3)	15 ns	_____	<15 ns
Step 7	15 ns	_____	<15 ns	
4-12	Data Probe Hold Time			
	Step 2	0003	_____	0003
		0 ns	_____	0 ns
		0 ns	_____	0 ns
	Step 3 0003	0003	_____	0003
		0 ns	_____	0 ns
		0 ns	_____	0 ns

## SECTION V ADJUSTMENTS

### 5-1. INTRODUCTION

5-2. This section describes adjustments that may be made to the 5004A. Only two adjustable functions exist. The power transformer primary is switchable to allow selection several different line voltages, and the data probe input threshold voltage is adjustable to allow the exactly correct value to be set. The 5004A top cover must be removed to change the power transformer primary (line voltage change). The data probe covers must be removed to set the threshold. Refer to disassembly procedures in Section VIII for cover removal information.

#### NOTE

**The data probe threshold voltage should be checked when any parts are replaced in the data probe or when the power supply +5-volt regulator is replaced.**

### 5-3. DATA PROBE THRESHOLD VOLTAGE CHECK AND ADJUSTMENT

5-4. Use the following procedure to check and adjust the data probe threshold voltage. Refer to the recommended test equipment listed in Section for units necessary in this procedure.

- a. Refer to the disassembly procedures in Section VIII, and remove the data probe covers. Refer to the parts location figure and schematic diagram in Section VIII for other information necessary for this procedure.
- b. Connect the negative test lead of the DVM to the Data Probe U2(1), and connect the positive test lead to U1(7). Record this voltage (Vcc).
- c. Connect the positive test lead to U1(5). Compare this voltage with the Vref voltage corresponding to the Vcc (step b) on Figure 5-1.
- d. If necessary, adjust potentiometer R4 so the Vref voltage corresponds to Vcc voltage taken in step b.

#### NOTE

**Figure 5-1 is a graph relating the U1 pin 5 voltage to U1 pin 7 voltage.**

- e. Repeat steps b, c, and d.
- f. Disconnect the test equipment, and reassemble the data probe covers.

### 5-5. POWER TRANSFORMER PRIMARY LINE VOLTAGE CHANGE PROCEDURE

5-6. Use the following procedure to change the power transformer primary line voltage switches settings.

- a. Refer to the disassembly procedure in Section VIII, and remove the 5004A top cover.

#### WARNING

**DISCONNECT THE LINE POWER CABLE FROM THE 5004A.**



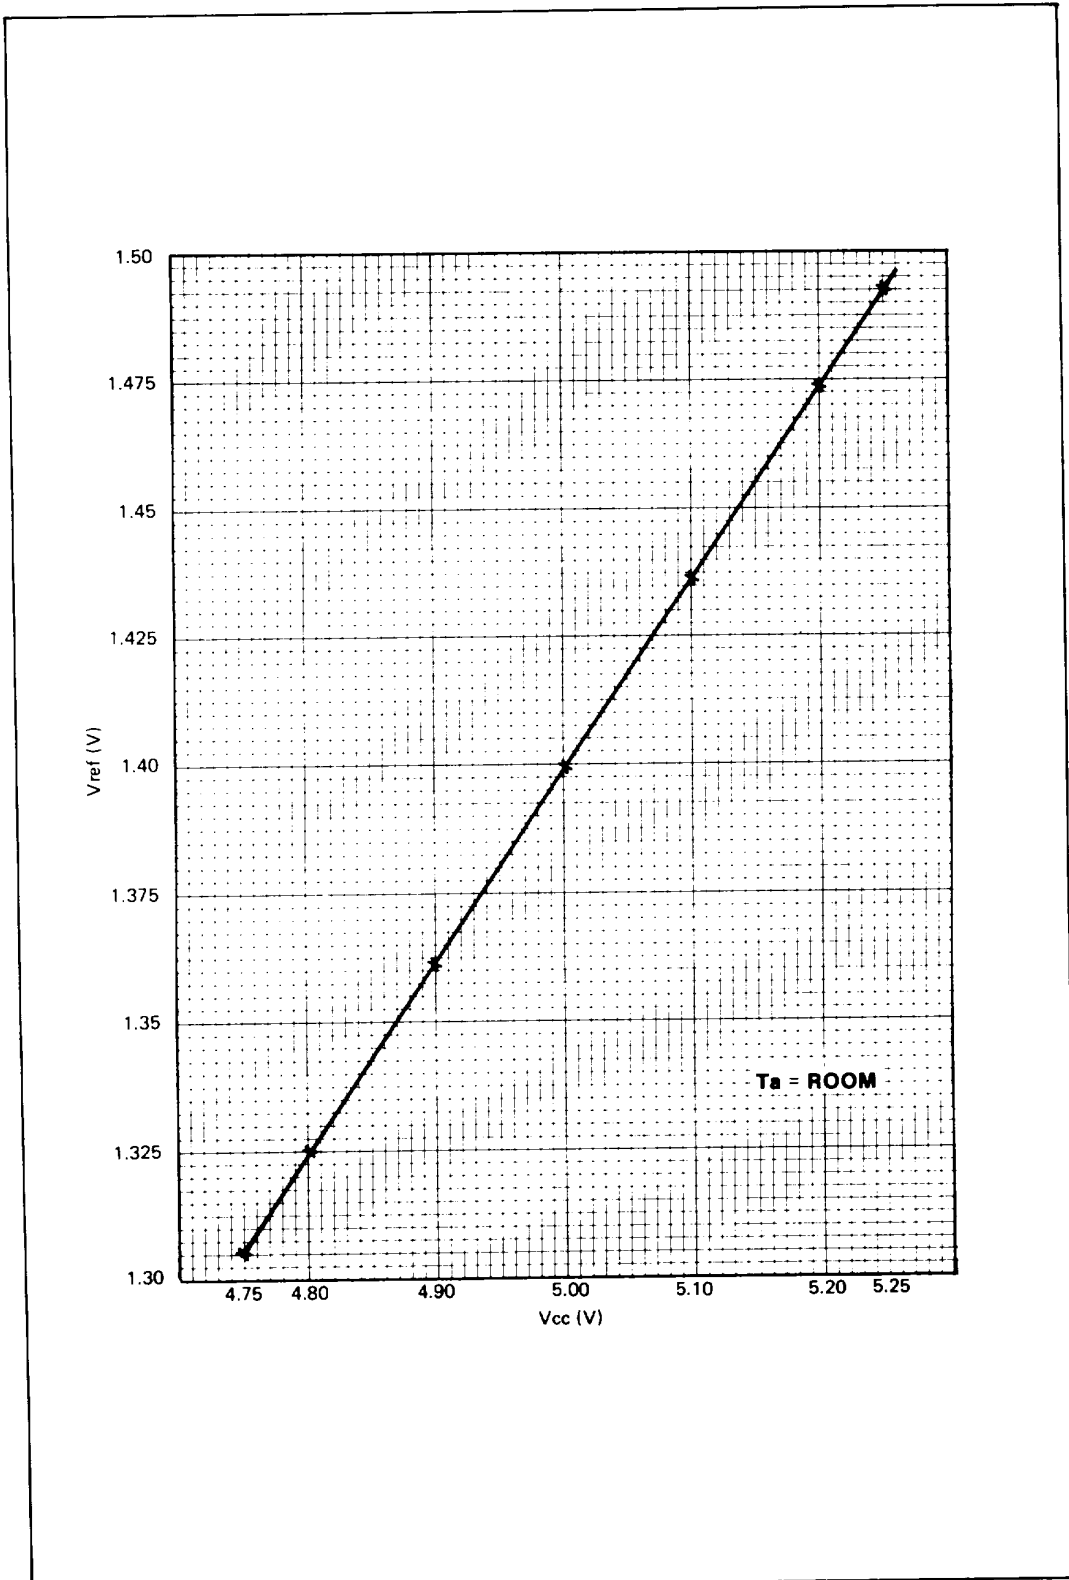


Figure 5-1. Data Probe V<sub>CC</sub>-V<sub>ref</sub> Graph

- b. Refer to Figure 5-2 which shows the line fuse holder and the line voltage selection switches. Both switch indicators must be set to the line voltage selection marks to match the available line voltage.

**NOTE**

The possible line voltage range are listed in Section I, Specifications. Refer to this list to decide where the selection switches should be set.

- c. Set the line voltage switches to appropriate positions for the available line voltage.

**CAUTION**

Check the line fuse, FI. It must correspond to the line voltage selected. Refer to the specifications in Section VI for the correct value fuse.

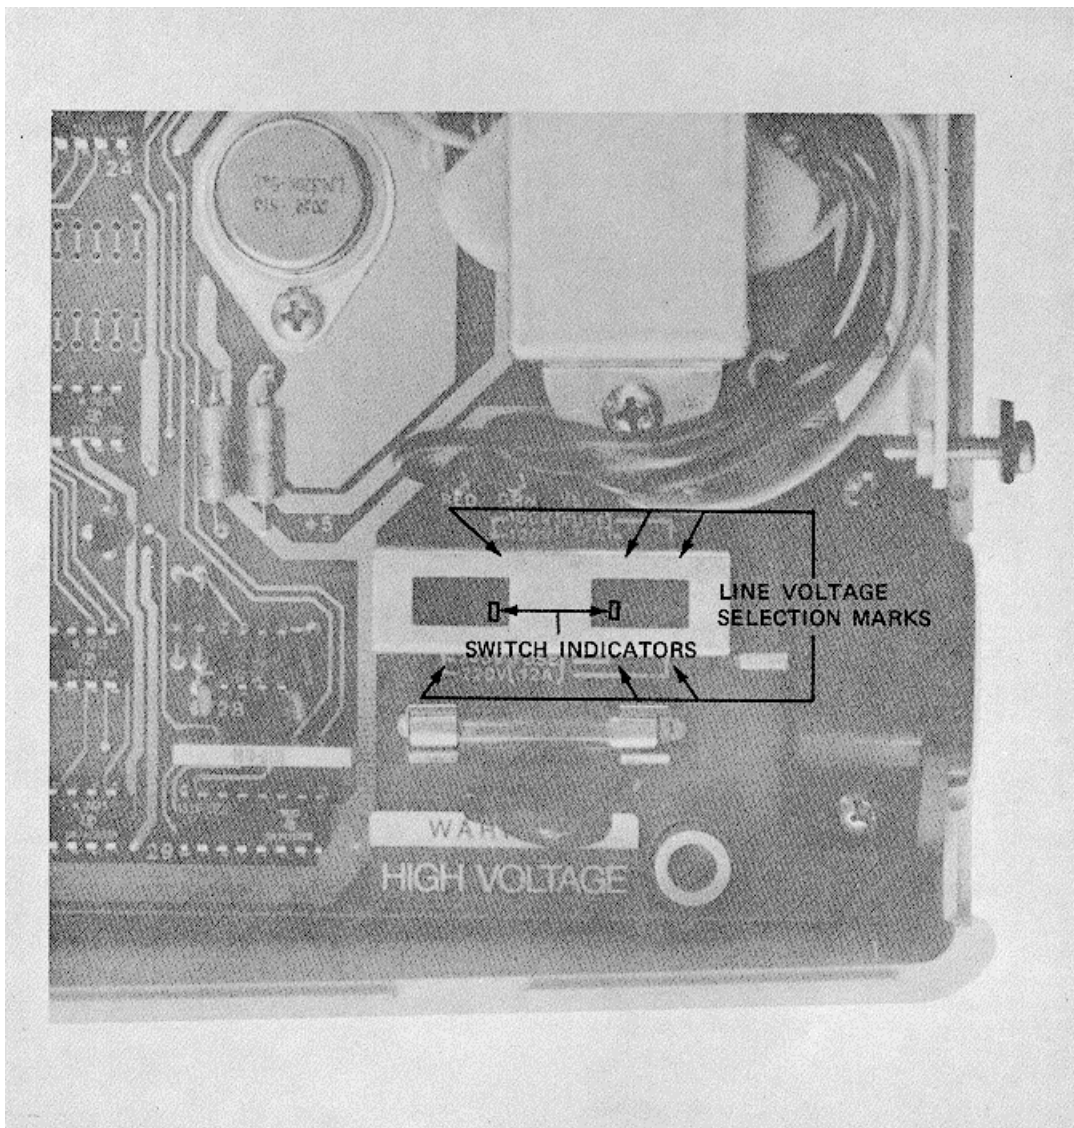


Figure 5-2. Fuse and Line Voltage Selection

SECTION VI  
 REPLACEABLE PARTS

6-1. INTRODUCTION

6-2. This section contains information for ordering replacement parts. Table 6-1 lists parts in alphanumeric order of their reference designators and indicates the description and HP Part Number of each part, together with any applicable notes. The table includes the following information.

- Description of part (see abbreviations below).
- Typical manufacturer of the part in a five-digit code; see list of manufacturers in Table 2.
- Manufacturer's part number.
- Total quantity used in the instrument (Qty column).

REFERENCE DESIGNATIONS					
A	= assembly	E	= miscellaneous electrical part	P	= electrical connector (movable portion), plug
AT	= attenuator, isolator; termination	F	= fuse	Q	= transistor, SCR, triode thyristor
B	= fan, motor	FL	= filter	R	= resistor
BT	= battery	H	= hardware	RT	= thermistor
C	= capacitor	HY	= circulator	S	= switch
CP	= coupler	J	= electrical connector (stationary portion); jack	T	= transformer
CR	= diode; diode thyristor; varactor	K	= relay	TB	= terminal board
DC	= directional coupler	L	= coil, inductor	TC	= thermocouple
DL	= delay line	M	= meter	TP	= test point
DS	= annunciator, signaling device (audible or visual); lamp, LED	MP	= miscellaneous mechanical part	U	= integrated circuit; microcircuit
V	= electron tube			VR	= voltage regulator; breakdown diode
W	= cable; transmission path; wire			X	= socket
Y	= crystal unit; piezo-electric			Z	= tuned cavity; tuned circuit

ABBREVIATIONS					
A	= ampere	BAL	= balance	COEF	= coefficient
ac	= alternating current	BCD	= binary coded decimal	COM	= common
ACCESS	= accessory	BD	= board	COMP	= composition
ADJ	= adjustment	BE CU	= beryllium copper	COMPL	= complete
A/D	= analog-to-digital	BFO	= beat frequency oscillator	CONN	= connector
AF	= audio frequency	BH	= binder head	CP	= cadmium plate
AFC	= automatic frequency control	BKDN	= breakdown	CRT	= cathode-ray tube
AGC	= automatic gain control	BP	= bandpass	CTL	= complementary transistor logic
AL	= aluminum	BPF	= bandpass filter	CW	= continuous wave
ALC	= automatic level control	BRS	= brass	cw	= clockwise
AM	= amplitude modulation	BWO	= backward-wave oscillator	D/A	= digital-to-analog
AMPL	= amplifier	CAL	= calibrate	dB	= decibel
APC	= automatic phase control	ccw	= counterclockwise	dBm	= decibel referred to 1 mW
ASSY	= assembly	CER	= ceramic	dc	= direct current
AUX	= auxiliary	CHAN	= channel	deg	= degree (temperature interval or difference)
avg	= average	cm	= centimeter	...°	= degree (plane angle)
AWG	= american wire gauge	CMO	= coaxial		
				°C	= degree Celsius (centigrade)
				°F	= degree Fahrenheit
				°K	= degree Kelvin
				DEPC	= deposited carbon
				DET	= detector
				diam	= diameter
				DIA	= diameter (used in parts list)
				DIFF	= differential amplifier
				AMPL	= division
				div	= double-pole, double-throw
				DPDT	= drive
				DR	= double sideband
				DSB	= diode transistor logic
				DTL	= digital voltmeter
				DVM	= emitter coupled logic
				ECL	

**ABBREVIATIONS (CONTINUED)**

EMF = electromotive force	mH = millihenry	PIN = positive-intrinsic-negative	TERM = terminal
EDP = electronic data processing	mho = mho	PIV = peak inverse voltage	TFT = thin-film transistor
ELECT = electrolytic	MIN = minimum	pk = peak	TGL = toggle
ENCAP = encapsulated	min = minute (time)	PL = phase lock	THD = thread
EXT = external	... = minute (plane angle)	PLO = phase lock oscillator	THRU = through
F = farad	MINAT = miniature	PM = phase modulation	TI = titanium
FET = field-effect transistor	mm = millimeter	PNP = positive-negative-positive	TOL = tolerance
F/F = flip-flop	MOD = modulator	P/O = part of	TRIM = trimmer
FH = flat head	MOM = momentary	POLY = polystyrene	TSTR = transistor
FOL H = fillister head	MOS = metal-oxide semiconductor	PORC = porcelain	TTL = transistor-transistor logic
FM = frequency modulation	ms = millisecond	POS = positive, position(s) (used in parts list)	TV = television
FP = front panel	MTG = mounting	POSN = position	TVI = television interference
FREQ = frequency	MTR = meter (indicating device)	POT = potentiometer	TWT = traveling wave tube
FXD = fixed	mV = millivolt	p-p = peak-to-peak (used in parts list)	U = micro (10 <sup>-6</sup> ) (used in parts list)
g = gram	mVac = millivolt, ac	PP = peak-to-peak (used in parts list)	UF = microfarad (used in parts list)
GE = germanium	mVdc = millivolt, dc	PPM = pulse-position modulation	UHF = ultrahigh frequency
GHZ = gigahertz	mVpk = millivolt, peak	PREAMPL = preamplifier	UNREG = unregulated
GL = glass	mVp-p = millivolt, peak-to-peak	PRF = pulse-repetition frequency	V = volt
GND = ground(ed)	mVrms = millivolt, rms	ps = picosecond	VA = voltampere
H = henry	mW = milliwatt	PT = point	Vac = volts ac
h = hour	MUX = multiplex	PTM = pulse-time modulation	VAR = variable
HET = heterodyne	MY = mylar	PWM = pulse-width modulation	VCO = voltage-controlled oscillator
HEX = hexagonal	μA = microampere	PWV = peak working voltage	Vdc = volts dc
HD = head	μF = microfarad	RC = resistance capacitance	VDCW = volts dc, working (used in parts list)
HDW = hardware	μH = microhenry	RECT = rectifier	V(F) = volts, filtered
HF = high frequency	μmho = micromho	REF = reference	VFO = variable-frequency oscillator
HG = mercury	μs = microsecond	REG = regulated	VHF = very-high frequency
HI = high	μV = microvolt	REPL = replaceable	Vpk = volts peak
HP, HPPF = Hewlett-Packard high pass filter	μVac = microvolt, ac	RF = radio frequency interference	Vp-p = Volts peak-to-peak
HR = hour (used in parts list)	μVdc = microvolt, dc	RFI = radio frequency interference	Vrms = volts rms
HV = high voltage	μVpk = microvolt, peak	RH = round head, right hand	VSWR = voltage standing wave ratio
Hz = Hertz	μVp-p = microvolt, peak-to-peak	RLC = resistance-inductance-capacitance	VTO = voltage-tuned oscillator
IC = integrated circuit	μVrms = microvolt, rms	RMO = rack mount only	VTVM = vacuum-tube voltmeter
ID = inside diameter	μW = microwatt	rms = root-mean-square	V(X) = volts, switched
IF = intermediate frequency	nA = nanoampere	RND = round	W = watt
IMPG = impregnated	NC = no connection	ROM = read-only memory	W/ = with
in = inch	N/C = normally closed	R&P = rack and panel	WIV = working inverse voltage
INCD = incandescent	NE = neon	RWV = reverse working voltage	WW = wirewound
INCL = include(s)	NEG = negative	S = scattering parameter	W/O = without
INP = input	nF = nanofarad	s = second (time)	YIG = yttrium-iron-garnet
INS = insulation	NI PL = nickel plate	... = second (plane angle)	Zo = characteristic impedance
INT = internal	N/O = normally open	S-B = slow-blow (fuse used in parts list)	
kg = kilogram	NOM = nominal	SCR = silicon controlled rectifier, screw	
kHz = kilohertz	NORM = normal	SE = selenium	
kΩ = kilohm	NPN = negative-positive-negative	SECT = sections	
kV = kilovolt	NPO = negative-positive zero (zero temperature coefficient)	SEMICON = semiconductor	
lb = pound	NRFR = not recommended for field replacement	SHF = superhigh frequency	
LC = inductance-capacitance	NSR = not separately replaceable	SI = silicon	
LED = light-emitting diode	ns = nanosecond	SIL = silver	
LF = low frequency	nW = nanowatt	SL = slide	
LG = long	OBD = order by description	SNR = signal-to-noise ratio	
LH = left hand	OD = outside diameter	SPDT = single-pole, double-throw	
LIM = limit	OH = oval head	SPG = spring	
LIN = linear taper (used in parts list)	OP AMPL = operational amplifier	SR = split ring	
lin = linear	OPT = option	SPST = single-pole, single-throw	
LK WASH = lockwasher	OSC = oscillator	SSB = single sideband	
LO = low, local oscillator	OX = oxide	SST = stainless steel	
LOG = logarithmic taper (used in parts list)	oz = ounce	STL = steel	
log = logarithm(ic)	Ω = ohm	SQ = square	
LPF = low pass filter	P = peak (used in parts list)	SWR = standing-wave ratio	
LV = low voltage	PAM = pulse-amplitude modulation	SYNC = synchronize	
m = meter (distance)	PC = printed circuit	T = timed (slow-blow fuse)	
mA = milliamper	PCM = pulse-code modulation, pulse-count modulation	TA = tantalum	
MAX = maximum	PDM = pulse-duration modulation	TC = temperature compensating	
MΩ = megohm	pF = picofarad	TD = time delay	
MEG = meg (10 <sup>6</sup> ) (used in parts list)	PH BRZ = phosphor bronze		
MET FLM = metal film	PHL = Phillips		
MET OX = metal oxide			
MF = medium frequency, microfarad (used in parts list)			
MFR = manufacturer			
mg = milligram			
MHz = megahertz			

**NOTE**

All abbreviations in the parts list will be in upper case.

**MULTIPLIERS**

Abbreviation	Prefix	Multiply
T	tera	10 <sup>12</sup>
G	giga	10 <sup>9</sup>
M	mega	10 <sup>6</sup>
k	kilo	10 <sup>3</sup>
da	deka	10 <sup>1</sup>
d	deci	10 <sup>-1</sup>
c	centi	10 <sup>-2</sup>
m	milli	10 <sup>-3</sup>
μ	micro	10 <sup>-6</sup>
n	nano	10 <sup>-9</sup>
p	pico	10 <sup>-12</sup>
f	femto	10 <sup>-15</sup>
a	atto	10 <sup>-18</sup>

**6-4. ORDERING INFORMATION**

6-5. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Sales and Service Office (see lists at rear of this manual for addresses). Identify parts by their Hewlett-Packard part numbers.

- a. Instrument model number.
- b. Instrument serial number.
- c. Description of the part.
- d. Function and location of the part.

**6-6. HP PART NUMBER ORGANIZATION**

6-7. Following is a general description of the HP part number system.

**6-8. Component Parts and Materials**

6-9. Generally, the prefix of HP part numbers identifies the type of device. Eight-digit part numbers are used, where the four-digit prefix identifies the type of component, part, or material and the four-digit suffix indicates the specific type. Following is a list of some of the more commonly used prefixes for component parts. The list includes HP manufactured parts and purchased parts.

<b>Prefix</b>	<b>Component/Part/Material</b>
0121-	Capacitors, Variable (mechanical)
0122-	Capacitors, Voltage Variable (semiconductor)
0140-	Capacitors, Fixed
0150-	Capacitors, Fixed
0160-	Capacitors, Fixed
0180-	Capacitors, Fixed Electrolytic
0330-	Insulating Materials
0340-	Insulators, Formed
0370-	Knobs, Control
0380-	Spacers and Standoffs
0410-	Crystals
0470-	Adhesives
0490-	Relays
0510-	Fasteners
0674- thru 0778-	Resistors, Fixed (non wire wound)
0811- thru 0831-	Resistors (wire wound)
1200-	Sockets for components
1205-	Heat Sinks
1250-	Connectors (RF and related parts)
1251-	Connectors (non RF and related parts)
1410-	Bearings and Bushings
1420-	Batteries
1820-	Monolithic Digital Integrated Circuits
1826-	Monolithic Linear Integrated Circuits
1850-	Transistors, Germanium PNP
1851-	Transistors, Germanium NPN
1853-	Transistors, Silicon PNP
1854-	Transistors, Silicon NPN
1855-	Field-Effect-Transistors
1900- thru 1912-	Diodes
1920- thru 1952-	Vacuum Tubes
1990-	Semiconductor Photosensitive and Light-Emitting Diodes
3100- thru 3106-	Switches
8120-	Cables
9100-	Transformers, Coils, Chokes, Inductors, and Filters

6-10. For example, 1854-0037, 1854-0221, and 1851-0192 are all NPN transistors. The first two are silicon and the last is germanium.

### 6-11. General Usage Parts

6-12. The following list gives the prefixes for HP manufactured parts used in several instruments, e.g., side frames, feet, top and bottom covers, etc. these are eight-digit part numbers with the four-digit prefix identifying the type of parts as shown below:

Type of Part	Prefix
Sheet Metal	5000- to 5019-
Machined	5020- to 5039-
Molded	5040- to 5059-
Assemblies	5060- to 5079-
Components	5080- to 5099-

### 6-13. Specific Instrument Parts

6-14. These are HP manufactured parts for use in individual instruments or series of instruments. For these parts, the prefix indicates the instrument and the suffix indicates the type of part. For example, 05004-60003 is an assembly used in the 5004A. Following is a list of suffixes commonly used.

Type of Part	P/N Suffix
Sheet Metal	-00000 to -00499
Machined	-20000 to -20499
Molded	-40000 to -40499
Assembly	-60000 to -60499
Component	-80000 to -80299
Documentation	-90000 to -90249

### 6-15. Mechanical Parts

6-16. The major mechanical parts of the 5004A are shown in Figure 6-1, at the rear of this section. The parts are listed in the miscellaneous part section of the parts list under MP numbers.

Table 6-1. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	05004-60007	1	BOARD ASSEMBLY, MAIN	28480	05004-60007
A1C1	0180-0210	1	CAPACITOR-FXD 3.3UF+-20% 15VDC TA	04200	150D335X0015A2
A1C2	0180-0490	2	CAPACITOR-FXD 68UF+-10% 6VDC TA	04200	196D686X9006KA1
A1C3	0180-0490		CAPACITOR-FXD 68UF+-10% 6VDC TA	04200	196D686X9006KA1
A1C4	0160-2055	16	CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A1C5	0160-2055		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A1C6	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C7	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C8	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C9	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C10	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C11	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C12	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C13	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C14	0160-0374	4	CAPACITOR-FXD 10UF +-10% 20VDC TA	04200	150D106X9020B2
A1C15	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C16	0180-0374		CAPACITOR-FXD10UF+-10% 20VDC TA	04200	150D106X9020B2
A1C17	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C18	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C19	0180-2414	1	CAPACITOR-FXD 2900UF+75-10% 40VDC AL	04200	36D292G040AA2A
A1C20	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C21	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C22	0180-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	04200	150D106X9020B2
A1C23	0180-0374		CAPACITOR-FXD 10UF+-10% 20VDC TA	04200	150D106X9020B2
A1C24	0160-2055		CAPACITOR-FXD.01UF +80-20% 100VDC CER	28480	0160-2055
A1C25	0180-2413	1	CAPACITOR-FXD 7500UF+75-10% 15VDC AL	04200	36DX752G015AA2A
A1C26	0160-3043	1	CAPACITOR-FXD 5000PF/5000PF+-20%	28480	0160-3043
A1C27	0160-0576	7	CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A1C28			NOT ASSIGNED		
A1C29			NOT ASSIGNED		
A1C30			NOT ASSIGNED		
A1C31	0160-0576		CAPACITOR-FXD .1UF+-20% 50VDC CER	28480	0160-0576
A1C1	1901-0040	5	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A1C2	1901-0028	2	DIODE-PWR RECT 400V 750MA DO-29	02713	MP493
A1C3	1901-0028		DIODE-PWR RECT 400V 750MA DO-29	02713	MP493
A1C4	1901-0782	2	DIODE-SCHOTTKY 1N5821 30V 3A	02037	1N5821
A1C5	1901-0782		DIODE-SCHOTTKY 1N5821 30V 3A	02037	1N5821
A1J1	1251-4778	1		28480	1251-4468
A1J2	1251-4777	1		28480	1251-4777
A1Q1	1858-0014	4	TRANSISTOR ARRAY	28480	1858-0014
A1Q2	1858-0014		TRANSISTOR ARRAY	28480	1858-0014
A1Q3	1858-0014		TRANSISTOR ARRAY	28480	1858-0014
A1Q4	1858-0014		TRANSISTOR ARRAY	28480	1858-0014
A1Q5	1854-0215	2	TRANSISTOR NPN SI PD=350MW FT=300MHZ	02037	SPS3611
A1Q6	1854-0215		TRANSISTOR NPN SI PD=350MW FT=300MHZ	02037	SPS3611
A1R1	0683-2215	9	RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R2	0683-2215		RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R3	0683-2215		RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R4	0683-2215		RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R5	0683-2215		RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R6	0683-2215		RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R7	0683-2215		RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R8	0683-1615	5	RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R9	0683-1615		RESISTOR 220 5% .25W FC TC=-400/+600	01607	CB2215
A1R10	1810-0047	2	NETWORK-RES 5-PIN-8IP .15-PIN-SPCG	28480	1810-0047
A1R11	0683-2425	2	RESISTOR 2.4K 5% .25W FC TC=-400/+700	01607	CB2425
A1R12	0683-1525	2	RESISTOR 1.5K 5% .25W FC TC=-400/+700	01607	CB1525
A1R13	0683-1025	4	RESISTOR 1K 5% .25W FC TC=-400/+600	01607	CB1025
A1R14	0683-2235	2	RESISTOR 22K 5% .25W FC TC=-400/+800	01607	CB2235
A1R15	0683-4315	5	RESISTOR 430 5% .25W FC TC=-400/+600	01607	CB4315
A1R16	0683-2235		RESISTOR 22K 5% .25 FC TC=-400/+800	01607	CB2235
A1R17	0683-1025		RESISTOR 1K 5% .25 FC TC=-400/+600	01607	CB1025
A1R18	0683-2215		RESISTOR 220 5% .25 FC TC=-400/+600	01607	CB2215
A1R19	0683-4315		RESISTOR 430 5% .25 FC TC=-400/+600	01607	CB4315
A1R20	0683-2215		RESISTOR 220 5% .25 FC TC=-400/+600	01607	CB2215
A1R21	0683-1025		RESISTOR 1K 5% .25 FC TC=-400/+600	01607	CB1025
A1R22	0683-1525		RESISTOR 1.5K 5% .25 FC TC=-400/+700	01607	CB1525
A1R23	0683-4315		RESISTOR 430 5% .25 FC TC=-400/+600	01607	CB4315
A1R24	0683-1025		RESISTOR 1K 5% .25 FC TC=-400/+600	01607	CB1025
A1R25	0683-4315		RESISTOR 430 5% .25 FC TC=-400/+600	01607	CB4315

See introduction to this section for ordering information

Table 6-1. Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1R26	0683-7525	4	RESISTOR 7.5K 5% .25W FC TC=-400/+700	01607	CB7525
A1R27	0683-4725	2	RESISTOR 4.7K 5% .25W FC TC=-400/+700	01607	CB4725
A1R28	1810-0047		NETWORK-RES 5-PIN-81P .15-PIN-SPCG	28480	1810-0047
A1R29	0683-1615		RESISTOR 160 5% .25W FC TC=-400/+600	01607	CB1615
A1R30	0683-1615		RESISTOR 160 5% .25W FC TC=-400/+600	01607	CB1615
A1R31	0673-3315	2	RESISTOR 330 5% .25W FC TC=-400/+600	01607	CB3315
A1R32	0683-1615		RESISTOR 160 5% .25W FC TC=-400/+600	01607	CB1615
A1R33	0683-3315		RESISTOR 330 5% .25W FC TC=-400/+600	01607	CB3315
A1R34	0683-4725		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01607	CB4725
A1R35	0683-4315		RESISTOR 430 5% .25W FC TC=-400/+600	01607	CB4315
A1R36	0683-7525		RESISTOR 7.5K 5% .25W FC TC=-400/+700	01607	CB7525
A1R37	0683-2225	1	RESISTOR 2.2K 5% .25W FC TC=-400/+700	01607	CB2225
A1R38	0683-1825	1	RESISTOR 1.8K 5% .25W FC TC=-400/+700	01607	CB1825
A1R39	0683-2425		RESISTOR 2.4K 5% .25W FC TC=-400/+700	01607	CB2425
A1R40	0683-2035	1	RESISTOR 20K 5% .25W FC TC=-400/+800	01607	CB2035
A1R41	1810-0135	2	NETWORK-RES 6-PIN-SIP .15-PIN-SPCG	28480	1810-0135
A1R42	0683-7525		RESISTOR 7.5K 5% .25W FC TC=-400/+700	01607	CB7525
A1R43	0683-7525		RESISTOR 7.5K 5% .25W FC TC=-400/+700	01607	CB7525
A1R44	1810-0135		NETWORK-RES 6-PIN-SIP .15-PIN-SPCG	28480	1810-0135
A181	3101-0555	1	SWITCH-PS DPDT ALTN 4A 250VAC	28480	3101-0555
A182	3101-2178	5	SWITCH ASSEMBLY, 5-STATION	28480	3101-2178
A183	3101-2178		SWITCH ASSEMBLY, 5-STATION	28480	3101-2178
A184	3101-2178		SWITCH ASSEMBLY, 5-STATION	28480	3101-2178
A185	3101-2178		SWITCH ASSEMBLY, 5-STATION	28480	3101-2178
A186	3101-2178		SWITCH ASSEMBLY, 5-STATION	28480	3101-2178
A187	3101-2177	1	SWITCH-SL 4PDT-NS MINTR .01A 5VDC PC	28480	3101-2177
A188	3101-0693	1	SWITCH-SL 2-DPDT-NS STD 1.5A 250VAC PC	28480	3101-0693
A1TP1	1251-4707	5	CONNECTOR-SGL CONT PIN .031-IN-BSC-8Z	28480	1251-4707
A1TP2	1251-4707		CONNECTOR-SGL CONT PIN .031-IN-BSC-8Z	28480	1251-4707
A1TP3	1251-4707		CONNECTOR-SGL CONT PIN .031-IN-BSC-8Z	28480	1251-4707
A1TP4	1251-4707		CONNECTOR-SGL CONT PIN .031-IN-BSC-8Z	28480	1251-4707
A1TP5	1251-4707		CONNECTOR-SGL CONT PIN .031-IN-BSC-8Z	28480	1251-4707
A1TP6	1251-0600	3	CONTACT-CONN U/W-POST-TYPE MALE DP5LDR	28480	1251-0600
A1TP7	1251-0600		CONTACT-CONN U/W-POST-TYPE MALE DP5LDR	28480	1251-0600
A1TP8	1251-0600		CONTACT-CONN U/W-POST-TYPE MALE DP5LDR	28480	1251-0600
A1U1	1820-1195	1	IC FF TTL5 D-TYPE POS-EDGE-TRIG COM	01698	SN74LS175N
A1U2	1820-1285	1	IC GATE TTL LS AND-OR-INV 4-INP	01698	SN74LS854N
A1U3	1820-1052	2	IC XLTR ECL/TTL ECL-TO-TTL QUAD 2-INP	02037	MC10125L
A1U4	1820-0691	1	IC GATE TTL LS AND-OR-INV	01698	SN74864N
A1U5	1820-1204	1	IC GATE TTL LS NAND DUAL 4-INP	01698	SN74LS20N
A1U6	1820-1140	1	IC GEN TTL S PAR GEN 9-BIT	02910	N82862A
A1U7	1820-1144	1	IC GATE TTL LS NOR QUAD S-INP	01698	SN74LS802N
A1U8	1820-1197	1	IC GATE TTL LS NAND QUAD S-INP	01698	SN74LS800N
A1U9	1820-0629	1	ICFF TTL S J-K NEG-EDGE-TRIG	01698	SN748112N
A1U10	1820-1199	1	IC INV TTL LS HEX 1-INP	01698	SN74LS804N
A1U11	1820-0685	1	IC GATE TTL S NAND TPL 3-INP	01698	SN74810N
A1U12	1820-1052		IC SLTR ECL/TTL ECL-TO-TTL QUAD S-INP	02037	MC10125L
A1U13	1820-1885	4	IC, TTL 74LS173	03406	DM74LS173N
A1U14	1820-1885		IC, TTL 74LS173	03406	DM74LS173N
A1U15	1820-1885		IC, TTL 74LS173	03406	DM74LS173N
A1U16	1820-1885		IC, TTL 74LS173	03406	DM74LS173N
A1U17	1820-1198	1	IC GATE TTL LS NAND QUAD S-INP	01698	8N74LS803N
A1U18	1820-1281	1	IC DCDR TTL LS 2-TO-4-LINE DUAL 2-INP	01698	8N74LS139N
A1U19	1820-1006	1	IC, ROM 32 X 8, CC	28480	1816-1006
A1U20	1820-1001	1		28480	1820-1001
A1U21	1820-1433	2	IC SHF-RGTR TTL LS R-S SERIAL-IN PRL OUT	01698	SN74LS164N
A1U22	1820-1447	1	IC SN74LS3670N 16-BIT RAM TTL	01698	SN74LS670N
A1U23	1820-1419	1	IC COMPTR TTL LS MAGD 4-BIT	01698	SN74LS885N
A1U24	1820-1433		IC SHF-RGTR TTL LS R-S SERIAL-IN PRL OUT	01698	SN74LS164N
A1U25	1820-1478	3	IC CNTR TTL LS BIN SYNCHRO	01698	SN74LS93N
A1U26	1820-1478		IC CNTR TTL LS BIN SYNCHRO	01698	SN74LS93N
A1U27	1820-1478		IC CNTR TTL LS BIN SYNCHRO	01698	SN74LS93N
A1U28	1826-0180	1	IC 555	02910	NE555V
A1U29	1816-1007	1	IC, ROM 32X 8, CC	28480	1816-1007
A1U30	1826-0173	1	IC V RGLTR	03406	LM320K-5.2
	0510-0741	5	A1 MISCELLANEOUS		
	2110-0269	2	BRACKET, 90 DEGREE	28480	0510-0741
	5040-8013	1	FUSEHOLDER-CLIP-TYPE .25FUSE	28480	2110-0269
A2	05004-60002	1	RECEPTACLE, AC POWER	28480	5040-6013
			BOARD ASSEMBLY, DISPLAY	28480	05004-60002
A2CR1	1990-0325	2	LED-VISIBLE LUM-INT=800CD IF=50MA=MAX	01542	5082-4403
A2CR2	1990-0540	4	DISPLAY-NUM SEG 1-CHAR .43-H	01542	5082-7650
A2CR3	1990-0540		DISPLAY-NUM SEG 1-CHAR .43-H	01542	5082-7650
A2CR4	1990-0540		DISPLAY-NUM SEG 1-CHAR .43-H	01542	5082-7650
A2CR5	1990-0540		DISPLAY-NUM SEG 1-CHAR .43-H	01542	5082-7650

See introduction to this section for ordering information



Table 6-1. Replaceable Parts (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A2CR6	1990-0325	18	LED-VISIBLE LUM-INT=800UCD IF=50MA-MAX	01542	5082-4403
A2J1	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J2	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J3	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J4	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J5	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J6	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J7	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J8	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J9	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J10	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J11	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J12	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J13	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J14	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J15	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J16	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J17	1251-3768		CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768
A2J18	1251-3768	CONTACT-CONN U/W-POST-TYPE MALE DPPLDR	28480	1251-3768	
A2TP1	1251-4714	1		28480	1251-4714
A2W1	1251-4750	3	CONNECTOR-SGL CONT PIN .03-IN-BSC-SZ RND	28480	1251-4750
A2W2	1251-4750		CONNECTOR-SGL CONT PIN .03-IN-BSC-SZ RND	28480	1251-4750
A2W3	1251-4750		CONNECTOR-SGL CONT PIN .03-IN-BSC-SZ RND	28480	1251-4750
			A2 MISCELLANEOUS		
	0400-0010	1	GROMMET, VINYL 0.250" ID	00000	OBD#
A3	05004-60005	1	PROBE ASSEMBLY	28480	05004-60005
MP	7120-5919	1	LABEL, PROBE, TOP	28480	7120-5919
MP	7120-5920	1	LABEL, PROBE, BOTTOM	28480	7120-5920
MP	5060-0418	1	PIN TIP ASSEMBLY	28480	5060-0418
MP	00545-20203	1	BODY, BOTTOM HALF	28480	00545-20203
MP	00546-40002	1	WINDOW	28480	00546-40002
	00547-40005	1	COVER, TIP	28480	00547-40005
MP	05004-20204	1	BODY, TOP HALF	28480	05004-20204
	05004-20205	1	SWITCH, PUSHBUTTON	28480	05004-20205
	05004-60103	1	CABLE ASSEMBLY, PROBE	28480	05004-60103
A3	05004-60003	1	BOARD ASSEMBLY, PROBE	28480	05004-60003
A3	0160-0576	1	CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3	0160-0576		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A3	0150-0088		CAPACITOR-FXD 3.9PF +-25PF 500VDC	28480	0150-0088
A3	1901-0040	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3	2140-0346	1	LAMP-INCAND 7210 5VDC 30MA T-1-BULB	04504	7210 (ANSO 7210)
A3	0698-7225	1	RESISTOR 348 1% .05W F TC=0+-100	03292	C3-1/8 TO-348R-G
A3	0698-8875	1	RESISTOR 27.4 1% .05W F TC=0+-100	03292	C3
A3	0698-8874	1	RESISTOR 127 1% .05W F TC=0+-100	03292	C3
A3	2100-1986	1	RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN	04568	62-206-1
A3	0698-7262	1	RESISTOR 12.1K 1% .05W F TC=0+-100	03292	C3-1/8-TO-1212-G
A3	0757-0849	1	RESISTOR 36.5K 1% .5W F TC=0+-100	02995	MF7C1/2-TO-3652-F
A3	00546-00001	1	SWITCH, CONTACT	28480	00546-00001
A3	1820-0919	3	IC COMPTR ECL A/D DUAL	02037	MC1650L
			A3A1 MISCELLANEOUS		
	1251-4259	1	CONNECTOR-SGL CONT PIN .031-IN-BSC-8Z	28480	1251-4259
	00545-20202		STUD, TIP	28480	00545-20202
A4	05004-60006		POD ASSEMBLY	28480	05004-60006
	0624-0306	1	SCREW-TPG 2-28 .5-IN-LG PAN-HD-POZI STL	28480	0624-0307
MP14	7120-5921	1	LABEL, POD INST.	28480	7120-5921
	5040-0563	1	CONNECTOR, CLIP	28480	5040-0563
MP6	5040-8125	1	COVER, POD	28480	5040-8125
MP7	05004-20201	1	HALF-BOTTOM POD	28480	05004-20201
	05004-60101	1	CABLE ASSEMBLY, POD	28480	05004-60101
		1	BOARD ASSEMBLY, POD	28480	05004-60004
A4	0160-2550	2	CAPACITOR-FXD 1PF +- .1PF 500VDC	28480	0160-2550
A4	0160-2235	1	CAPACITOR FXD .75PF +- .25PF 500VDC	28480	0160-2235
A4	0160-2550	1	CAPACITOR FXD 1PF +- .1PF 500VDC	28480	0160-2550
A4	0160-0576		CAPACITOR FXD .1UF +-20% 50VDC CER	28480	0160-0576
A4	0180-0155		CAPACITOR FXD 2.2UF +-20% 20VDC TA	04200	15D225X0020A2

See introduction to this section for ordering information

*Table 6-1. Replaceable Parts (Continued)*

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A4A1C6	0160-0576		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A4A1C7	0160-0576		CAPACITOR-FXD .1UF +-20% 50VDC CER	28480	0160-0576
A4A1CR1	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4A1CR2	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4A1CR3	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4A1R1	0757-1100	3	RESISTOR 600 1% .125W F TC=0+-100	03292	C4-1/8-TO-601-F
A4A1R2	0757-1100		RESISTOR 600 1% .125W F TC=0+-100	03292	C4-1/8-TO-601-F
A4A1R3	0698-3423	3	RESISTOR 46.4K 1% .5W F TC=0+-100	05524	MFF-1/2-10
A4A1R4	0698-3423		RESISTOR 46.4K 1% .5W F TC=0+-100	05524	MFF-1/2-10
A4A1R5	0698-3423		RESISTOR 46.4K 1% .5W F TC=0+-100	05524	MFF-1/2-10
A4A1R6	0757-1100		RESISTOR 600 1% .125W F TC=0+-100	03292	C4-1/8-TO-601-F
A4A1R7	0757-0438	2	RESISTOR 5.11K 1% .125W F TC=0+-100	03292	C4-1/8-TO-5111-F
A4A1R8	0757-0438		RESISTOR 5.11K 1% .125W F TC=0+-100	03292	C4-1/8-TO-5111-F
A4A1R9	0698-3153	1	RESISTOR 3.83K 1% .125W F TC=0+-100	03292	C4-1/8-TO-3831-F
A4A1R10	0757-1094	1	RESISTOR 1.47K 1% .125W F TC=0+-100	03292	C4-1/8-TO-1471-F
A4A1R11	0757-0438		RESISTOR 5.11K 1% .125W F TC=0+-100	03292	C4-1/8-TO-5111-F
A4A1U1	1820-0493	1	IC OP AMP	03406	LM307N
A4A1U2	1820-0493		IC COMPTR ECL A/D DUAL	02037	MC1650L
A4A1U3	1820-0919		IC COMPTR ECL A/D DUAL	02037	MC1650L
A4A1U4	1826-0215	1	IC V RGLTR	02037	MC7905,2CT
	1460-1473	4	A4A1 MISCELLANEOUS SPRING (SH MET) BE CU 5004A SIGNATURE ANALYZER	28480	1460-1473
F1	2110-0201	1	FUSE .25A 250V SLO-BLO 1.25X.25 UL IEC	04703	313.250
F1	2110-0318	1	FUSE .125A 250V SLO-BLO 1.25X.25 UL IEC	04703	313.125
T1	9100-3063	1	TRANSFORMER, POWER	28480	9100-3063
U1	1826-0181	1	IC V RGLTR	03406	LM323K
W1	8120-1378	1	CABLE ASSY 18AWG 3-CNDCT JGK-JKT .25-OD	28480	8120-1378
	0380-0007	3	MISCELLANEOUS PARTS SPACER-RND .438LG .18ID .250D BRS NI-PL	28480	0380-0008
	0510-0592	6	RETAINER-PUSH ON TUB EXT .14-DIA	28480	0510-0592
	0510-0741		BRACKET-RTANG .344-LG X .407-LG .312-WD	28480	0510-0741
	1205-0319	1	HEAT SINK 8GL TO-3-PKG	28480	1205-0319
	1400-0082	2	CLAMP-CA .125-DIA .375-WD NYL	05448	HP-2N
MP5	2360-0391	4	SCREW, MACH 6-32X1.75 PAN PH	28480	2360-0391
	1540-0457	1	CASE-CRYG PVC 10LG 7.125WD 1.5DP	28480	1540-0457
	2950-0072	2	NUT-HEX-DBL-CHAM 1/4-32-THD .062-IN-THK	28480	2950-0075
MP1	4040-1125	1	SHELL, BOTTOM	28480	4040-1125
MP4	7101-0447	1	PANEL, FRONT	28480	7101-0447
	7120-3731	2	LABEL, HV WARNING	28480	7120-3731
	7120-5370	2	LABEL, HANDLE	28480	7120-5370
	7120-5955	1	LABEL, LINE VOLTAGE	28480	7120-5955
	7120-5956	1	LABEL, INFO	28480	7120-5956
	7120-6075	1	LABEL, INFO	28480	7120-6078
	7122-0097	1	NAEMPLATE	28480	7122-0097
MP3	5040-8044	4	SPACER	28480	5040-8044
	5040-8058	1	HANDLE	28480	5040-8058
	5041-0268	6	KEYCAP, PEARL GRAY	28480	5041-0268
	5061-1215	1	CABLE ASSEMBLY, GND BLACK	28480	5061-1215
	5061-1219	1	CABLE ASSEMBLY, STOP W/R	28480	5061-1219
	5061-1221	1	CABLE ASSEMBLY, CLK W/Y	28480	5061-1221
	5061-1222	1	CABLE ASSEMBLY, START W/GN	28480	5061-1222
	00548-60101	1	CABLE ASSEMBLY, POWER	28480	00548-60101
	05004-00001	1	BRACKET, HEAT SINK	28480	05004-00001
	05004-00002	1	SHIELD, HEAT SINK	28480	05004-00002
MP2	05004-20202	1	SHELL, TOP HALF	28480	05004-20202
	05004-20203	3	BEZEL, TEST POINT	28480	05004-20203
	05004-90001	1	MANUAL-OPERATING	28480	05004-90001
	10230-62101	5	GRABBER	28480	10230-62101
See introduction to this section for ordering information					

Table 6-2. Manufacturers Code List

Mfr. No.	MANUFACTURER NAME	ADDRESS	ZIP CODE
01542	HP DIV 01 OPTOELECTRONICS,	PALO ALTO, CA	
01607	ALLEN-BRADLEY CO.,	MILWAUKEE, WI	
01698	TEXAS INSTRU INC SEMICOND	CMPNT DIV, DALLAS, TX	
02037	MOTOROLA SEMICONDUCTOR	PRODUCTS, PHOENIX, AZ	
02713	GENERAL INSTR CORP SEMIDON	PROD GP., HICKSVILL, NY	
02910	SIGNETICS CORP,	SUNNYVALE, CA	
02995	MEPCO/ELECTRA CORP,	MINERAL WELLS, TX	
03292	CORNING GLASS WORKS (BRADFORD),	BRADFORD, PA	
03406	NATIONAL SEMICONDUCTOR CORP,	SANTA CLARA, CA	
04200	SPRAGUE ELECTRIC CO.,	NORTH ADAMS, MA	
04504	CHICAGO MINIATURE/DRAKE,	CHICAGO, IL	
04568	BECKMAN INSTRUMENTS INC	HELIPOT DIV., FULLERTON, CA	73138
04703	LITTELFUSE INC.,	DES PLAINS, IL	
05448	BURNDY ENGINEERING,	LATHRUP VILLAGE, MI	
05524	DALE ELECTRONICS INC.,	COLUMBUS, NE	
28480	HEWLETT-PACKARD CO	CORPORATE HQ., PALO ALTO, CA	94304

Replaceable Parts

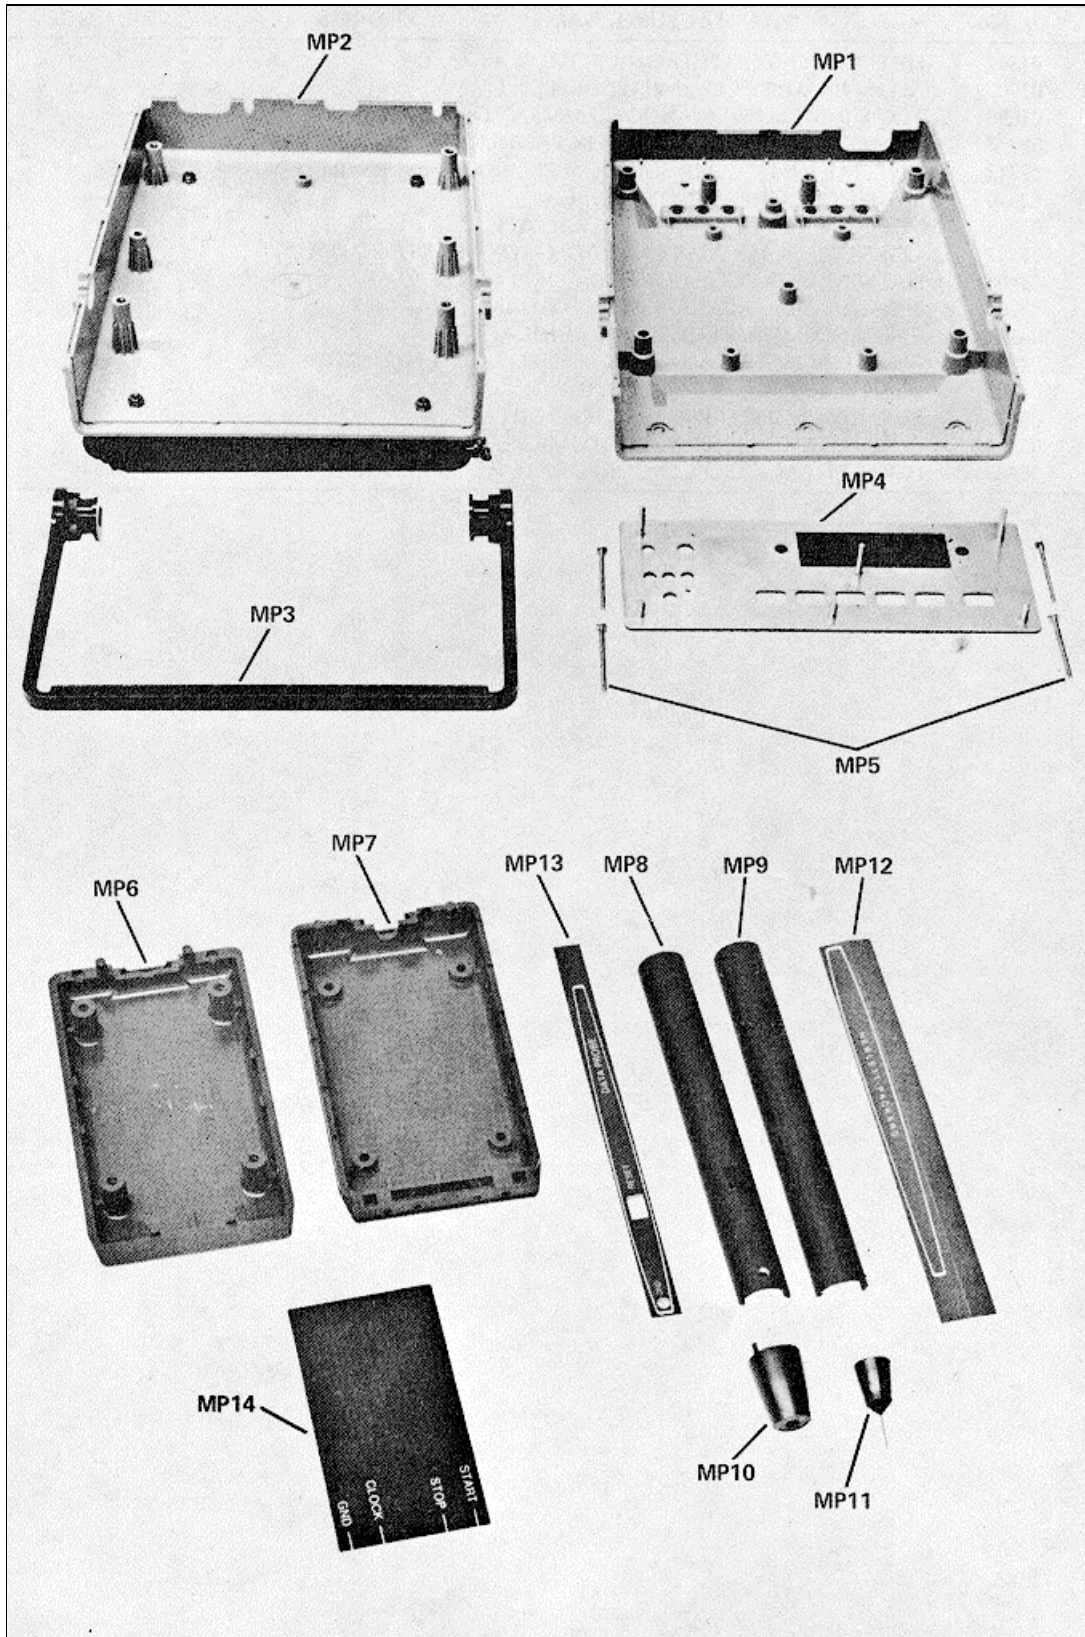


Figure 6-1. Mechanical Parts

**SECTION VII  
MANUAL CHANGES**

**7-1. INTRODUCTION**

7-2. This section normally contains information for adapting this manual to instruments for which the content does not apply directly. Since this manual does apply directly to instruments having serial numbers listed on the title page, no change' information is given here. Refer to INSTRUMENTS COVERED BY MANUAL in Section I for additional important information about serial number coverage.

## SECTION VIII SERVICE

### 8-1. INTRODUCTION

8-2. This section provides safety considerations, logic symbols, troubleshooting procedures, block diagram and description, circuit theory, component location photos, and schematic diagram (service information).

### 8-3. SAFETY CONSIDERATIONS

8-4. Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition (see Sections II, III, and V). Service and adjustments should be performed only by qualified service personnel.

#### **WARNING**

**ANY INTERRUPTION OF THE PROTECTIVE (GROUNDING) CONDUCTOR (INSIDE OR OUTSIDE THE INSTRUMENT) OR DISCONNECTION OF THE PROTECTIVE EARTH TERMINAL IS LIKELY TO MAKE THE INSTRUMENT DANGEROUS. INTENTIONAL INTERRUPTION IS PROHIBITED.**

8-5. Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

8-6. Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

8-7. Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuseholders must be avoided.

8-8. Whenever it is likely that this protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

#### **WARNING**

**THE SERVICE INFORMATION IS OFTEN USED WITH LINE POWER SUPPLIED AND PROTECTIVE COVERS REMOVED FROM THE INSTRUMENT. ENERGY AVAILABLE AT MANY POINTS MAY, IF CONTACTED, RESULT IN PERSONAL INJURY.**

### 8-9. RECOMMENDED TEST EQUIPMENT

8-10. Test equipment and test equipment accessories required to maintain the 5004A are listed in Table 1-2. Equipment other than that listed may be used if it meets the listed critical specifications.

### 8-11. LOGIC SYMBOLS


8-12. Logic symbols used in this manual conform to the American National Standard ANSI Y32.14-1973 (IEE Std. 91-1973). This standard supersedes MIL-STD-806B. In the following paragraphs logic symbols are described.

### 8-13. Logic Concepts

8-14. The binary numbers 1 and 0 are used in pure logic where 1 represents true, yes, or active and 0 represents false, no, or inactive. These terms should not be confused with the physical quantity (e.g., voltage) that may be used to implement the logic, nor should the term "active" be confused with a level that turns a device on or off. A truth table for a relationship in logic shows (implicitly or explicit) all the combinations of true and false input conditions and the result (output). There are only two basic logic relationship, AND and OR. The following illustrations assume two inputs (A and B), but these can be generalized to apply to more than two inputs.


**AND** Y is true if and only if A is true and B is true (or more generally, if all inputs are true).  
 $Y=1$  if and only if  $A=1$  and  $B=1$ .  
 $Y=A \cdot B$

**OR** Y is true if and only if A is true or B is true (or more generally, if one or more input(s) is (are) true).  
 $Y=1$  if and only if  $A=1$  or  $B=1$ .  
 $Y=A+B$

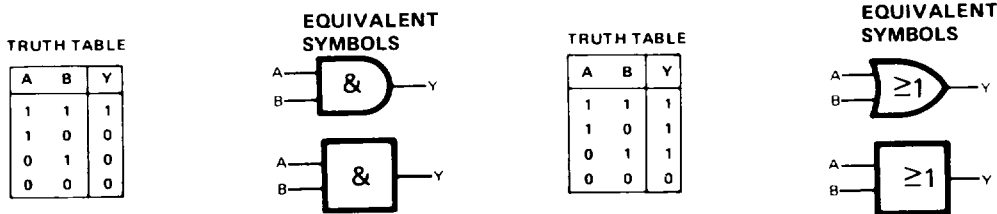

### 8-15. Negation

8-16. In logic symbology, the presence of the negation indication symbol  $\bar{\phantom{O}}$  provides for the representation of logic function inputs and outputs in terms independent of their physical values; the 0-state of the input or output being the 1-state of the symbol referred to by the symbol description.

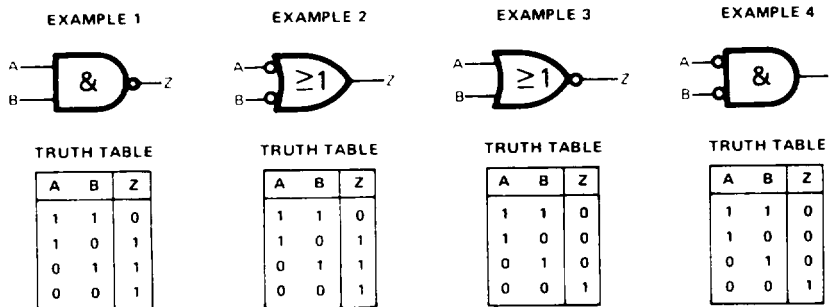

EXAMPLE 1 says that Z is not true if A is true and B is true or that Z is true if A and B are not both true.  $Z = \overline{AB}$  or  $Z = \overline{A} + \overline{B}$ . This is frequently referred to as NAND (for NOT AND).

EXAMPLE 2 says that Z is true if A is not true or if B is not true.  $Z = \overline{A} + \overline{B}$ . Note that this truth table is identical to that of Example 1. The logic equation is merely a De Morgan's transformation of the equations in Example 1. The symbols are equivalent.

EXAMPLE 3  $Z = A + B$  or  $Z = \overline{\overline{A} \cdot \overline{B}}$  and,

EXAMPLE 4  $Z = A \cdot B$ , also share common truth table and are equivalent transformations of each other. The NOT OR form (Example 3) is frequently referred to as NOR.

**NOTE**


In this manual the logic negation symbol is NOT used.

**8-17. Logic Implementation and Polarity Indication**


8-18. Devices that can perform the basic logic functions, AND and OR, are called gates. Any device that can perform one of these functions can also be used to perform the other if the relationship of the input and output voltage levels to the logic variables 1 and 0 is redefined suitably.

8-19. In describing the operation of electronic logic devices, the symbol H is used to represent a "high level," which is a voltage within the more-positive (less-negative) of the two ranges of voltages used to represent the binary variables. L is used to represent a "low level," which is a voltage within the less-positive (more-negative) range.

8-20. A function table for a device shows (implicit or explicitly) all the combinations of input conditions and the resulting output conditions.

8-21. In graphic symbols, inputs or outputs that are active when at the high level are shown without polarity indication. The polarity indicator symbol  denotes that the active (one) state of an input or output *with respect to the symbol to which it is attached is the low level*.

**NOTE**

The polarity indicator symbol "" is used in this manual.

**EXAMPLE 5**

Assume two devices having the following function tables.

**DEVICE #1**  
**FUNCTION TABLE**


A	B	Y
H	H	H
H	L	L
L	H	L
L	L	L

**DEVICE #2**  
**FUNCTION TABLE**

A	B	Y
H	H	H
H	L	H
L	H	H
L	L	L

**POSITIVE LOGIC**

By assigning the relationships H=1, L=0 at both input and output, Device #1 can perform the AND function and Device #2 can perform the OR function. Such a consistent assignment is referred to as positive logic. The corresponding logic symbols would be:





**NEGATIVE LOGIC**

Alternatively, by assigning the relationship  $H=O, L=1$  at both input and output, Device #1 can perform the OR function and Device #2 can perform the AND function. Such a consistent assignment is referred to as negative logic. The corresponding logic symbols would be:



8-22. MIXED LOGIC. The use of the polarity indicator symbol (X) automatically invokes a mixed-logic convention. This is, positive logic is used at the input and outputs that do not have polarity indicators, negative logic is used at the inputs and outputs that have polarity indicators.

EXAMPLE 6  
 FUNCTION TABLE

A	B	Z
H	H	L
H	L	H
L	H	H
L	L	H


EXAMPLE 7  
 FUNCTION TABLE

A	B	Z
H	H	L
H	L	L
L	H	L
L	L	H

This may be shown either of two ways:



This may be shown either of two ways:



Note the equivalence of these symbols to example 1 and 2 and the fact that the function table is a positive-logic translation ( $H=1, L=0$ ) of the NAND truth table, and also note that the function table is the negative-logic translation ( $H=0, L=1$ ) of the NOR truth table, given in Example 3.

Note the equivalence of these symbols to examples 3 and 4 and the fact that the function table is a positive-logic translation ( $H=1, L=0$ ) of the NOR truth table, and also note that the function table is the negative-logic translation ( $H=0, L=1$ ) of the NAND truth table, given in Example 1.

8-23. It should be noted that one can easily convert from the symbology of positive-logic merely by substituting a polarity indicator ( $\triangle$ ) for each negative indicator ( $\circ$ ) while leaving the distinctive shapes alone. To convert from the symbology of negative logic, a polarity indicator ( $\triangle$ ) is substituted for each negation indicator ( $\circ$ ) and the OR shape is substituted for the AND shape or vice versa.


8-24. It was shown that any device that can perform OR logic can also perform AND logic and vice versa. De Morgan's transformation is illustrated in Examples 1 through 7. The rules of the transformation are:

1. At each input or output having a negation ( $\circ$ ) or polarity ( $\triangle$ ) indicator, delete the indicator.
2. At each input or output not having an indicator, add a negation ( $\circ$ ) or polarity ( $\triangle$ ) indicator.
3. Substitute the AND symbol ( $\text{D}$ ) for the OR symbol ( $\text{D}$ ) or vice versa. These steps do not alter the assumed convention; positive-logic stays positive, negative-logic stays negative, and mixed-logic stays mixed.

8-25. The choice of symbol may be influenced by these considerations: (1)The operation being performed may best be understood as AND or OR. (2) In a function more complex than a basic gate, the inputs will usually be considered as inherently active high or active low (e.g., the J and K inputs of a J-K flip-flop are active high and active low, respectively). (3) In a chain of logic, understanding and the writing of logic equations are often facilitated if active-low or negated outputs feed into active-low or negated inputs.

**8-26. Other Symbols**

8-27. More symbols are required to depict complex logic diagrams. Some of the other symbols are as follows:  
 Dynamic input activated by transition from a low level to a high level. The opposite transition has no effect at the output.

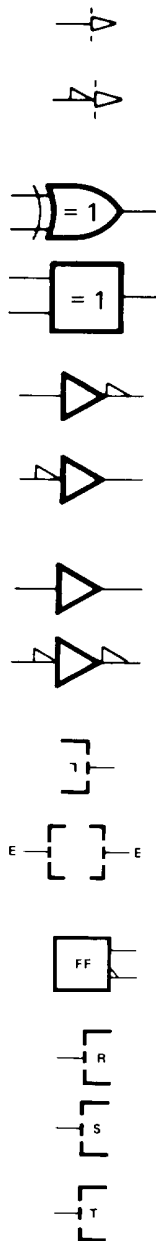

Dynamic input activated by transition from a high level to a low level. The opposite transition has no effect at the output.

Exclusive OR function. The output will assume its indicated active level if and only if one and only one of the two inputs assumes its indicated active level.

Inverting function. The output is low if the input is high and it is high if the input is low. The two symbols shown are equivalent.

Noninverting function. The output is high if the input is high and it is low if the input is low. The two symbols shown are equivalent.

OUTPUT DELAY. The output signal is effective when the input signal returns to its opposite state.

EXTENDER. Indicates when a logic function increases (extends) the number of inputs to another logic function.

FLIP-FLOP. A binary sequential element with two stable states: a set (1) state and a reset (0) state. Outputs are shown in the 1 state when the flip-flop is set. In the reset state the outputs will be opposite to the set state.

RESET. A 1 input will reset the flip-flop. A return to 0 will cause no further effect.

SET. A 1 input will set the flip-flop. A return to 0 will cause no further action.

TOGGLE. A 1 input will cause the flip-flop to change state. A return to 0 will cause no further action.



J INPUT. Similar to the S input except if both J and K (see below) are at 1, the flip-flop changes state.



K INPUT. Similar to the R input (see above).

D INPUT (Data). Always dependent on another input (usually C). When the C and D inputs are at 1, the flip-flop will be set. When the C is 1 and the D is 0, the flip-flop will reset.

Address symbol has multiplexing relationship at inputs and demultiplexing relationship at outputs.

### 8-28. Dependency Notation "C" "G" "V" "F"

8-29. Dependency Notation is a way to simplify symbols for complex IC elements by defining the existence of an AND relationship between inputs, or by the AND conditioning of an output by an input without actually showing all the elements and interconnections involved. The following examples use the letter "C" for control and "G" for gate. The dependent input is labeled with a number that is either prefixed (e.g., 1X) or subscripted (e.g., X<sub>1</sub>). They both mean the same thing. The letter V is used to indicate an OR relationship between inputs or between inputs and outputs with this letter (V). The letter F indicates a connect-disconnect relationship. If the F (free dependency) inputs or outputs are active (1) the other usual normal conditions apply. If one or more of the F inputs are inactive (0), the related F output is disconnected from its normal output condition (it floats).



The input that controls or gates other inputs is labeled with a "C" or a "G", followed by an identifying number. The controlled or gated input or output is labeled with the same number. In this example, "1" is controlled by "G1."


When the controlled or gated input or output already has a functional label (X is used here), that label will be prefixed or subscripted by the identifying number.

If a particular device has only one gating or control input then the identifying number may be eliminated and the relationship shown with a subscript.


If the input or output is affected by more than one gate or control input, then the identifying numbers of each gate or control input will appear in the prefix or subscript, separated by commas. In this example "X" is controlled by "G1" and "G2."

8-30. Control Blocks


8-31. A class of symbols for complex logic are called control blocks. Control blocks are used to show where common control signals are applied to a group of functionally separate units. Examples of types of control blocks follow.

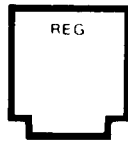


Register control block. This symbol is used with an associated array of flip-flop symbols to provide a point of placement for common function lines, such as a common clear.

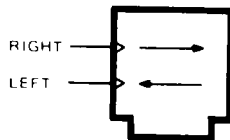


Shift register control block. These symbols are used with any array of flip-flop symbols to form a shift register. An active transition at the inputs causes left or right shifting as indicated.

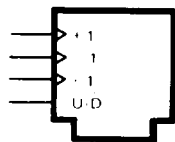

Counter control block. The symbol is used with an array of flip-flops or other circuits serving as a binary or decade counter. An active transition at the +1 or -1 input causes the counter to increment one count upward or downward, respectively. An active transition at the  $\pm 1$  input causes the counter to increment one count upward or downward depending on the input at an up/down control.

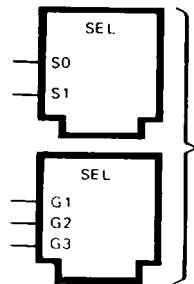


Selector control block. These symbols are used with an array of OR symbols to provide a point of placement for selection (S) or gating (G) lines. The selection lines enable the input designated 0, 1, ..., n of each OR function by means of a binary code where S0 is the least-significant digit. If the 1 level of these lines is low, polarity indicators ( $\triangleleft$ ) will be used. The gating lines have an AND relation with the respective input of each OR function: G1 with the inputs numbered 1, G2 with the input numbered 2, and so forth. If the enabling levels of these lines is low, polarity indicators ( $\triangleleft$ ) will be used.

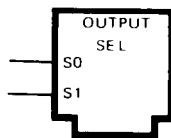


Output selector control block. This symbol is used with a block symbol having multiple outputs to form a decoder. The selection lines enable the output designated 0, 1, ..., n of each block by means of a binary code where S0 is the least-significant digit. If the 1 level of these lines is low, polarity indicators ( $\triangleleft$ ) will be used.

### 8-32. Complex Logic Devices


8-33. Logic elements can be combined to produce very complex devices that can perform more difficult functions. A control block symbol can be used to simplify understanding of many complex devices. Several examples of complex devices are given here.

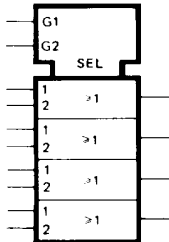


Selector Control Block used to simplify AND portion of a quad AND-OR select gate. When G1 is high, the data presented at the "1" inputs will be gated through. When G2 is high, the data presented at the "2" inputs will be gated through.

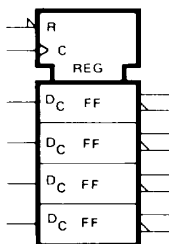


Register control block used to illustrate a quad D-type latch. There is a common active-low reset (R), and a common edge-triggered control input (C). Since there is only one dependency relationship, the controlling input is not numbered and the controlled functions (D) are subscripted with a C.

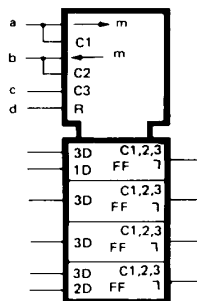

Shift Register Control Block used to show common Inputs to a bidirectional shift register. Notice that " $\rightarrow m$ " means shift the contents to the right or down by "m" units. And " $\leftarrow m$ " means shift the contents to the left or up by "m" units. Note: If  $m=1$ , it may be omitted. Inputs "a" and "b" are each single IC pins that have two functions. Input "a" enables one of the inputs to the top D-type flip-flop (1D), and also shifts the register contents down one unit. Input "b" enables one of the inputs to the bottom flip-flop (2D), and also shifts the register contents up one unit. Input "c" loads all four flip-flops in parallel (3D). Input "d" is a common reset. The output delay Indicator is used because these are master-slave flip-flops.

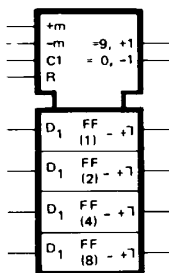

Counter Control Block used to show common inputs to a Presettable Decade Up/Down Counter. Notice that "+m" means count up (increment the count) by "m;" "-m" means count down by "m." Note: if  $m=1$ , it may be omitted. Since the D-type flip-flops are master-slave, the output delay indicator is used. The " $=9, t1$ " and " $=9, -1$ " notation defines it, as a decade counter; a binary counter would have carry indicated with " $=15, +1$ ." Flip-flop weighting is indicated in parenthesis.

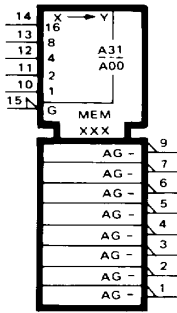

Read Only Memory (ROM) with 32 addresses. Address selection is determined by the five upper inputs which are decoded into 32 possible addresses (A00 through A31) corresponding to the weighting modifiers at the inputs. Input modifier G (pin 15) gates the outputs. Stored data will be read from the selected memory address if G is active (low). The output data pins (1-7 and 9) are active low. The "-" indicator shows the 8 outputs are capable of supplying low outputs only. A high output is usually supplied by a resistor to a "high" voltage.

### 8-34. TROUBLESHOOTING (FAILURE ANALYSIS)

8-35. Information to help locate a fault or trouble in the 5004A is given in the following material.

8-36. Several troubleshooting aids are permanently built-in the 5004A. The SELF-TEST front panel switch is one. The main assembly (motherboard) NORMAL SERVICE switch is another. The front panel GATE lamp is another. The four-front panel seven-segment digit displays are another. The front panel UNSTABLE SIGNATURE is another.

8-37. The front panel SELF-TEST switch operation is described in Section III of this manual.

### 8-38. Troubleshooting Flowchart

8-39. *Figure 8-1*, the troubleshooting flowchart may be used to locate a faulty component. A suggested sequence for troubleshooting is:

- a. Perform the Operator's Self-Test (see in Section II1).
- b. If the 5004A does not pass the Operators Self-test, perform the steps given in the troubleshooting flowchart (*Figure 8-1*).

### 8-40. Major Test Point Signatures

8-41. *Table 8-1* lists the signatures for the major test points.

### 8-42. Troubleshooting Signatures with SELF-TEST and NORMAL/SERVICE Switches

8-43. *Table 8-2* is a listing of signatures taken from a correctly operating 5004A with a second correctly operating 5004A. These signatures may be used to locate the cause of a malfunction in a 5004A Signature Analyzer. To take most of the signatures listed requires that the top cover of the 5004A be removed. Refer to the disassembly procedures before attempting to remove the top cover.

### WARNING

**IF THE 5004A TOP COVER IS REMOVED, DANGEROUS VOLTAGES ARE EXPOSED. ONLY QUALIFIED ELECTRONIC SERVICE TECHNICIANS SHOULD ATTEMPT TO SERVICE THE 5004A WITH COVERS REMOVED.**

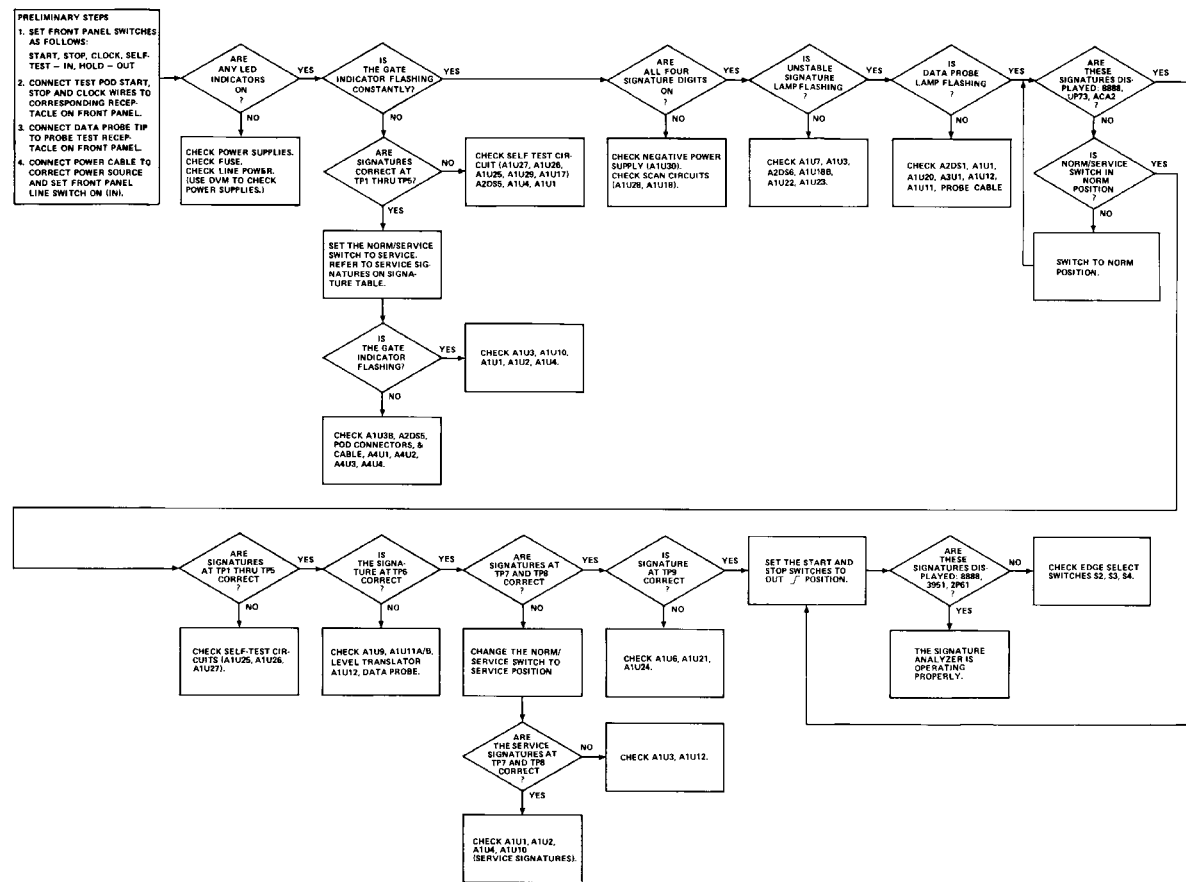



Table 8-1. Troubleshooting Signatures Major Test Points

Test Point*	Location	Signature	
		NORMAL	SERVICE
1	U25(11)	FUFU	←
2	U29(1)	54PH	←
3	U29(2)	0166	←
4	U29(3)	HH4b	←
5	U29(4)	HAU 1	←
6	U9(5)	596F	←
7	U11(8)	U36U	bP6F
8	U7(4), U24(9)	4C4F	125P
9	U24(13), U6(10)	F94H	CFU5

\*Test point numbers are shown on the schematic diagram for the 5004A.

Figure 8-1. Troubleshooting Flowchart

Table 8-2. SELF-TEST and NORMAL/SERVICE Signatures

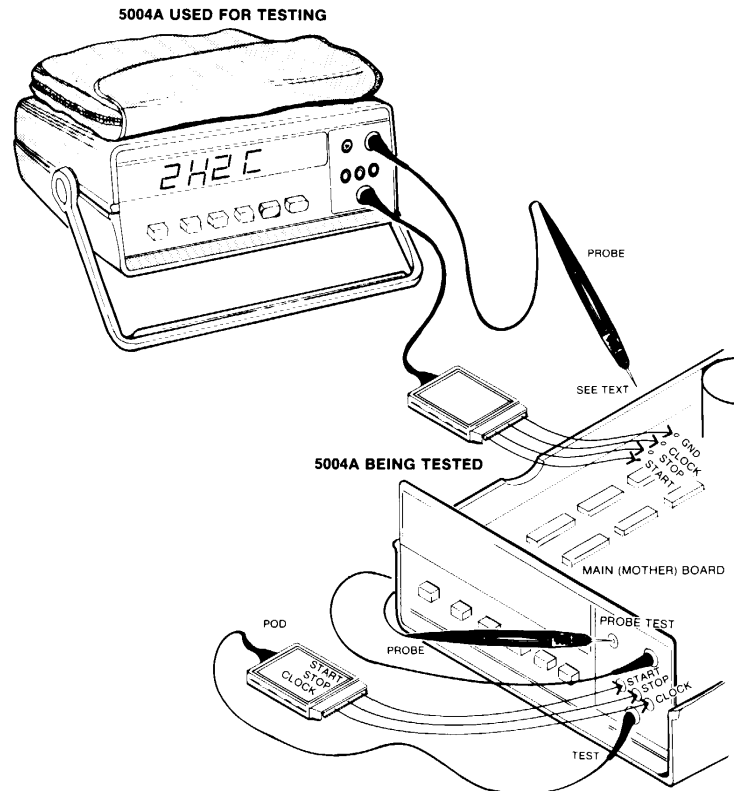

PINS	U1	U2	U3	U4	U5	U6	U7	U8	U9	U10	PIN
1 N	472A	5A22		1H08	5A22	472A	F517	UCP9	472A	7CA7	1
S	472A	9A43		H389	9A43	472A	P7AA	PF43	472A	7CA7	
2 N	A326	A326		09P3	472A	472A	0000	P36F	8F8H	7CA7	2
S	A326	A326		09P3	472A	472A	0000	P36F	8F8H	7CA7	
3 N	P40F	UCP9		1H08	472A	823H	CF33	7CA7	472A		3
S	P40F	PF43		H389	472A	A080	AC69	7CA7	472A		
4 N	464F	UCP9		UCP9	P40F	472A	4C4F	CF33	472A	0000	4
S	464F	PF43		PF43	P40F	472A	125P	AC69	472A	0000	
5 N	13F7	UCP9		UCP9	5829	596F	0F66	66P0	596F	472A	5
S	13F7	PF43		PF43	4427	596F	5574	6606	596F	472A	
6 N	4PF9	3P06		UCP9	1H4L0	0147	0000	UCP9	1P46	0000	6
S	4PF9	62CF		PF43	6H73	42L6	0000	PF43	1P46	0000	
7 N	09P3	0000		0000	0000	0000	0000	0000	0000	0000	7
S	09P3	0000		0000	0000	0000	0000	0000	0000	0000	
8 N	0000	0000		C445	66P0	0000	H4L0	472A	0000	13F7	8
S	0000	0000		1669	6606	0000	6H73	472A	0000	13F7	
9 N	0000	5829		5829	5829	0000	H4L1	FUFU		54PH	9
S	0000	A427		A427	A427	0000	H4L1	FUFU		54PH	
10 N		4PF9		P40F	P40F	F944	0F66	0863		464F	10
S		4PF9		P40F	P40F	CFU5	5574	0863		464F	
11 N	5829	4PF9		5829	P40F	AUF8	4596	7CA7		0166	11
S	A427	4PF9		A427	4PF9	HHH5	4596	7CA7		0166	
12 N	3P06	4PF9	54PH	1H08	5A22	2CAU	2946	7A33		0166	12
S	F61C	4PF9	54PH	H389	9A43	6PAH	2946	7A33		0166	
13 N	C445	A326	0166	1H08	P36F	1501	90P	4596		A446	13
S	2946	A326	0166	H389	P36F	1417	90P	4596		A446	
14 N	1H08	472A		472A	472A	472A	472A	472A		472A	14
S	H389	472A		472A	472A	472A	472A	472A		472A	
15 N	5A22							472A		472A	15
S	9A43							472A		472A	
16 N	472A							472A		472A	16
S	472A							472A		472A	

N - NORMAL  
S - SERVICE position of S7.

To get the signatures given in this table, set the two 5004A's controls as follows:  
5004A Being Tested  
LINE:OFF; START:OUT; STOP:OUT; HOLD:OUT; SELF-TEST:IN.  
5004A Used to Test  
Same as above except SELF-TEST:OUT  
Make the connections shown between the two 5004A's.

PIN	U11	U12	U13	U14	U15	U16	U17	U18	U19	U20	PIN
1 N	7CA7						90FP	0000	689Z		1
S	7CA7						90FP	0000	802C		
2 N	7CA7						HH53		443F		2
S	7CA7						HH53		80C-H		
3 N	8F8H		75U6	75U6	75U6	75U6	75U6		2CHF		3
S	8F8H		0261	0261	0261	0261	0261		99U2		
4 N	8F8H	0000	A096	A096	A096	A096		4C78	27U3		4
S	8F8H	0000	92PC	92PC	92PC	92PC		4C78	9H02		
5 N	8F8H	472A	3A0U	3A0U	3A0U	3A0U	0863	25CF	069C		5
S	8F8H	472A	9664	9664	9664	9664		25CF	0H4H		
6 N	7CA7		FU22	FU22	FU22	FU22	A096	7661	78CP		6
S	7CA7		C152	C152	C152	C152	92PC	7661	PH0C		
7 N	0000						0000	5U8U	P73H		7
S	0000						0000	5U8U	CH2U		
8 N	U36U		0000	0000	0000	0000	FU22	0000			8
S	6PF6		0000	0000	0000	0000	C152	0000			
9 N	C445		0000	0000	0000	0000	7A33	472A		9	9
S	2946		0000	0000	0000	0000	7A33	472A			
10 N	C445		0000	0000	0000	0000					10
S	2946		0000	0000	0000	0000					
11 N	472A		FH33	C826	F94H	AUF8	3A0U	0000			11
S	472A		FU4U	PU7H	CFU5	HHH5	9664	0000			
12 N	8F8H	8F8H	1501	6C7H	929A	475F	29PP	472A			12
S	8F8H	8F8H	1417	5553	U242	3003	29PP	472A			
13 N	7CA7	7CA7	APH9	5H97	2535	9U2		472A			13
S	7CA7	7CA7	3AAA	C822	U600	7282		472A			
14 N	472A		54F8	94H1	52A7	2CAU	472A	0000	0000		14
S	472A		UPU1	7CCH	67A8	6PAH	472A	0000	0000		
15 N			0000	0000	0000	0000		0000	0000		15
S			0000	0000	0000	0000		0000	0000		
16 N								472A	472A		16
S								472A	472A		

PIN	U21	U22	U23	U24	U25	U26	U27	U28	U29	U30	PIN
1 N	0147				F61C	0000	HH53		54PH		1
S	596F				F61C	0000	HH53		54PH		
2 N	0147				0000	0000	0000		0166		2
S	596F				0000	0000	0000		0166		
3 N	94FH			2CAU	0000	0000	0000		A446		3
S	7CCH			6PAH	0000	0000	0000		A446		
4 N	5F97	29PP		9FU2	2946				H4U1		4
S	C822	29PP		7282	2946				H4U1		
5 N	6C7H	7A33		475F							5
S	5553	7A33		3003							
6 N	C826	14HA		AUF8							6
S	PU7H	7782		HHH5							
7 N	0000	29H7		0000							7
S	0000	PSU1		0000							
8 N					4596	29PP	3A9A				8
S					4596	29PP	3A9A				
9 N		207P			7A33	H10F					9
S		A5C9			7A33	H10F					
10 N	54F8	F2P7	F2P7	52A7					29PP		10
S	UPU1	OFC1	OFC1	67A8					29PP		
11 N	APH9	0000		2535	FUFU	0863	0108		0863		11
S	3AAA	0000		U600	FUFU	0863	0108		0863		
12 N	1501	472A	207P	929A	F61C	0000	HH53				12
S	1417	472A	A5C9	U242	F61C	0000					
13 N	FH33	29PP	29H7	F94H							13
S	FUHU	29PP	PSU1	CFU5							
14 N	472A			472A	0108	0000	0863				14
S	472A			472A	0108	0000	0863				
15 N			14HA								15
S			7782								
16 N											16
S											

Table 8-2. SELF-TEST and NORMAL/SERVICE Signatures



#### 8-44. DISASSEMBLY AND REASSEMBLY PROCEDURES

8-45. To remove the 5004A covers, use the following procedure:

#### **WARNING**

**WHEN THE COVERS ARE REMOVED FROM THE 5004A, LINE VOLTAGES WHICH ARE DANGEROUS AND MAY CAUSE SERIOUS INJURY WHEN TOUCHED. DO NOT REMOVE THE COVERS UNLESS IT IS NECESSARY.**

1. Disconnect the power cable from the rear panel of the 5004A.
2. Turn the 5004A over with the cable case down. Four screws are exposed.
3. On the back panel of the 5004A loosen the two screws at the ends of the heat sink three or four turns (*see Figure 8-2*)

#### **NOTE**

**DO NOT loosen the transistor retaining screws (see Figure 8-2).**

4. Remove the four screws near the four corners of the cabinet bottom.
5. Hold the top and bottom covers together and turn the 5004A right side up.
6. Carefully lift the top cover off.

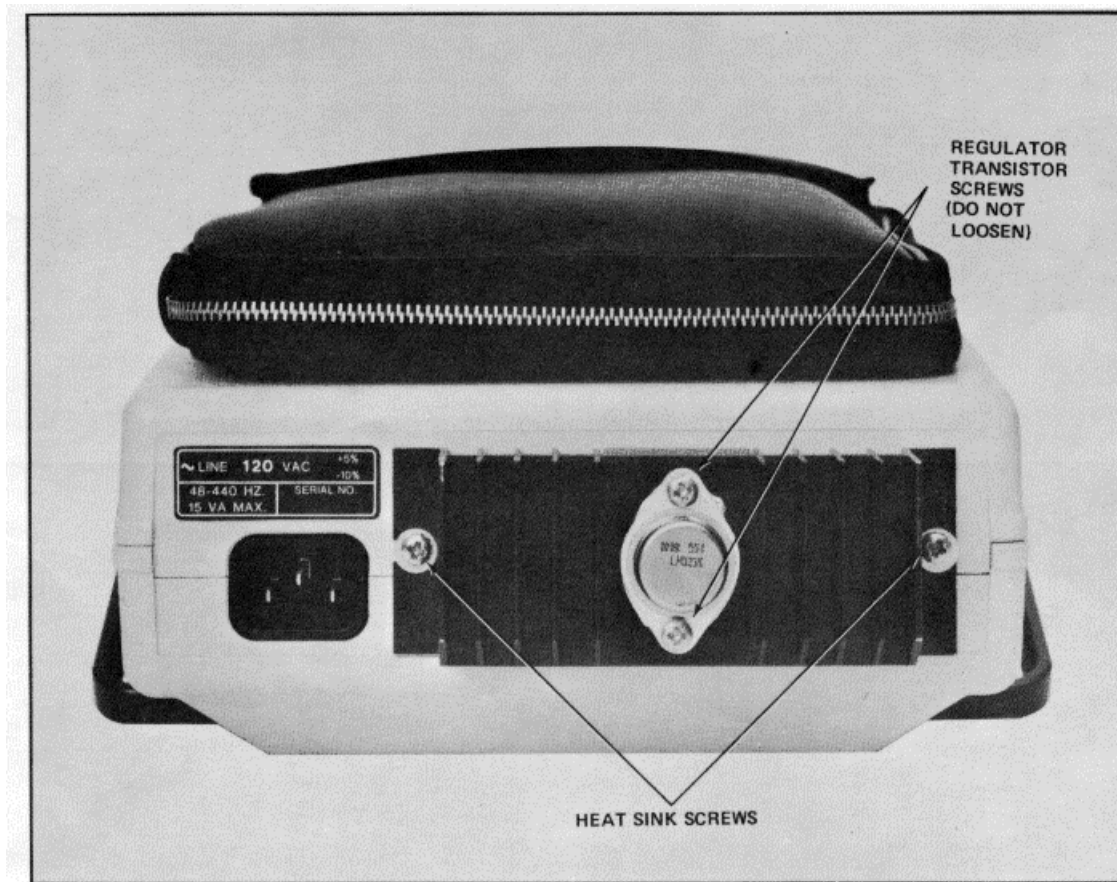


Figure 8-2. Heat Sink Screws Locations

**NOTE**

If the heat sink on the rear panel is still holding the cover together, loosen the sink screws a few more turns.

**WARNING**

**BE CAREFUL OF EXPOSED LINE VOLTAGE POINTS.**

7. If necessary the bottom cover can be removed.
8. To reassemble the 5004A reverse the preceding steps.

**8-46. Data Probe Disassembly and Reassembly**

8-47. To disassemble the data probe, use the following procedure.

1. Disconnect the power cable from the 5004A. Remove the GND wire from the probe.

**NOTE**

*Figure 6-1* shows the mechanical parts of the probe. *Figure 8-7* shows the probe with its covers removed.

2. Remove the probe tip by turning it with fingers counterclockwise.

**NOTE**

The red window has a projecting stud that fits in the body of the probe near the GND pin (off-set slightly).

3. Carefully pull the red window off the probe tip.
4. Slide the two half covers carefully off the probe printed circuit board.

**NOTE**

The two body shells interlock to cover the printed circuit board.

5. Reverse the preceding steps to reassemble the data probe.

**8-48. Gating Signals Pod Disassembly and Reassembly**

8-49. To disassemble the gating signals pod, use the following procedure.

1. Disconnect the power cable from the 5004A.

**NOTE**

*Figure 6-1* shows the mechanical parts of the pod. *Figure 8-7* shows the probe with its covers removed.

2. Squeeze the ends of the pod test leads connector and pull the connector off the pod.
3. Remove the four screws from the bottom cover of the pod, and carefully remove the top cover. The bottom cover can also be removed if necessary.

**NOTE**

The pod cable has a strain protector which fits in a slot in the covers of the pod.

4. Reverse the above procedure to reassemble the pod.

## 8-50. BLOCK DIAGRAM DESCRIPTION

8-51. In the following paragraphs a description of the 5004A Signature Analyzer is given to match Figure 8-3 the block diagram in this section. A more detailed description of the 5004A is given in the paragraphs following the heading: CIRCUIT THEORY (PRINCIPLES OF OPERATION) (SCHEMATIC DIAGRAM DESCRIPTION).

8-52. A 5004A Signature Analyzer requires four input signals: START, STOP, CLOCK, and DATA. START, CLOCK, and STOP inputs are applied to the 5004A through the GATING SIGNALS POD.

8-53. Data Signal Path. DATA input is through the DATA PROBE. Signals applied to the DATA PROBE are connected to dual paths which trigger at high and low voltage levels respectively. The output of these level detectors is at ECL level and drive a pair of ECL to TTL converters on the main assembly. A logic level detector across the ECL converters provides the drive for the logic level indicator at the data probe tip. The outputs of the ECL converters is translated from a possible three levels (high, bad (middle), and low) to standard high or low levels at the selected clock. (When a bad level appears at the input of the data probe, it is converted to whatever the previous data level was: (either high or low.) Data from the 3-to-2 level converter is applied to the pseudo-random word generator with corresponding gate and clock signals. For each different clocked data stream (series of bits) bracketed by a start and stop signal, a different word (signature) is generated by the word generator. Each signature is sent to the display latches which supply them to the decoder-driver and the signature comparator. The decoder-driver translates the signature to a special-form hexadecimal number which is applied to the display. Each succeeding signature is compared with the preceding signature in the signature comparator which will activate the UNSTABLE SIGNATURE lamp if two succeeding signatures are different. The RESET function for the entire 5004A is part of the DATA probe. RESET is activated by a switch (labeled RESET) on the DATA probe.

## 8-54. Clock, Start, and Stop Signal Paths

8-55. External CLOCK, START, and STOP signals are applied to the 5004A through the gating signals pod. Input CLOCK, START, and STOP signals are amplified, and connected to operator-controlled edge-select circuits. After edge-selection the CLOCK, START, and STOP signals are combined to form a gating (gate) control signal. (The external CLOCK signal is also buffered and used to time other sections of the 5004A.) The gate signal is presented on the front panel with a GATE indicator lamp. The gate signal is for on-off (start-stop) control of the word generator.

## 8-56. Scan/Test Oscillator (Internal Clock)

8-57. A .6 kilohertz signals is generated in the 5004A for display scan and test use. The scan signal controls switching the displays on and off (fast enough to be not noticeable) to lower power consumption and reduce the size of drive circuit components. In the SELF-TEST and NORMAL/SERVICE (troubleshooting) modes the internal test signal is used as a substitute for the external clock normally applied to the gating signals pod.

## 8-58. Self-Test

8-57. Part of the 5004A is a circuit used only for self-test of the signature analyzer. The self-test function is controlled by a front panel switch. In the self-test mode special signatures are generated using the internal test signal frequency divider output (ROM). If there is a defect in the 5004A the self-test signature will not be correct.

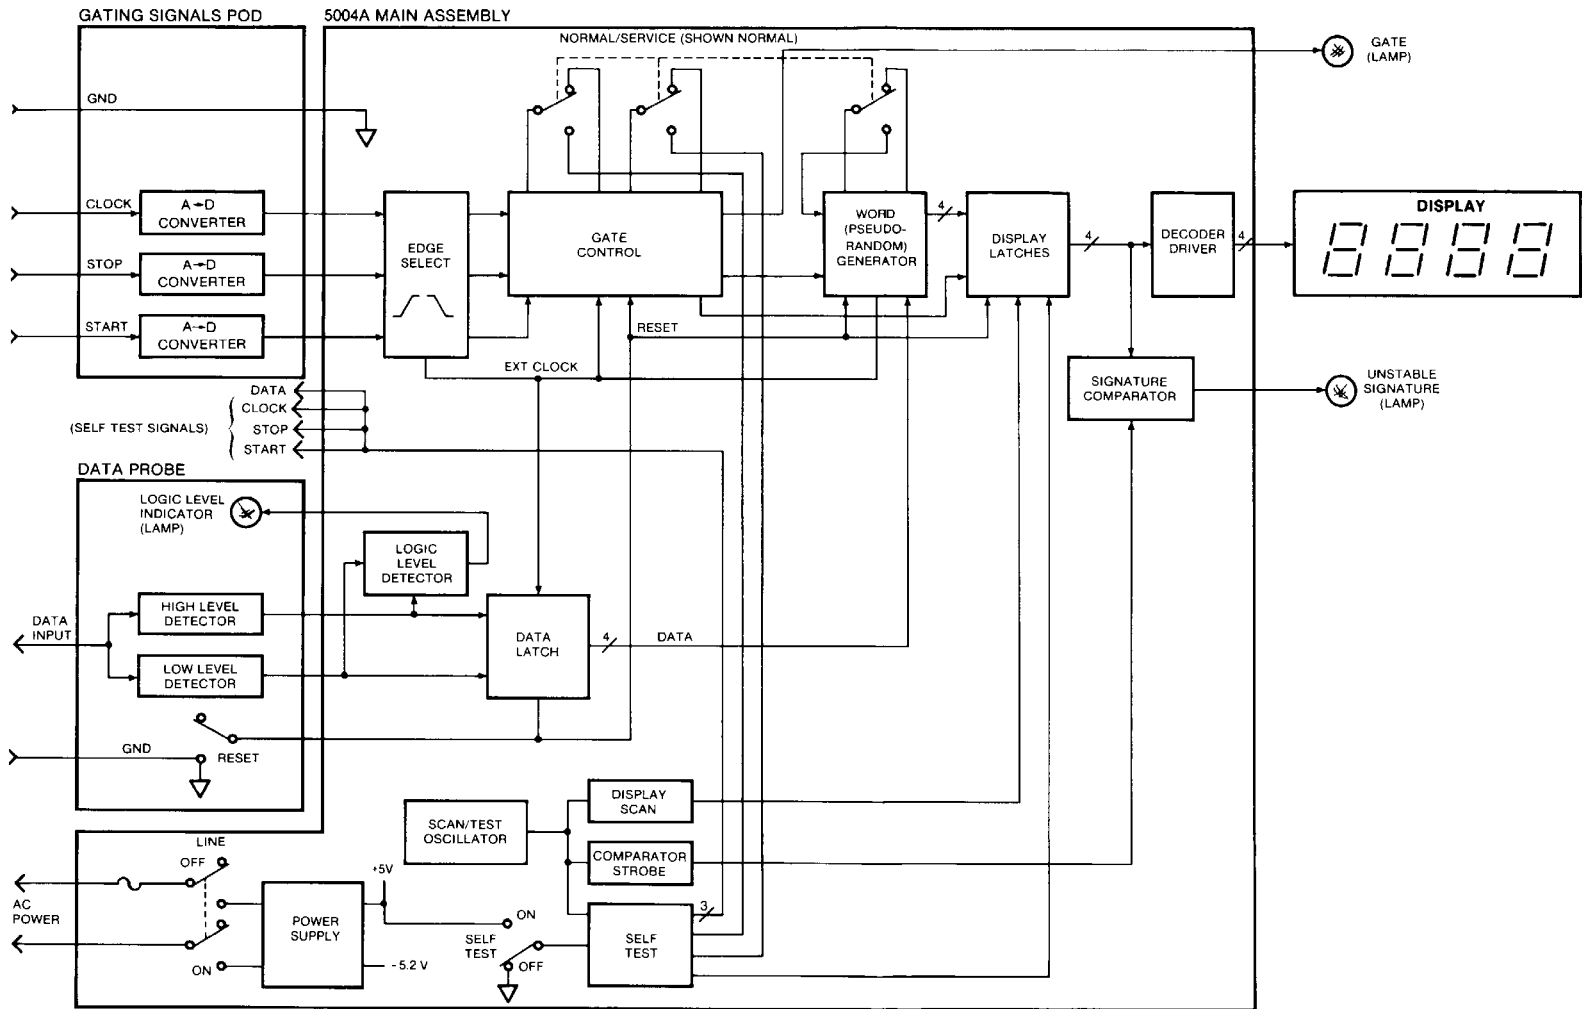


Figure 8-3.  
5004A CIRCUIT BLOCK DIAGRAM

### **8-60. Display Scan and Comparator Strobe**

8-61. The clock signal is used to time both the display scan and signature compactor strobe circuits. The digit display lamps are enabled less than full-time to conserve power.

#### **NOTE**

**The NORMAL/SERVICE switch is separate but related to the front panel SELF-TEST switch.**

### **8-62. Service (Troubleshooting) Mode**

8-63. On the main assembly of the 5004A a two-position switch, labeled NORMAL/SERVICE, can be used during fault locating (troubleshooting) procedures if the 5004A is not operating correctly.

### **8-64. Power Supply**

8-65. Alternating current line supply (mains) voltage is converted to the two positive and negative regulated direct current voltages required in the 5004A by the power supply circuit.

### **8-66. CIRCUIT THEORY (PRINCIPLES OF OPERATION)**

8-67. The following paragraphs give the circuit theory (principles of operation) for the 5004A Signature Analyzer to explain the schematic diagram. A previous section describes the 5004A at the block diagram level. This BLOCK DIAGRAM DESCRIPTION should be studied and learned before the following paragraphs are studied.

### **8-68. Purpose of 5004A**

8-69. The 5004A Signature Analyzer is designed to be used in testing the correctness of operation of certain complex digital logic electronic instruments or systems. A technique of testing called signature analysis is used with the 5004A and compatible instruments. Refer to the paragraph titled Signature Analysis in Section I for an explanation of signature analysis.

### **8-70. Schematic Diagram**

8-71. The 5004A schematic diagram is presented with the four inputs on the left side, and the flow of signals is generally from the left to the right side where the output indicators are presented. Outputs are four digits (seven-segment LED's) and two single-LED function/condition indicators. Refer to the schematic diagram notes for an explanation of the schematic symbol system used. The ac line power input and dual-voltage (regulated) power supply are on the lower left side of the schematic.

### **8-72. Gating Signals Pod**

8-73. The gating signals pod is the input for the CLOCK, START, and STOP signals to the 5004A. Requirements for these signals are given in Section I. A voltage regulator, U4, for -5.2V on the pod board reduces power dissipation in the main assembly. Amplifier, U1, is used as a voltage follower to provide the 1.4-volt reference level for the three input amplifier-converters. All three input signals are each applied to three separate identical circuits. The input amplifier-converters produce high-speed complementary-output ECL-level signals for the main assembly.

### **8-74. Edge Selection**

8-75. The three ECL-level pulse signals from the pod (START, STOP, and CLOCK) are applied separately to three front-panel switches which may be used to select the polarity of any input signal. Changing the polarity of a signal effectively selects the opposite edge of the input signal as the control for that channel.

## 8-76. ECL-to-TTL Level Converters

8-77. After the edge select switches the gating signals are applied to four separate ECL-to-TTL level converters. (The CLOCK signal is applied to two separate converters, U12A and B, for two separate paths.) The outputs of the START and STOP level converters are applied to latches which are controlled by the CLOCK signal. The latches outputs are applied to the gate control circuit.

## 8-78. Gate Control

8-79. The input START and STOP signals are processed in the gate control circuit to produce a definite time window during which data is received by the word generator (described later). Operation of the gate control circuit is described in the following paragraph.

## 8-80. State Diagram

8-81. Figure 8-4 is a state diagram of the functioning of the gate control circuits. NOTE: Positive-true logic is used. The INITIAL state normally occurs: when the 5004A has power switched on, or when the data probe RESET switch is pressed, or when a STOP and START pulse are received in RUN mode. In the INITIAL state, if START is 0 the state will change to ARMED. In the ARMED state the 5004A is ready to receive a START pulse and proceed to either RUN mode. (Note that if a STOP pulse is received, the state will be intermediate RUN; and to progress to full RUN, STOP must be 0.) From full RUN the state will return to INITIAL if START and STOP pulses are received. If START remains at 0 and a STOP pulse is received, the state returns to ARMED. The HOLD state occurs when the HOLD switch is in and a STOP pulse is received in the full RUN mode. In the HOLD state, the data probe RESET switch must be pressed to return to the INITIAL state. All modes except HOLD have no-change conditions. For example in the ARMED state if the START line remains at 0, the 5004A will not change to RUN. With proper START, STOP, and CLOCK signals the gate control proceeds through the states repetitively. The gate control circuit output starts and stops the word generator, and provides the on-off control of the GATE lamp to show when the START and STOP signals are received and implemented.

## 8-82. Data Signal Flow

8-83. In normal operation, data signals from the unit being tested are applied to the 5004A high-speed data probe. The data probe (A3) discriminates whether the input TTL level is high or low or bad (middle level). If the input level is high it is detected by U1A, if it is low it is detected by U1B. The input signal is converted to a pair of two-line differential (complementary) ECL signals and sent to the main assembly. At the input to the main assembly the data signal is converted from a pair of two-line (differential) ECL signals to a pair of signals at TTL level.

8-84. The pair of data signals at pins 6 and 12 of U11 (A and B) are applied to the data latch, U9. If the data input signal is a high level or a low level it is clocked out of the data latch on pin 5. If it is a bad (middle) level signal the previous level signal is clocked out of the data latch. (A bad level appears as two lows at the U9J and K inputs.)

8-85. In the main assembly the data TTL signals at the junction of R37 and R38 are applied to U20, a logic level detector. The detector responds to the combined TTL level (or pulses) of the input signal, and it controls the indication of the logic level indicator lamp, DS1, in the data probe. The two TTL data signals are applied to the data latch, J9. Data from U9(5) is applied to U6(5), an "exclusive-OR" gate. This is the input of the pseudo-random word generator.

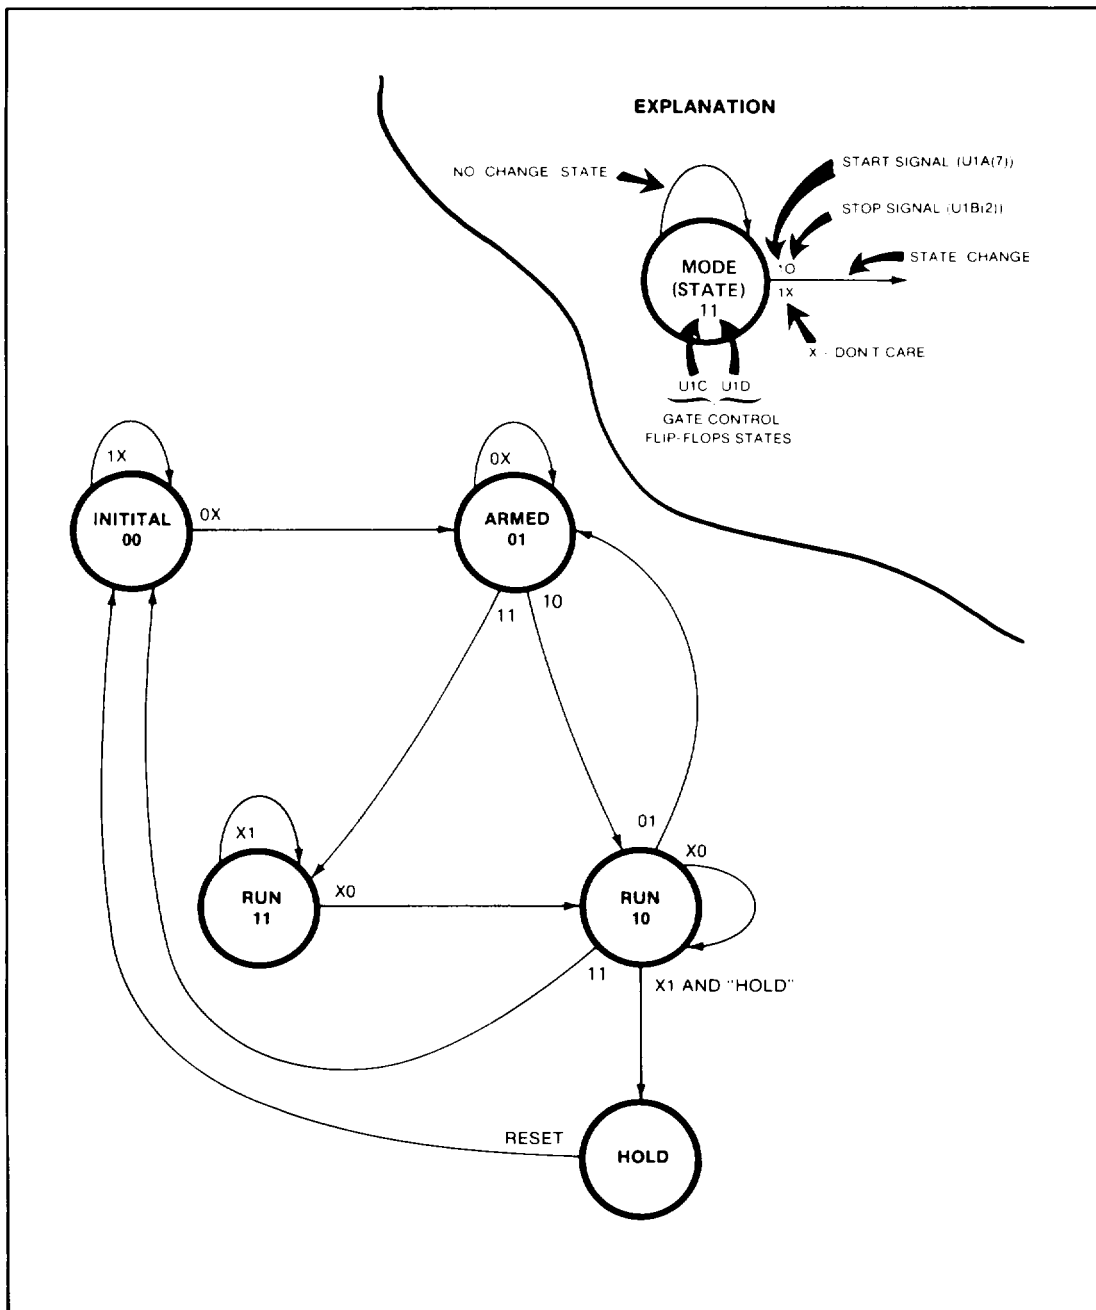


Figure 8-4. Gate Control State Diagram

**8-86. Pseudo-Random Word Generator (Data Signal Path Continued)**

8-87. The pseudo-random word generator is the central principle of the signature analysis method. A shift register with some outputs fed back is used to generate a pseudo-random word (signature) output. Input data goes through U6 to shift register U21. From U21(13) the data goes to U24(1 and 2) input. One output from U21 (pin 12) and three outputs from U24 (pins 3, 6, and 13) are fed back to the U6 inputs to combine with the input data and modify the resultant output of the shift registers. The outputs of the two shift registers (U24 and U21) are the unique "signatures."

**8-88. Display Control (Data Signal Path Continued)**

8-89. The 16-line signature output of the word generator is applied to the inputs of registers U15, U16, U13, and U14 which drive U19 a memory used as a character decoder. The output of U19 is applied to the four LED seven-segment digits on the display assembly.

**8-90. Signature Comparator (UNSTABLE Signature Lamp)**

8-91. As each signature is applied to the character decoder, U19, it is also stored in memory U22. When the next signature is received it is compared with the previous signature in U23. If the two signatures are different, U23 outputs a pulse to U7A which is sent to pulse-on the UNSTABLE SIGNATURE lamp on the display assembly, A2. If succeeding signals are identical, U23 does not send a pulse to the lamp. The comparator receives a low-frequency strobe signal from U18B which controls the timing of a store and compare cycle.

**8-92. Scan/Test Oscillator**

8-93. U28 is a low-frequency (.6 KHz) square wave oscillator. The output of U28 is used for the test circuit and to scan the displays.

**8-94. Display Scan**

8-95. The front-panel-switched self-test circuit includes U27, U25, U29, and U17. The four-bit counters, U27 and U25 are cycled by a signal from the self-test oscillator, U28, through U26. Outputs of U27 and U26 address memory U29 which supplies START and STOP signals in the self-test mode. All possible states of the gate control circuit are exercised in each self-test cycle to check proper operation. Self-test signals are applied to the inputs of the 5004A to allow all circuits to be tested. Part of the test besides specific signatures is to apply trash to U17 which will exercise all seven segments of each display digit.

**8-98. NORMAL/SERVICE Test Switch**

8-99. The NORMAL/SERVICE test switch on the main assembly allows all feedback paths in the 5004A to be opened for complete signature analysis testing, with a second 5004A Signature Analyzer. (Refer to the troubleshooting procedures in this section.)

**8-100. INPUT SIGNAL TIMING**

8-101. Figure 8-5 shows the timing relationship between the input, CLOCK, START, DATA, and STOP signals. The diagram shows that the START signal must transition from low to high before the gate will open, and data in the middle level is accepted as the preceding condition.














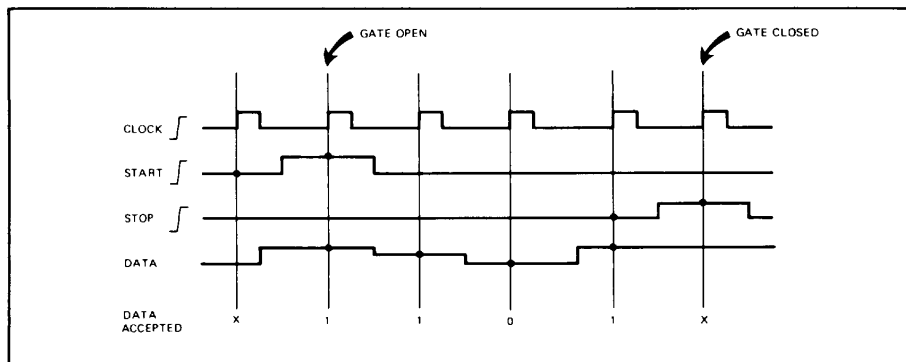



Figure 8-5. Input Signals Timing



**SCHEMATIC DIAGRAM NOTES**

Resistance in ohms, capacitance in picofarads, inductance in millihenries unless otherwise noted.

- \* Asterisk denotes a factory-selected value. Value shown in typical. Part may be omitted.
-  Tool-aided adjustment.  Manual control.
-  Encloses front-panel caption.
-  Encloses rear-panel caption.
-  Encloses interior or printed-circuit board caption.
-  Circuit assembly borderline.
-  Other assembly borderline. Also used to indicate mechanical interconnection (ganging).
-  Wiper moves toward CW with clockwise rotation of control (as viewed from shaft or knob).
-  Numbered Test Point.  
Measurement aid provided
-  Lettered Test Point.  
No measurement aid provided.
-  A direct conducting connection to the earth, or a conducting connection to a structure that has a similar function (e.g., the frame of an air, sea, or land vehicle).
-  A conducting connection to a chassis or frame.
-  Common connections. All like-designated points are connected.



Indicates multiple paths represented by only one line. Letters or names identify individual paths. Numbers indicate number of paths represented by the line.

**Integrated Circuit Power Terminals**

Unless noted otherwise\*, +5 volts is applied to each integrated circuit as given below:

14-Pin Units	Power	16-Pin Units
Pin 14	+5V	Pin 16
Pin 7	Return	Pin 8
<b>Exceptions</b> <b>U25, U26, U27</b>		
Pin 14	+5V	
Pin 10	Return	

**NOTE**

Several integrated circuits use the -5.2V power. The -5.2V pins are shown on the schematic diagram.

Figure 8-6. Schematic Diagram Notes

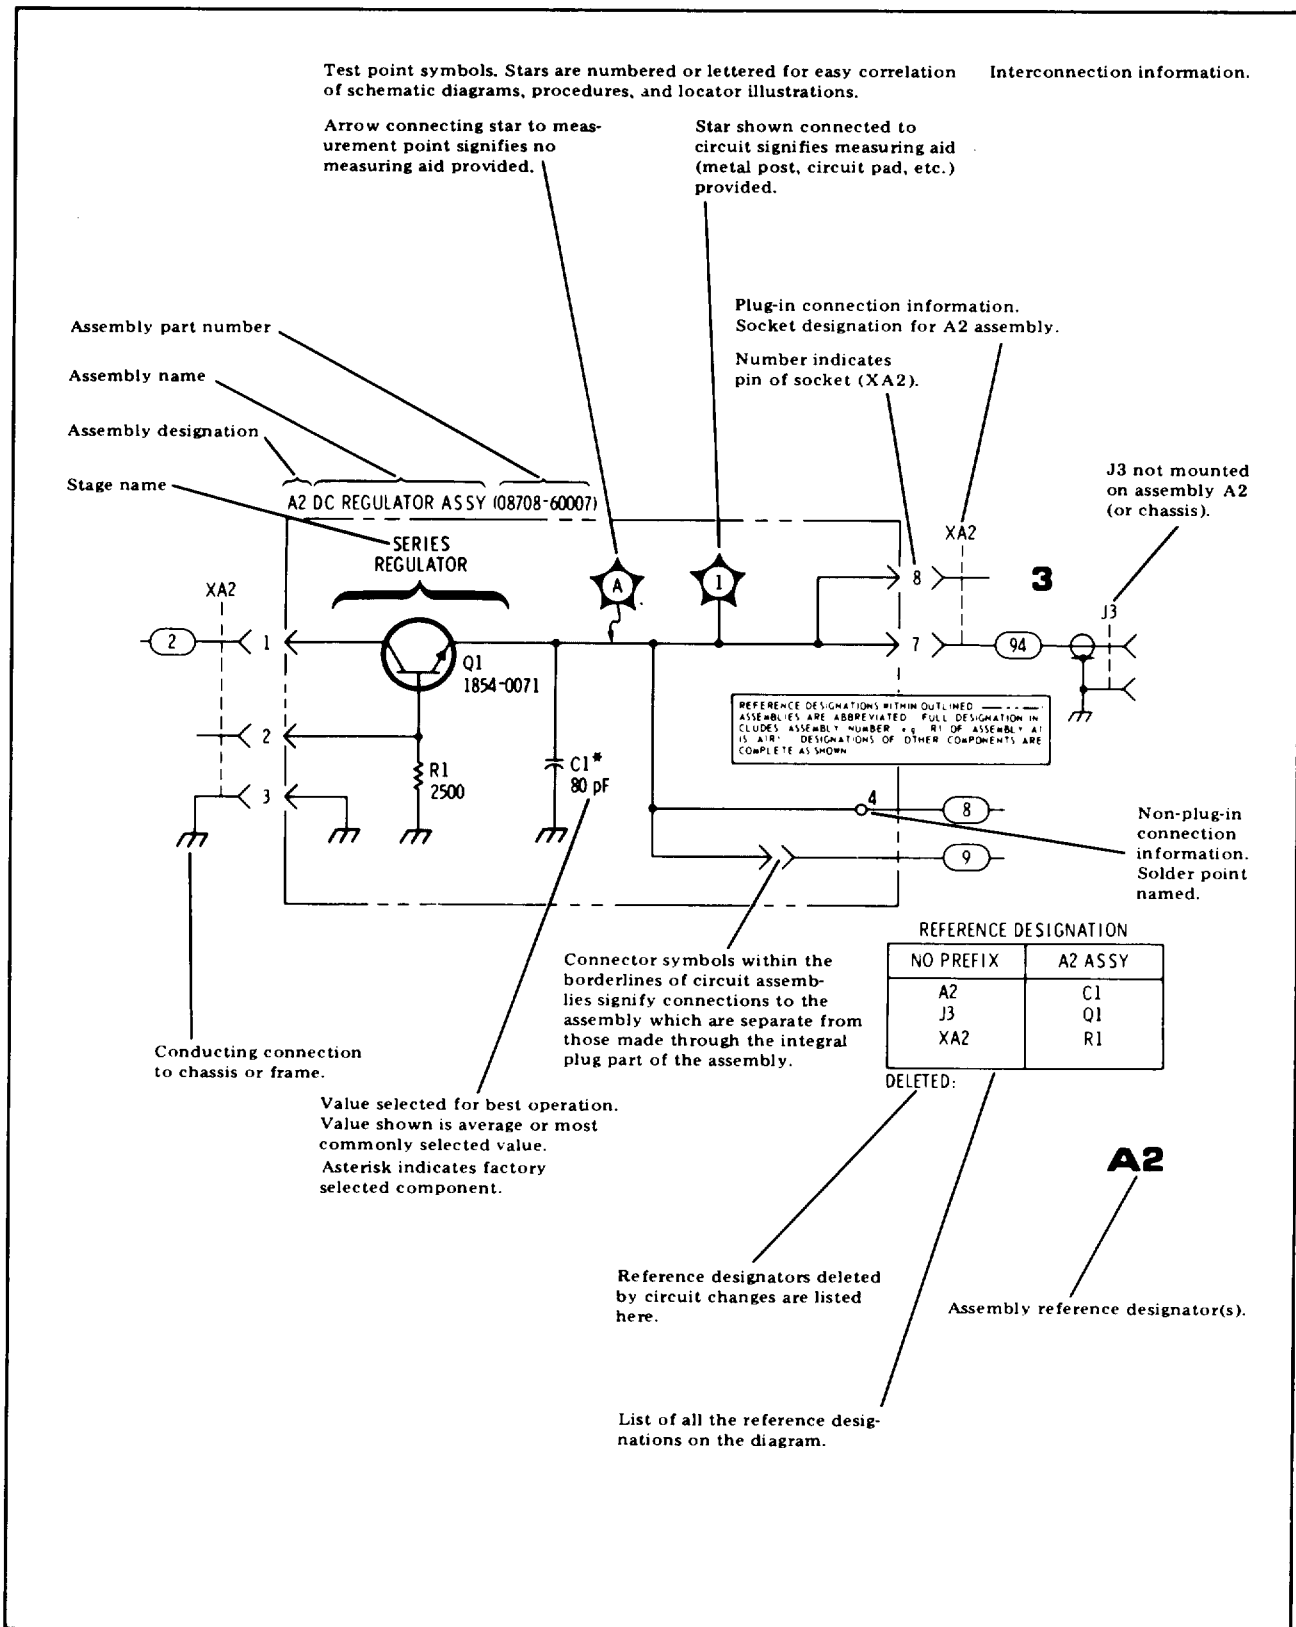


Figure 8-6. Schematic Diagram Notes (Continued)

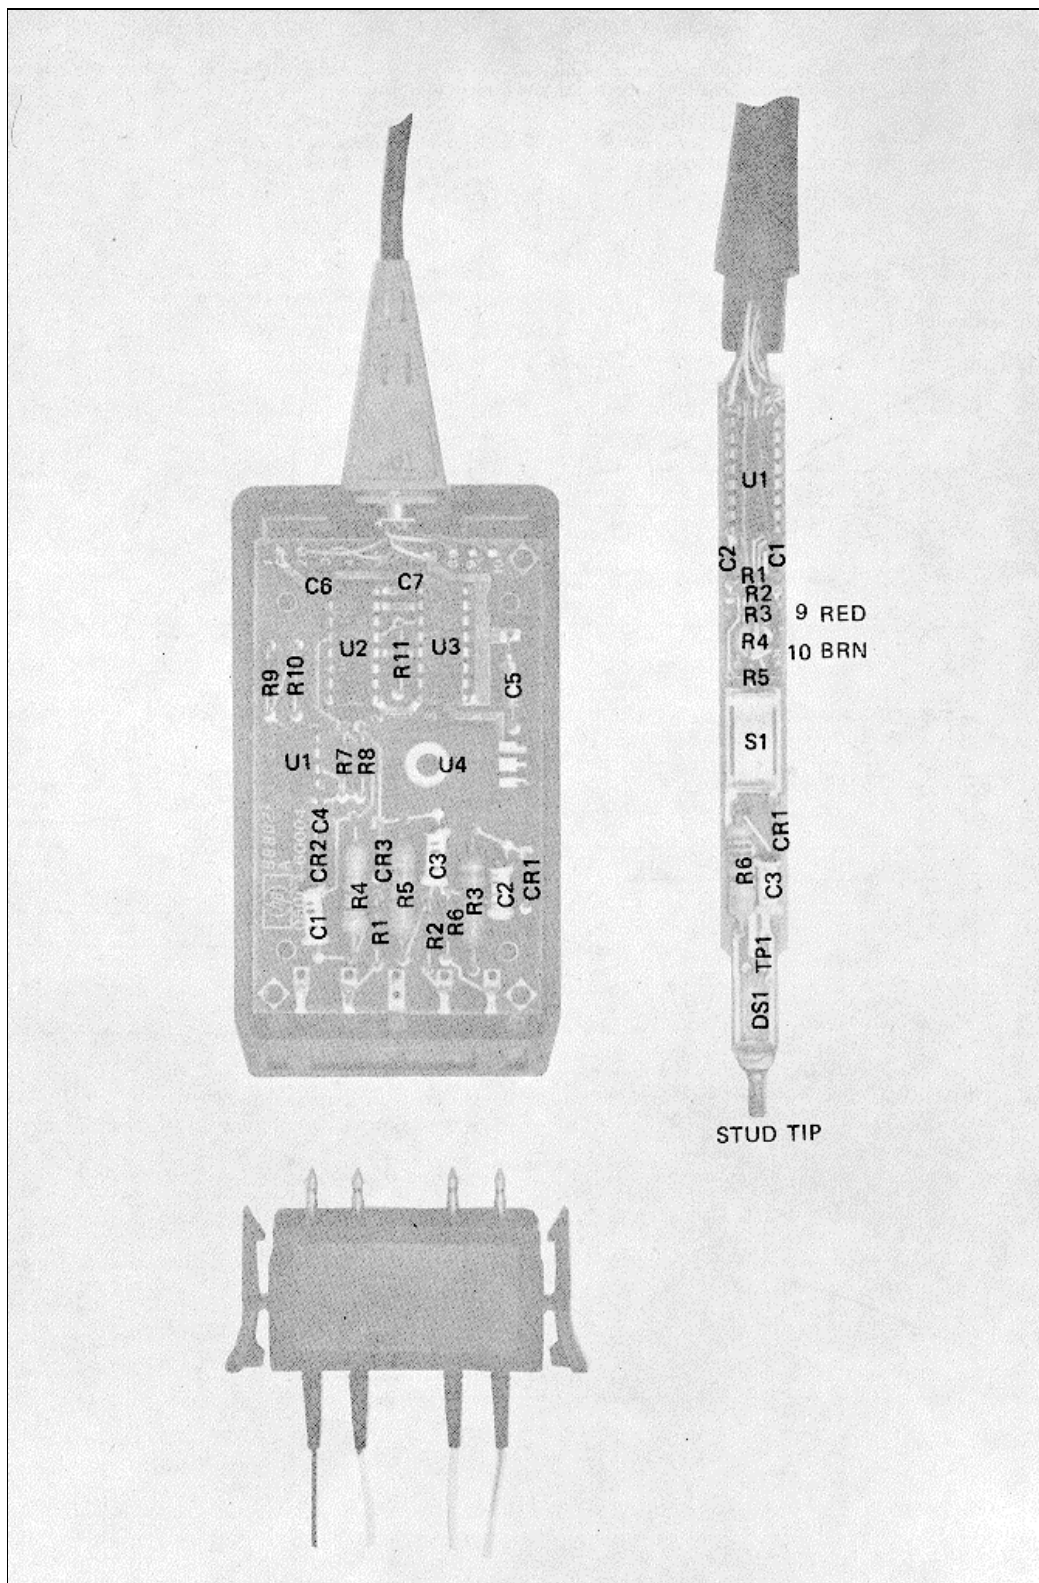


Figure 8-7. Probe and Pod (A3 and A4) Component Locations

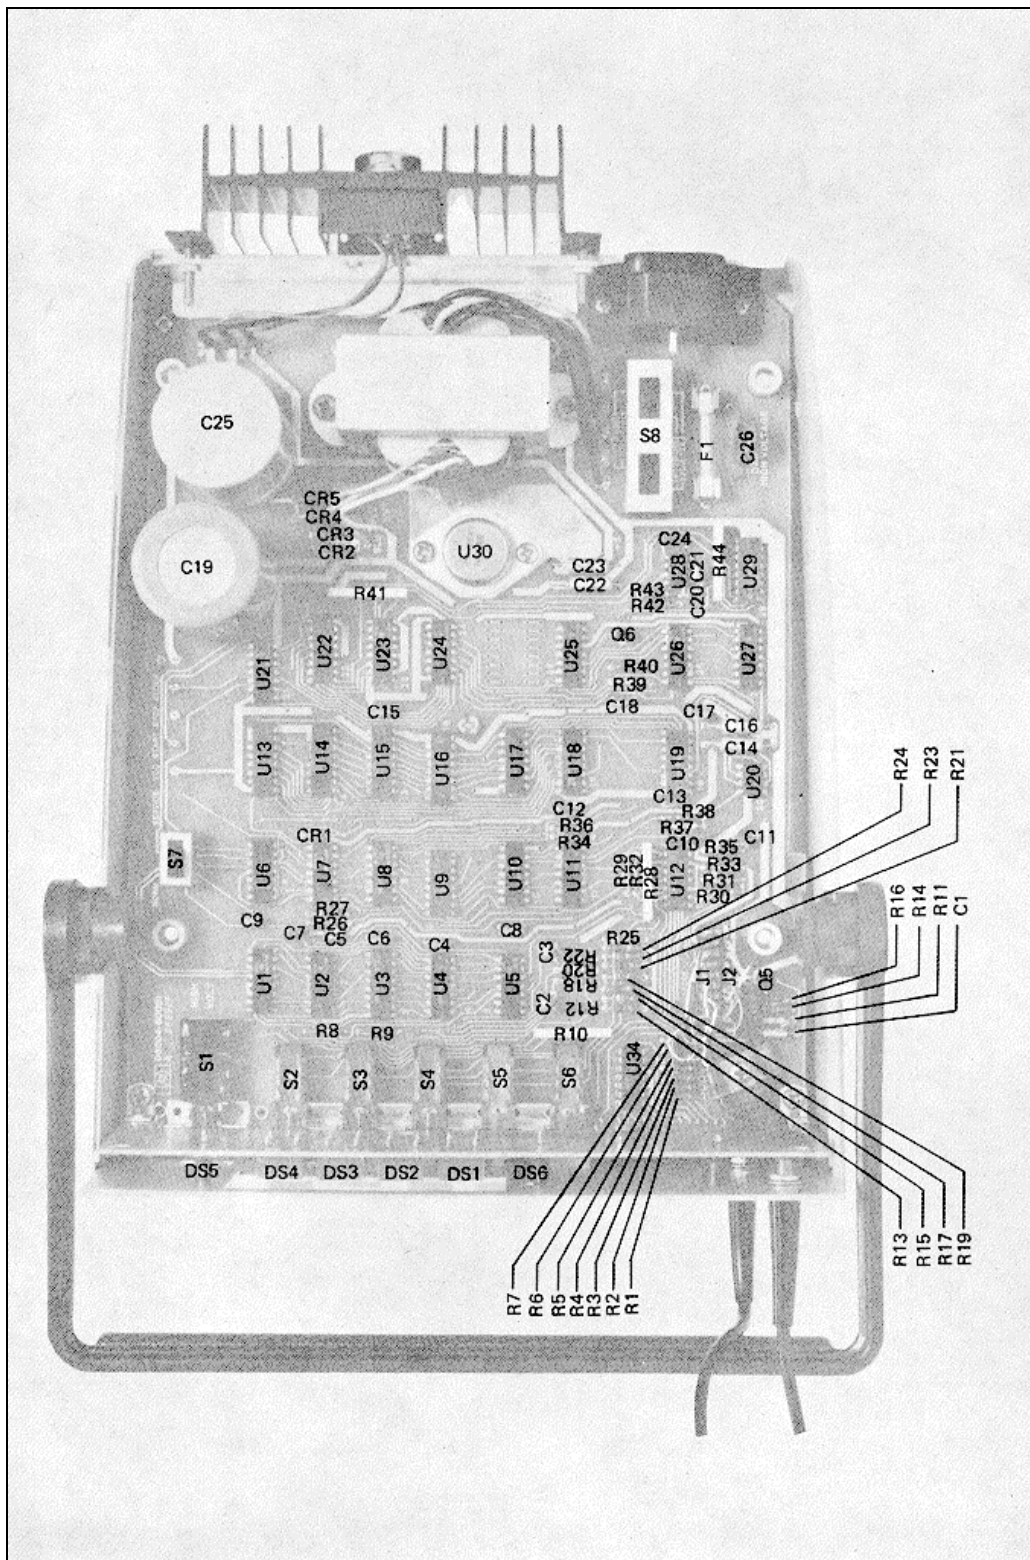


Figure 8-8. Display Board and Main Board (A1) Component Locations

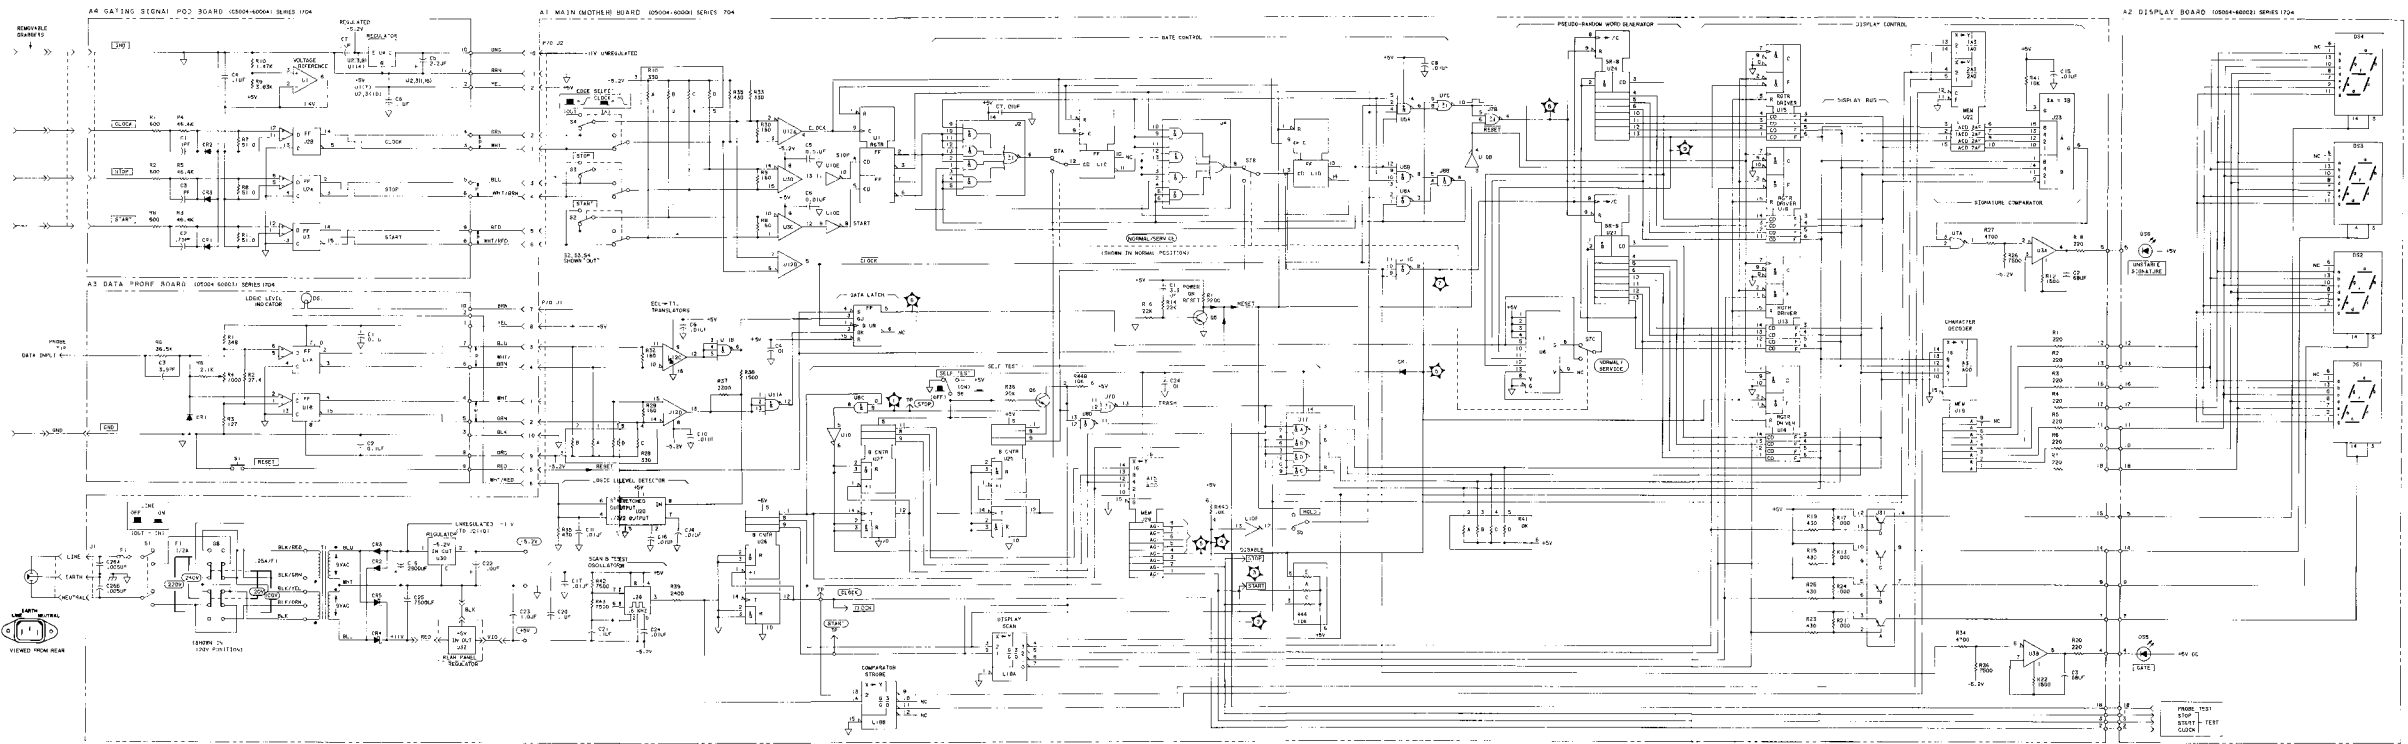


Figure 8-9. Schematic Diagram

# SALES & SERVICE OFFICES

## AFRICA, ASIA, AUSTRALIA

**AMERICAN SAMOA**  
Calculators Only  
Oceanic Systems Inc.  
P.O. Box 777  
Pago Pago Bayfront Road  
Pago Pago 96799  
Tel: 633 3513  
Cable: OCEANIC Pago Pago

**ANGOLA**  
Telectra  
Empresia Technica de Equipamentos  
Electronics, S.A. R.L.  
R. Barbosa Rodrigues, 42/1 OT  
Cava Postal 6467  
**Luanda**  
Tel: 35515 6  
Cable: TELECTRA Luanda

**AUSTRALIA**  
Hewlett-Packard Australia  
Pty. Ltd.  
11-41 Joseph Street  
Broadburn Victoria 3130  
P.O. Box 35  
**Doncaster East** Victoria 3109  
Tel: 89 6331  
Cable: HEWARD Melbourne  
Hewlett-Packard Australia  
Pty. Ltd.  
31 Bridge Street  
**Pymble**  
New South Wales 2073  
Tel: 449 6566  
Telex: 21561  
Cable: HEWARD Sydney  
Hewlett-Packard Australia  
Pty. Ltd.  
153 Greenhill Road  
**Perth** 5063 S.A.  
Tel: 212 5911  
Telex: 82536 ADEL  
Cable: HEWARD ADELAIDE  
Hewlett-Packard Australia  
Pty. Ltd.  
41 Suring Highway  
**Needlands** W.A. 8009  
Tel: 86 5455  
Telex: 93859 PERHT  
Cable: HEWARD PERTH  
Hewlett-Packard Australia  
Pty. Ltd.  
121 Wollongong Street  
**Fyshwick** A.C.T. 2609  
Tel: 95 3733  
Telex: 62950 Canberra  
Cable: HEWARD CANBERRA  
Hewlett-Packard Australia  
Pty. Ltd.  
5th Floor  
Teachers Union Building  
495-499 Boundary Street  
**Spring Hill** 4000 Queensland  
Tel: 29 1544  
Telex: 421333 BRHSBAN

**GUAM**  
Medical Pocket Calculators Only  
Guam Medical Supply Inc.  
Jay East Building, Room 210  
P.O. Box 8947  
**Tamuning** 96911  
Tel: 645 4513  
Cable: FARMED Guam

**HONG KONG**  
Schmidt & Co. (Hong Kong) Ltd.  
P.O. Box 297  
Cunningham Centre  
19th Floor  
Cantonment Road, Central  
**Hong Kong**  
Tel: 255251 5  
Telex: 74766 SCHMC HK  
Cable: SCHMIDTCD Hong Kong

**INDIA**  
Blair Star Ltd.  
Kastur Buildings  
Jamsnedi, Tara Rd  
**Bombay** 400 020  
Tel: 2156  
Cable: BLUEFRST  
Blair Star Ltd.  
Suraj  
414 2 Vr. Savarkar Marg  
Rajbhawan  
**Bombay** 400 025  
Tel: 45 76 8  
Telex: 4093  
Cable: HINDISTBLUE  
Blair Star Ltd.  
Band House House  
Rajbhawan  
**Bombay** 400 025  
Tel: 45 74 01  
Cable: BLUESTAR  
Blair Star Ltd.  
14 40 Dora Lines  
**Kanpur** 208 001  
Tel: 6 88 52  
Telex: 292  
Cable: BLUESTAR  
Blair Star Ltd.  
7th Floor  
P.O. Box 506  
**Calcutta** 700 001  
Tel: 23 0131  
Telex: 7655  
Cable: BLUESTAR  
Blair Star Ltd.  
7th & 8th Floor  
Bhandari House  
91 Netaji Place  
**New Delhi** 110024  
Tel: 63470 & 635166  
Cable: BLUESTAR  
Blair Star Ltd.  
Raj Singh House  
11 11A Margdarh Road  
**Bangalore** 560 025  
Tel: 430  
Cable: BLUESTAR

Blair Star Ltd.  
Meeakon Mahanah  
167/8 Mahatma Gandhi Rd  
**Cochin** 682 016 Kerala  
Tel: 12069 32161 32282  
Telex: 046 514  
Cable: BLUESTAR  
Blair Star Ltd.  
1-11-11  
Salween Devi Road  
**Secunderabad** 500 003  
Tel: 10126 10127  
Cable: BLUEFRST  
Telex: 459  
Blair Star Ltd.  
234 Main Mahatma High Road  
**Madras** 600034  
Tel: 62066  
Telex: 041339  
Cable: BLUESTAR  
Blair Star Ltd.  
Nuthra Mansions  
705 River Road  
**Jamshedpur** 831 001  
Tel: 2161  
Cable: BLUESTAR  
Telex: 2440  
**INDONESIA**  
BERCA Indonesia P.T.  
P.O. Box 496  
1st Floor J.I. Candi Raya 61  
**Jakarta**  
Tel: 56038 40169 14986  
Telex: 42891  
Cable: BERCACON  
BERCA Indonesia P.T.  
J.I. Candi Raya Gedung  
**Surabaya**  
Tel: 441499

**ISRAEL**  
Electronics & Engineering Div.  
of Motorola Israel Ltd.  
16 Kremenka Street  
P.O. Box 25016  
**Tel Aviv**  
Tel: 03 349 73  
Telex: 33569  
Cable: BASTEL Tel Aviv

**JAPAN**  
Yokogawa Hewlett-Packard Ltd.  
1-59-1 Yoyogi  
Shinjuku-ku, Tokyo  
Tel: 03 320 2281 93  
Telex: 232 2224449  
Cable: YHPMARKET TOK 24 174  
Yokogawa Hewlett-Packard Ltd.  
Nissin Ibaraki Building  
2-8 Kasuga 2-Chome, Ibaraki-shi  
**Osaka** sh.  
Tel: 0726 23 1641  
Telex: N10198 YHP JSAKA  
Yokogawa Hewlett-Packard Ltd.  
Nakano Building  
24 Kami Sakuma-cho  
Nakamachi-ku, **Nagoya** 450  
Tel: 052 571 5171

Yokogawa Hewlett-Packard Ltd.  
Yokogawa Building  
274-1 Tsuyama-cho  
Kanagawa-shi  
**Yokohama**  
Tel: 045 412 1452  
Telex: 382 3202 YHP YOK  
Yokogawa Hewlett-Packard Ltd.  
Mitsui Building  
1-1, Uchimaie, Sakai-cho, Maie  
**Mito** (Ibaragi) sh.  
Tel: 0292 25 1470  
Yokogawa Hewlett-Packard Ltd.  
Inoue Building  
1148-1 Ito, Asahi-cho, 1-Chome  
**Atsugi** Kanagawa 243  
Tel: 0462 24 0457  
Yokogawa Hewlett-Packard Ltd.  
Inoue Building  
1348-3 Asahi-cho, 1-Chome  
**Atsugi** Kanagawa 243  
Tel: 0462 24 0457  
Yokogawa Hewlett-Packard Ltd.  
Kimura Building  
3rd Floor 20  
**2-Chome, Tsukuba**  
**Kumagaya** Saitama 360  
Tel: 0485 24 6563

**KENYA**  
Technical Engineering Services  
E & E Ltd.  
P.O. Box 18311  
**Nairobi**  
Tel: 557726 556762  
Cable: PROTON  
Medical Only  
International Aerodrome A Ltd  
P.O. Box 19012  
Nairobi Airport  
**Nairobi**  
Tel: 32805 56  
Telex: 22201 22301

**KOREA**  
Samsung Electronics Co. Ltd.  
20th Fl. Dongbang Bldg. 250  
2 KA, G.P.O. Box 2775  
Taeyoung Ho, Chung Ku  
**Seoul**  
Tel: 241 2410 9  
Telex: 227575  
**MALAYSIA**  
Teknik Mutu Sdn Bhd  
2 Karong 13 KA  
Section 13  
**Petaling Jaya Selangor**  
Tel: Kuala Lumpur 54994  
Telex: MA 37605  
Protel Engineering  
P.O. Box 1907  
Lot 259 Satok Road  
Kuching **Sarawak**  
Tel: 2400  
**MOZAMBIQUE**  
A.N. Gonçalves Lda  
162 1 Av. 14 Av. O Luis  
Caixa Postal 107  
**Lourenco Marques**  
Tel: 27091 27114  
Telex: 6 203 Neqon Mo

**NEW ZEALAND**  
Hewlett-Packard N.Z. Ltd.  
4 12 Cluckmann Street  
Kilbirnie, Wellington 3  
Mailing Address: Hewlett-Packard  
N.Z. Ltd.  
P.O. Box 9443  
Courtyard Place  
**Wellington**  
Tel: 827 199  
Telex: 42 8819  
Hewlett-Packard Wellington  
Hewlett-Packard N.Z. Ltd.  
Pakuranga Professional Centre  
26 Pakuranga Highway  
**Pakuranga**  
Tel: 561 451  
Telex: 42 8839  
Cable: HEWARD Auckland  
Analytical Medical Only  
Medical Supplies N.Z. Ltd.  
Scientific Division  
29 Lenton Grove Rd, Newmarket  
P.O. Box 1234  
**Auckland**  
Tel: 75 289  
Telex: 7498 MELDISUP  
Cable: DENTAL Auckland  
Analytical Medical Only  
Medical Supplies N.Z. Ltd.  
P.O. Box 1994  
141-161 Orin St  
**Wellington**  
Tel: 850 199  
Telex: 3858  
Cable: DENTAL Wellington  
Analytical Medical Only  
Medical Supplies N.Z. Ltd.  
P.O. Box 109  
790 Cambridge Road  
**Christchurch**  
Tel: 892 019  
Cable: DENTAL Christchurch  
Analytical Medical Only  
Medical Supplies N.Z. Ltd.  
181 Great King Street  
**Dunedin**  
Tel: 88 817  
Cable: DENTAL Dunedin

**NIGERIA**  
The Electronics  
Instruments Ltd.  
N8B 770 Oyo Road  
Lagos  
P.O. Box 4622  
**Ibadan**  
Tel: 6167  
Cable: THE TEL Ibadan  
The Electronics Instrumentals  
Lagos Ltd.  
144 Apapa Motor Road, Mushin  
P.O. Box 6645  
**Lagos**  
Cable: THE TEL Lagos

**ONTARIO**  
Hewlett-Packard (Canada) Ltd.  
1785 Woodbine Dr.  
**Ottawa** K2C 0P9  
Tel: (613) 276-6500  
TWX: 610 962 8968  
Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
**Mississauga** L4V 1M8  
Tel: (416) 676 4440  
TWX: 610 492 4246

**QUEBEC**  
Hewlett-Packard (Canada) Ltd.  
275 Hochberg Road  
**Pointe Claire** H9H 1L7  
Tel: (514) 897 4232  
TWX: 610 423 0222  
TLX: 05 821521 HPCL  
Hewlett-Packard (Canada) Ltd.  
275 Hochberg Road  
**Pointe Claire** H9H 1L7  
Tel: (514) 897 4232  
TWX: 610 423 0222  
TLX: 05 821521 HPCL

**PAKISTAN**  
Mushko & Company Ltd.  
Owman Chambers  
Abdullah Haroon Road  
**Karachi**  
Tel: 511021 512927  
Telex: KR894  
Cable: MICRO-NATOR Karachi  
Mushko & Company Ltd.  
188 Satellite Town  
**Rawalpindi**  
Tel: 41924  
Cable: FEMUS Rawalpindi

**PHILIPPINES**  
The Disc Advanced Systems  
Corporation  
Hicapital Bldg.  
1706 Floor, Ayala Ave.  
**Mandaluybal**  
Tel: 85 34-91 85 35 81  
Telex: 3274 ONI PH  
**RHODESIA**  
Hend Technica Sales  
45 Krivon Road North  
P.O. Box 1438  
**Salisbury**  
Tel: 105311 3 lines  
Telex: RH 420

**SINGAPORE**  
Hewlett-Packard Singapore  
Pty. Ltd.  
Box 2 6th Floor, Jamb  
**Wellington**  
Tel: 850 199  
Telex: 3858  
Cable: DENTAL Wellington  
Analytical Medical Only  
Medical Supplies N.Z. Ltd.  
P.O. Box 109  
790 Cambridge Road  
**Christchurch**  
Tel: 892 019  
Cable: DENTAL Christchurch  
Analytical Medical Only  
Medical Supplies N.Z. Ltd.  
181 Great King Street  
**Dunedin**  
Tel: 88 817  
Cable: DENTAL Dunedin

**SOUTH AFRICA**  
Hewlett-Packard South Africa  
Pty. Ltd.  
Private Bag Westville  
Sandton, Johannesburg 2124  
Hewlett-Packard House  
Daphne Street, Westwood  
**Durban** Johannesburg 2144  
Tel: 802 114016  
Telex: 5463 4752 JH  
Cable: HEWARD JOHANNESBURG  
Hewlett-Packard South Africa  
Pty. Ltd.  
P.O. Box 170  
Hewlett-Packard Cape Province 7480  
Pine Park Centre, Forest Drive  
**Pretoria** Cape Province 7405  
Tel: 31 1945 10 9  
Telex: 57 0006  
Hewlett-Packard South Africa  
Pty. Ltd.  
P.O. Box 37099  
Overport, Durban 4067  
641 Ridge Road, Durban  
**Durban** 4001  
Tel: 88 7478 9  
Telex: 6 7954  
Cable: HEWARD

**TAIWAN**  
Hewlett-Packard Far East Ltd  
Taiwan Branch  
39 Chung Shiao West Road  
Sec. 1, Tin Koo  
**Taipei**  
Tel: 3819160 4 (5 lines)  
Telex: 21824 HEWPACK  
Cable: HEWPACK TAIPEI  
Hewlett-Packard Far East Ltd  
Taiwan Branch  
No. 2, Chung Cheng East Road  
**Kaohsiung**  
Tel: 07 242818-Kaohsiung  
Analytical Only  
Sankwang Instruments Co. Ltd.  
No. 20, Chung Sun Road  
**Taipei** 100  
Tel: 371570 4 (5 lines)  
Telex: 22894 SANKWANG  
Cable: SANKWANG TAIPEI

**TANZANIA**  
Medical Only  
International Aerodrome A Ltd  
P.O. Box 84  
**Daresalaam**  
Tel: 2121 21 265  
Telex: 411030  
**THAILAND**  
INMISA Co. Ltd.  
Ecom Research Building  
Bangkok Sukhumvit  
**Bangkok**  
Tel: 432381 930338  
Cable: INMISA Bangkok  
**UGANDA**  
Medical Only  
International Aerodrome A Ltd  
P.O. Box 2577  
**Kampala**  
Tel: 44388  
Cable: INTAERID Kampala

**ZAMBIA**  
4 J. Tlooy, Zambia Ltd  
P.O. Box 7592  
**Lusaka**  
Tel: 3393  
Cable: ASAYTFF Lusaka

**OTHER AREAS NOT LISTED. CONTACT:**  
Hewlett-Packard International  
3200 Wilshire Ave.  
Palo Alto, California 94304  
Tel: (415) 493 1501  
TWX: 910 373 2867  
Cable: HEWPACK Palo Alto  
Tel: 034 8300 034 8493

## CANADA

**ALBERTA**  
Hewlett-Packard (Canada) Ltd.  
11620A, 168 Street  
**Edmonton** T5M 3T9  
Tel: (403) 452 3670  
TWX: 610 831 2431 EDTH  
Hewlett-Packard (Canada) Ltd.  
915-42 Ave S E Suite 102  
**Calgary** T2G 1Z7  
Tel: (403) 281 1672  
TWX: 610 821 6941

**BRITISH COLUMBIA**  
Hewlett-Packard (Canada) Ltd.  
83 E. Cordova Street  
**Vancouver** V6A 3R2  
Tel: (604) 254 0531  
TWX: 610 525 5059 VCR  
Hewlett-Packard (Canada) Ltd.  
915-42 Ave S E Suite 102  
**Calgary** T2G 1Z7  
Tel: (403) 281 1672  
TWX: 610 821 6941

**MANTOBA**  
Hewlett-Packard (Canada) Ltd.  
511 Century St.  
151 Century St.  
**Winnipeg** R3H 0L8  
Tel: (204) 766 7841  
TWX: 610 671 3537

**NOVA SCOTIA**  
Hewlett-Packard (Canada) Ltd.  
600 Windmill Road  
**Dartmouth** B2Y 3Z6  
Tel: (902) 489 3601  
TWX: 610 271 4482 HFX

**ONTARIO**  
Hewlett-Packard (Canada) Ltd.  
1785 Woodbine Dr.  
**Ottawa** K2C 0P9  
Tel: (613) 276-6500  
TWX: 610 962 8968  
Hewlett-Packard (Canada) Ltd.  
6877 Goreway Drive  
**Mississauga** L4V 1M8  
Tel: (416) 676 4440  
TWX: 610 492 4246

**QUEBEC**  
Hewlett-Packard (Canada) Ltd.  
275 Hochberg Road  
**Pointe Claire** H9H 1L7  
Tel: (514) 897 4232  
TWX: 610 423 0222  
TLX: 05 821521 HPCL

**FOR CANADIAN AREAS NOT LISTED. CONTACT:**  
Hewlett-Packard International  
3200 Wilshire Ave.  
Palo Alto, California 94304  
Tel: (415) 493 1501  
TWX: 910 373 2867  
Cable: HEWPACK Palo Alto  
Tel: 034 8300 034 8493

## CENTRAL AND SOUTH AMERICA

**ARGENTINA**  
Hewlett-Packard Argentina S.A.  
Av. Leandro N. Alem 822 12  
**100 Buenos Aires**  
Tel: 31 8063 4 5 B and 7  
Telex: Public Booth N. 9  
Cable: HEWARD ARG  
**BOLIVIA**  
Siambus & Mith (Bolivia) Ltda  
Av. Mariscal Santa Cruz 1342  
**La Paz**  
Tel: 40626 53163 52421  
Telex: 3560014  
Cable: BUKMAR  
**BRAZIL**  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Avenida Rio Negro 980  
Alphaville  
**06400 Barueria Sao Paulo**  
Tel: 429-71489 429-2118 9  
Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Rua Padre Chagas, 32  
**90000-Pitua Alegre RS**  
Tel: (0512) 22-2996 22-9521  
Cable: HEWARD poHo Alegre

Hewlett-Packard do Brasil  
I.E.C. Ltda.  
Rua Siqueira Campos, 53 4  
andar, Copacabana  
**20000 Rio de Janeiro GR**  
Tel: 251 80 84 (001 001)  
Telex: 391 212 4905 HEWFP BR  
Cable: HEWARD  
Rio de Janeiro  
**CHILE**  
Gallegos y Mercaderes Ltda  
Alameda 580 OT 807  
Casilla 2118  
**Santiago** 1  
Tel: 398613  
Telex: 3520001 CALMET  
Cable: CALMET Santiago  
Medical Only  
A.F. Vaccano Machinery Co. Ltda.  
Paraguay 494  
Casilla 13910  
**Santiago**  
Tel: 31121 31124  
Cable: GENCO Santiago

**COLOMBIA**  
Instrumentacion  
Hercia A. Lavergne & Kier S.A.  
Carretera 7 No. 48 75  
Apartado Aereo 6287  
**Bogota** D.F.  
Tel: 69 88 77  
Cable: AARIN Bogota  
Telex: 044 400  
**COSTA RICA**  
Centrales Costarricense S.A.  
Calle Central, Avenidas 1 y 4  
Apartado 10159  
**San Jose**  
Tel: 21 86 13  
Cable: GALGIJR San Jose

Calculators Only  
Computadoras y Equipos  
Electronicos  
P.O. Box 2698  
980 Cordero y Calderon  
**Quito**  
Tel: 325 982  
Telex: 02 211 536 to 10  
Cable: SAGITA Quito  
**EL SALVADOR**  
Industria Generalizadora y Procesamiento  
Electronico de El Salvador  
Ruiz de los Heros, No. 148  
**San Salvador**  
Tel: 252 877  
**GUATEMALA**  
IPESA  
Avenida La Reforma 3 48  
Caja 3  
**Guatemala City**  
Tel: 53627 14268  
Telex: 4192 Telcel Gu

**MEXICO**  
Hewlett-Packard Mexicana  
S.A. de C.V.  
Torres Adalid No. 21 11 Piso  
Col. de Valle  
**Mexico** 15 114  
Tel: (805) 543 42 32  
Telex: 0117 14 507  
Hewlett-Packard Mexicana  
S.A. de C.V.  
Ave. Constitucion No. 2144  
**Monterrey** N.L.  
Tel: 48 32 48 71 84  
Telex: 036 941  
**NICARAGUA**  
Roberto Trevani  
Apartado Postal 689  
Edificio Teran  
**Managua**  
Tel: 25114 21412 21454  
Cable: ROTERAN Managua

**PARAGUAY**  
Z.J. Mexmet S.R.L.  
275 Hochberg Road  
Division Aparatos y Equipos  
Centros y de Investigacion  
P.O. Box 676  
Cruce 487, Edificio Victoria  
**Asuncion**  
Tel: 5 5069 4 6272  
Cable: RAMF.  
**PERU**  
Compañia Electro Medica S.A.  
Los Flamencos, 145  
San Isidro Casapa 1030  
**Lima** 1  
Tel: 41 4325  
Cable: LUMED Lima

**URUGUAY**  
Pablo Ferrando S.A.  
Comercial e Industrial  
Avenida Italia 2877  
Casilla de Correo 170  
**Montevideo**  
Tel: 40 1107  
Cable: RADILIM Montevideo  
**VENEZUELA**  
Hewlett-Packard de Venezuela  
C.A.  
Apartado 50933 Caracas 4th  
Edificio Segre  
Torre Universitaria  
Los Ruces Norte  
**Caracas** 101  
Tel: 051007 35 00 84  
35 00 65 15 00 81  
Telex: 25146 HEWPACK  
Cable: HEWARD Caracas

**FOR AREAS NOT LISTED. CONTACT:**  
Hewlett-Packard  
Inter Americas  
3200 Wilshire Ave.  
Palo Alto, California 94304  
Tel: (415) 493 1501  
TWX: 910 373 2860  
Cable: HEWPACK Palo Alto  
Tel: 034 8300 034 8493

# EUROPE, NORTH AFRICA AND MIDDLE EAST

**AUSTRIA**  
Hewlett-Packard Ges m b H  
Handelskai 52  
P O Box 7  
A-1205 Vienna  
Tel (0222) 35 16 21 to 17  
Cable HEWPAK Vienna  
Telex 75923 hewpak a

**BELGIUM**  
Hewlett-Packard Benelux  
S A / N V  
Avenue de Col-Vert, 1.  
(Groenkraaglan)  
B-1170 Brussels  
Tel (02) 672 22 40  
Cable PALOBEIN Brussels  
Telex 23 494 paloboin brui

**CYPRUS**  
Kypriotes  
19 Gregorios & Kenopoulos Rd  
P O Box 1152  
CY-Nicosia  
Tel 45628/29  
Cable KYPRONICS PANDEHS  
Telex 3018

**CZECHOSLOVAKIA**  
Vývojevo a Provozni Zakladna  
Výzkumny Ústav v Bechovicích  
CSSR-25097  
Bechovice u Prahy  
tel 89 93 41  
Telex 121333

**DDR**  
Entwicklungsabtor der TU Dresden  
Forschungsinstitut Meinsberg  
DDR-7305  
Waldheim/Meinsberg  
Tel 37 667  
Telex 518741

Firma Forgeber  
Schlegelstrasse 15  
1040 Berlin  
Tel 28 27 411  
Telex 112889

**DENMARK**  
Hewlett-Packard A/S  
Datvej 52  
DK-3480 Birkerød  
Tel (02) 81 66 40  
Cable HEWPAK AS  
Telex 165 40 hpas  
Hewlett-Packard A/S  
Navervej 1  
DK-8600 Silkeborg  
Tel (06) 82 71 66  
Telex 165 40 hpas  
Cable HEWPAK AS

**FINLAND**  
Hewlett-Packard OY  
Nahkahuusitie 5  
P O Box 6  
SF-00211 Helsinki 21  
Tel 6923031  
Cable HEWPAK OY Helsinki  
Telex 12-1563

**FRANCE**  
Hewlett-Packard France  
Quartier de Courtaubouf  
Boite Postale No 16  
F-91401 Orsay Cédex  
Tel (1) 907 78 25  
Cable HEWPAK Orsay  
Telex 600048

Hewlett-Packard France  
Le Saquin  
Chemin des Mouilles  
Boite Postale No 12  
F-69130 Ecully  
Tel (78) 33 81 25  
Cable HEWPAK Ecully  
Telex 310617

Hewlett-Packard France  
Technisches Bureau München  
Périmètre de la Cèpre  
Chemin de la Cèpre, 20  
F-31300 Toulouse-Le Mirail  
Tel (61) 41 13 26 to 17  
Cable HEWPAK 51957  
Telex 510957

Hewlett-Packard France  
Agence Régionale  
Aéroport principal de  
Marseille-Marganne  
F-13721 Marganne  
Tel (91) 89 12 36  
Cable HEWPAK MARGN  
Telex 410770

Hewlett-Packard France  
Agence Régionale  
63, Avenue de Rochester  
Boite Postale  
F-35014 Rennes Cédex  
Tel (19) 36 33 21  
Cable HEWPAK 74912  
Telex 740312

Hewlett-Packard France  
Agence Régionale  
74, Allée de la Robertsau  
F-67000 Strasbourg  
Tel (88) 35 23 20/21  
Telex 890141  
Cable HEWPAK STRBG

Hewlett-Packard France  
Agence Régionale  
Centre Valaun  
101, rue Colbert  
Entrée A2  
F-59000 Lille  
Tel (20) 51 44 14  
Telex 820744

**GERMAN FEDERAL REPUBLIC**  
Hewlett-Packard GmbH  
Emanuel-Leutze-Str 1  
Bernersstrasse 117  
Postfach 560 140  
D-6000 Frankfurt 56  
Tel (069) 50 04 1  
Cable HEWPAKSA Frankfurt  
Telex 04 13249 hpfrdm

Hewlett-Packard GmbH  
Technisches Bureau Böttingen  
Herrenbergerstrasse 110  
D-7030 Böttingen Württemberg  
Tel (07031) 667 1  
Cable HEPAK Böttingen  
Telex 07265739 bbn

Hewlett-Packard GmbH  
Technisches Bureau Düsseldorf  
Emanuel-Leutze-Str 1 (Seestern)  
D-4000 Düsseldorf  
Tel (0211) 59 71 1  
Telex 085/86 533 hpdd d

Hewlett-Packard GmbH  
Technisches Bureau Hamburg  
Wendensstrasse 23  
D-2000 Hamburg 1  
Tel (040) 24 13 93  
Cable HEWPAKSA Hamburg  
Telex 21 63 032 hpbd d

Hewlett-Packard GmbH  
Technisches Bureau Hannover  
Am Grossmarkt 9  
D-3000 Hannover 91  
Tel (0511) 46 50 01  
Telex 092 3249

Hewlett-Packard GmbH  
Technisches Bureau Nuremberg  
Neumeyer Str 90  
D-8500 Nuremberg  
Tel (0911) 56 30 83/85  
Telex 0623 860

Hewlett-Packard GmbH  
Technisches Bureau München  
Unterhachinger Strasse 28  
ISAR Center  
D-8012 Ottobrunn  
Tel (089) 601 30 61/7  
Cable HEWPAKSA Munchen  
Telex 0524985

Hewlett-Packard GmbH  
Technisches Bureau Berlin  
Keith Strasse 2-4  
D-1000 Berlin 30  
Tel (030) 24 90 86  
Telex 18 3405 hpbin d

**GREECE**  
Kostas Karayannis  
18, Ermou Street  
GR-Athens 126  
Tel 3237731  
Cable RAKAR Athens  
Telex 21 59 62 rkar gr  
Analytical Only  
INTECO  
G Papathanassiou & Co  
Marin 17  
GR - Athens 103  
Tel 522 1915  
Cable INTEKNIKA Athens  
Telex 21 5329 INTE GR

**HUNGARY**  
MTA  
Múszertudgy és Méreştechnikai  
Szolgálat  
Lenn Krt 67  
1391 Budapest VI  
Tel 42 03 38  
Telex 22 51 14

**ICELAND**  
Medical Only  
Elding Trading Company Inc  
Hafnarhvoli - tryggvafotlu  
IS-Reykjavik  
Cable ELIDING Reykjavik  
Telex 21 4693 ETAL GR

**IRELAND**  
Hewlett-Packard Iran Ltd  
No 13, Fourteenth St  
Merram Avenue  
P O Box 41/2419  
IR-Tehran  
Tel 851082-7  
Telex 21 3405 HEW IRP

**IRELAND**  
Hewlett-Packard Ltd  
King Street Lane  
GB-Winnerah, Wokingham  
Berks. RG11 5AR  
Tel (0734) 78 47 74  
Telex 847178

**ITALY**  
Hewlett-Packard Italiana S p A  
Casella postale 3645  
I-20100 Milano  
Tel (2) 6251 (10 lines)  
Cable HEWPAK/IT Milano  
Telex 323445

Hewlett-Packard Italiana S p A  
Via Pietro Maroncelli 40  
(ang. Via Visentini)  
I-35100 Padova  
Tel (49) 66 48 88  
Telex 41612 Hewpacki

Medical only  
Hewlett-Packard Italiana S p A  
Via Agnardi, 7  
I-56100 Pisa  
Tel (050) 2 32 04  
Telex 32046 via Milano

Hewlett-Packard Italiana S p A  
Via G. A. Galilei 10  
I-00143 Rome  
Tel (06) 54 69 6  
Telex 61514  
Cable HEWPAK/IT Rome  
Hewlett-Packard Italiana S p A  
Via San Quintino, 46  
I-10121 Torino  
Tel (011) 52 82 64/54 84 86  
Telex 32046 via Milano

Medical/Calculators Only  
Hewlett-Packard Italiana S p A  
Via Principe Nicola 43 G/C  
I-95126 Catania  
Tel (095) 37 05 04  
Hewlett-Packard Italiana S p A  
Via Amerigo Vespucci, 9  
I-80142 Napoli  
Tel (081) 33 77 11  
Hewlett-Packard Italiana S p A  
Via E. Masì 9/B  
I-40137 Bologna  
Tel (051) 30 78 87

**KUWAIT**  
Al-Khadiya Trading &  
Contracting Co  
P O Box 830  
Kuwait  
Tel 42 49 10  
Cable VISDCOUNT

**LUXEMBURG**  
Hewlett-Packard Benelux  
S A / N V  
Avenue du Col-Vert, 1.  
(Groenkraaglan)  
B-1170 Brussels  
Tel (02) 672 22 40  
Cable PALOBEIN Brussels  
Telex 23 494

**MOROCCO**  
Grep  
190, Blvd. Brahim Roudani  
Casablanca  
Tel 25-16/76/25-90 99  
Cable Grep-Casa  
Telex 23739

**NETHERLANDS**  
Hewlett-Packard Benelux N V  
Van Heuven Goedhartlaan 121  
P O Box 667  
NL - Amstelveen 1134  
Tel (020) 47 20 21  
Cable PALOBEIN Amsterdam  
Telex 13 216 hepa nl

**NORWAY**  
Hewlett-Packard Norge A/S  
Nevsveien 13  
Box 149  
N-1344 Høstung  
Tel (02) 53 83 60  
Telex 16621 nonas n

**POLAND**  
Biuro Informacji Technicznej  
Hewlett-Packard  
Ul Stawki 2 6P  
00-950 Warszawa  
Tel 39 67 40  
Telex 81 24 53 hepa pl

**NEW YORK**  
6 Automation Lane  
Farmlington Hills 8024  
Tel (313) 476-6400  
Tel (518) 458-1550  
201 South Avenue  
Poughkeepsie 12601  
Tel (914) 458-7330  
Avx 510-248-0012  
39 Saginaw Drive  
Rochester 14623  
Tel (716) 473-9500  
TWX 510-253-5981  
5858 East Molloy Road  
Syracuse 13211  
Tel (315) 454-2486

**NEW YORK**  
1 Crossways Park West  
Woodbury 11797  
Tel (516) 921-0300  
TWX 710-990-4951  
**NORTH CAROLINA**  
P O Box 5188  
1923 North Main Street  
High Point 27262  
Tel (919) 885-8101

**OHIO**  
16500 Sprague Road  
Cleveland 44130  
Tel (216) 243-7300  
TWX 810-423-9431  
330 Progress Road  
Dayton 45449  
Tel (513) 859-8202  
TWX 810-474-2818  
1041 Kingsmill Parkway  
Columbus 43229  
Tel (614) 436-1041

**OKLAHOMA**  
P O Box 32008  
Oklahoma City 73132  
Tel (405) 921-1330  
TWX 910-989-1185  
156 Wyatt Drive  
Las Cruces 88001  
Tel (505) 526-2485  
TWX 910-983-0550

**OREGON**  
17890 SW Lower Boones  
Ferry Road  
Tualatin 97062  
Tel (503) 620-3350  
**PENNSYLVANIA**  
111 Zetta Drive  
Pittsburgh 15238  
Tel (412) 782-0400  
TWX 710-795-3124  
1021 8th Avenue  
King of Prussia Industrial Park  
King of Prussia 19406  
Tel (761) 265-7000  
TWX 510-660-2670

**SOUTH CAROLINA**  
6941-0 N Tremholm Road  
Columbia 29260  
Tel (803) 782-6493  
**TENNESSEE**  
Knoxville  
Medical Services only  
Tel (615) 523-5022  
1473 Madison Avenue  
Memphis 38104  
Tel (901) 274-7472

**TEXAS**  
P O Box 1270  
201 E Arapaho Rd  
Richardson 75080  
Tel (214) 231-6101  
P O Box 27409  
6300 Westpark Drive  
Suite 100  
Houston 77027  
Tel (713) 781-6000  
205 Billy Mitchell Road  
San Antonio 78226  
Tel (512) 434-8241

**UTAH**  
2160 South 3270 West Street  
Salt Lake City 84119  
Tel (801) 487-0715  
**VIRGINIA**  
Medical Only  
P O Box 12778  
No. 7 Koger Exec. Center  
Suite 212  
Norfolk 23502  
Tel (804) 497-1026/7  
P O Box 9854  
2914 Hungry Springs Road  
Richmond 23228  
Tel (804) 285-3431

**WASHINGTON**  
Bellevue Office Pk  
1203 114th Ave S E  
Bellevue 98004  
Tel (206) 454-3971  
TWX 910-443-2446  
**WEST VIRGINIA**  
Medical/Analytical Only  
Charleston  
Tel (304) 345-1640  
**WISCONSIN**  
9004 West Lincoln Ave  
West Allis 53227  
Tel (414) 541-0550

Calculators Only  
Hewlett-Packard Española S A  
Gran Via Fernando El Católico, 67  
E-Valencia-8  
Tel 326 67 28/326 85 55

**SWEDEN**  
Hewlett-Packard Sverige AB  
Engelstevägen 3  
Fack S-16  
S-16 20 Bromma 20  
Tel (08) 730 05 50  
Cable MEASUREMENTS  
Stockholm  
Telex 10721

Hewlett-Packard Sverige AB  
Frotalingsgatan 30  
S-421 32 Västra Frölunda  
Tel (031) 49 09 50  
Telex 10721 Via Bromma Office  
**SWITZERLAND**  
Hewlett-Packard (Schweiz) AG  
Zürcherstrasse 20  
P O Box 307  
CH-8952 Schlieren-Zürich  
Tel (01) 730 52 40  
Cable HP AG CH  
Av A A de Aguar 138  
P O Box 2761  
P - Lisbon  
Tel (119) 53 21 31/7  
Cable INTERCAMBIO Lisbon  
Telex 12598

Medical only  
Mundinter  
Intercambio Mundial de Comercio  
S A R L  
Av A A de Aguar 138  
P O Box 2761  
P - Lisbon  
Tel (119) 53 21 31/7  
Cable INTERCAMBIO Lisbon

**RUMANIA**  
Hewlett-Packard Reprezentanta  
BD N Buceacu 16  
Bucharest  
Tel 158023/138885  
Telex 10440  
I I R U  
Intreprinderea Pentru  
S A R L  
Si Reparatara Utilajelor de Calcul  
B-dul prof. Dimitrie Pompei 6  
Bucharest-Sectorul 2  
Tel 12 64 30  
Telex 01183716

**SAUDI ARABIA**  
Modern Electronic Establishment  
King Abdul Azziz Str (Head office)  
P O Box 1228  
Jeddah  
Tel 31173-332201  
Cable ELECTRA  
P O Box 2728 (Service center)  
Riyadh  
Tel 62596-66232  
Cable RAOUFCO

**SPAIN**  
Hewlett-Packard Española, S A  
Jerez No 3  
E-Madrid 16  
Tel (1) 458 06 00 (10 lines)  
Telex 23515 hpe  
Hewlett-Packard Española, S A  
Milesado 21-23  
E-Barcelona 17  
Tel (3) 203 6200 (5 lines)  
Telex 52002 hobe e  
Hewlett-Packard Española, S A  
Av Ramon y Cajal 1-9  
(Edificio Sevilla 1)  
E-Seville 5  
Tel 64 44 54/58  
Hewlett-Packard Española S A  
Edificio Alba 17-8  
E-Bilbao 1  
Tel 23 83 06/23 82 06

**TURKEY**  
Telekom Engineering Bureau  
P O Box 437  
Beşiközü  
TR-Ankara  
Tel 175622  
Analytical only  
Yılmaz Ozyurek  
Milli Müdafaa Cad No 16/6  
Kızılay  
TR-Ankara  
Tel 25 03 09  
Telex 42576 Özek tr

**UNITED KINGDOM**  
Hewlett-Packard Ltd  
King Street Lane  
GB-Winnerah, Wokingham  
Berks. RG11 5AR  
Tel (0734) 78 47 74  
Cable Hewpac London  
Telex 847178-9

Hewlett-Packard Ltd  
The Grathons  
Stamford New Road  
GB-Altrincham  
Cheshire WA14 1DQ  
Tel (061) 9289921  
Cable Hewpac Manchester  
Telex 668068

**YUGOSLAVIA**  
ISKRA Standard/Hewlett-Packard  
Miklosova 38/VII  
61000 Ljubljana  
Tel 31 58 79/32 16 74  
Telex 31300

**SOCIALIST COUNTRIES**  
NOT SHOWN PLEASE CONTACT:  
Hewlett-Packard Ges m b H  
P O Box 7  
A-1205 Vienna, Austria  
Tel (0222) 35 16 21 to 27  
Cable HEWPAK Vienna  
Telex 75923 hewpak a

**MEDITERRANEAN AND MIDDLE EAST COUNTRIES**  
NOT SHOWN PLEASE CONTACT:  
Hewlett-Packard S A  
Mediterranean and Middle East Operations  
35, Kolokotroni Street  
Plata Metallionou  
GR-Kifissia Athens, Greece  
Tel 8080337-359/429  
8081741/742/143/744  
Telex 21-6588  
Cable HEWPAKSA Athens

**FOR OTHER AREAS**  
NOT LISTED CONTACT  
Hewlett-Packard S A  
7, rue du Bois du-Lan  
P O Box  
CH-1217 Meyrin 2 - Geneva  
Switzerland  
Tel (022) 41 54 00

**FOR U.S. AREAS NOT LISTED**  
Contact the regional office  
nearest you: Atlanta, Georgia  
North Hollywood, California  
Rockville, Maryland  
Rolling Meadows, Illinois  
Their complete addresses are listed above

**\*Service Only**

# UNITED STATES

**ALABAMA**  
6290 Whitesburg Dr. S E  
P O Box 4207  
Huntsville 35802  
Tel (205) 881-4591  
Medical Only  
228 W. Valley Ave.  
Room 220  
Birmingham 35209  
Tel (205) 942-2081

**ARIZONA**  
2336 E Magnolia St  
Phoenix 85034  
Tel (602) 244-1361  
2424 East Aragon Rd  
Tucson 85706  
Tel (602) 294-3148

**ARKANSAS**  
Medical Service Only  
P O Box 5646  
Brady Station  
Little Rock 72205  
Tel (501) 664-8773

**CALIFORNIA**  
1482 East Orangehorpe Ave  
Fulerton 92631  
Tel (714) 870-1000  
3939 Lankershim Boulevard  
North Hollywood 91604  
Tel (213) 877-1282  
TWX 910-499-2170  
6305 Arizona Place  
Los Angeles 90045  
Tel (213) 649-2517  
TWX 910-328-6147

**FLORIDA**  
P O Box 105005  
Atlanta 30348  
Tel (404) 955-1500  
3003 Scott Boulevard  
Santa Clara 95050  
Tel (408) 249-7000  
TWX 910-338-0518

**GEORGIA**  
2875 So. King Street  
Honolulu 96814  
Tel (808) 955-4455

**ILLINOIS**  
5201 Tollway Dr.  
Rolling Meadows 60008  
Tel (312) 255-9800  
TWX 910-687-2260

**INDIANA**  
7301 North Shadeland Ave  
Indianapolis 46250  
Tel (317) 842-1000  
TWX 810-260-1797

**IOWA**  
1902 Broadway  
Iowa City 52240  
Tel (319) 338-9466  
Night (319) 338-9467

**KENTUCKY**  
Medical Only  
Alkinson Square  
3901 Alkinson Dr  
Suite 207  
Louisville 40218  
Tel (502) 456-1573

**LOUISIANA**  
R 9, Box 840  
3239 William Boulevard  
Kenner 70062  
Tel (504) 721-6201

**MARYLAND**  
6707 Whitestone Road  
Baltimore 21207  
Tel (301) 944-5400  
TWX 710-862-9157  
2 Choke Cherry Road  
Rockville 20850  
Tel (301) 948-6370  
TWX 710-828-9684

**MASSACHUSETTS**  
32 Hartwell Ave  
Lexington 02173  
Tel (617) 861-8960  
TWX 710-326-8904

**MICHIGAN**  
23855 Research Drive  
Farmington Hills 48024  
Tel (313) 476-6400  
TWX 910-242-2900

**MINNESOTA**  
2400 N. Prior Ave  
Roseville 55113  
Tel (612) 636-0700  
TWX 612-963-3734

**MISSISSIPPI**  
Jackson  
Medical Service Only  
Tel (601) 982-9363

**MISSOURI**  
11131 Colorado Ave  
Kansas City 64137  
Tel (816) 763-8000  
TWX 910-771-2087  
148 Weldon Parkway  
Maryland Heights 63043  
Tel (314) 567-1455  
TWX 910-764-0830

**NEBRASKA**  
Medical Only  
7171 Mercy Road  
Suite 10  
Omaha 68106  
Tel (402) 392-0948

**NEW JERSEY**  
W 120 Century Rd  
Paramus 07652  
Tel (201) 265-5000  
TWX 910-980-4951

**NEW MEXICO**  
P O Box 11634  
11300 Lomas Blvd. N E  
Albuquerque 87123  
Tel (505) 292-1330  
TWX 910-989-1185  
156 Wyatt Drive  
Las Cruces 88001  
Tel (505) 526-2485  
TWX 910-983-0550

**NEW YORK**  
6 Automation Lane  
Farmlington Hills 8024  
Tel (313) 476-6400  
Tel (518) 458-1550  
201 South Avenue  
Poughkeepsie 12601  
Tel (914) 458-7330  
Avx 510-248-0012  
39 Saginaw Drive  
Rochester 14623  
Tel (716) 473-9500  
TWX 510-253-5981  
5858 East Molloy Road  
Syracuse 13211  
Tel (315) 454-2486

**NEW YORK**  
1 Crossways Park West  
Woodbury 11797  
Tel (516) 921-0300  
TWX 710-990-4951  
**NORTH CAROLINA**  
P O Box 5188  
1923 North Main Street  
High Point 27262  
Tel (919) 885-8101

**OHIO**  
16500 Sprague Road  
Cleveland 44130  
Tel (216) 243-7300  
TWX 810-423-9431  
330 Progress Road  
Dayton 45449  
Tel (513) 859-8202  
TWX 810-474-2818  
1041 Kingsmill Parkway  
Columbus 43229  
Tel (614) 436-1041

**OKLAHOMA**  
P O Box 32008  
Oklahoma City 73132  
Tel (405) 921-1330  
TWX 910-989-1185  
156 Wyatt Drive  
Las Cruces 88001  
Tel (505) 526-2485  
TWX 910-983-0550

**OREGON**  
17890 SW Lower Boones  
Ferry Road  
Tualatin 97062  
Tel (503) 620-3350  
**PENNSYLVANIA**  
111 Zetta Drive  
Pittsburgh 15238  
Tel (412) 782-0400  
TWX 710-795-3124  
1021 8th Avenue  
King of Prussia Industrial Park  
King of Prussia 19406  
Tel (761) 265-7000  
TWX 510-660-2670

**SOUTH CAROLINA**  
6941-0 N Tremholm Road  
Columbia 29260  
Tel (803) 782-6493  
**TENNESSEE**  
Knoxville  
Medical Services only  
Tel (615) 523-5022  
1473 Madison Avenue  
Memphis 38104  
Tel (901) 274-7472

**TEXAS**  
P O Box 1270  
201 E Arapaho Rd  
Richardson 75080  
Tel (214) 231-6101  
P O Box 27409  
6300 Westpark Drive  
Suite 100  
Houston 77027  
Tel (713) 781-6000  
205 Billy Mitchell Road  
San Antonio 78226  
Tel (512) 434-8241

**UTAH**  
2160 South 3270 West Street  
Salt Lake City 84119  
Tel (801) 487-0715  
**VIRGINIA**  
Medical Only  
P O Box 12778  
No. 7 Koger Exec. Center  
Suite 212  
Norfolk 23502  
Tel (804) 497-1026/7  
P O Box 9854  
2914 Hungry Springs Road  
Richmond 23228  
Tel (804) 285-3431

**WASHINGTON</**

**APPENDIX A****REFERENCES**

---

DA Pam 310-4	Index of Technical Manuals, Technical Bulletins, Supply Manuals (Types 7, 8, and 9), Supply Bulletins, and Lubrication Orders.
DA Pam 310-7	Index of Modification Work Orders.
TM 38-750	The Army Maintenance Management System (TAMMS).
TM 740-90-1	Administrative Storage of Equipment.
TM 750-244-2	Procedures for Destruction of Electronics Materiel to Prevent Enemy Use (Electronics Command).
TB 43-180	Calibration Requirements for the Maintenance of Army Materiel.
TB 385-4	Safety Precautions for Maintenance of Electrical/Electronic Equipment.



## APPENDIX B

## COMPONENTS OF END ITEM LIST

## Section I. INTRODUCTION

**B-1. Scope**

This appendix lists integral components of and basic issue items for the TS-3791/U to help you inventory items required for safe and efficient operation.

**B-2. General**

This Components of End Item List is divided into the following sections:

*a. Section II. Integral Components of the End Item.* Not applicable. These items, when assembled, comprise the TS-3791/U and must accompany it whenever it is transferred or turned in.

The illustrations will help you identify these items.

*b. Section III. Basic Issue Items.* Not applicable. These are the minimum essential items required to place the TS-3791/U in operation, to operate it, and to perform emergency repairs. Although shipped separately packed they must accompany the TS-3791/U during operation and whenever it is transferred between accountable officers. The illustrations will assist you with hard-to-identify items. This manual is your authority to requisition replacement BII, base don TOE/MTOE authorization of the end item.

**B-3. Explanation of Columns**

*a. Illustration.* This column is divided as follows:

*(1) Figure number.* Indicates the figure number of the illustration on which the item is shown.

*(2) Item number.* The number used to identify item called out in the illustration.

*b. National Stock Number.* Indicates the National stock number assigned to the item and which will be used for requisitioning.

*c. Description.* Indicates the Federal item name and, if required, a minimum description to identify the item. The part number indicates the primary number used by the manufacturer, which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items. Following the part number, the Federal Supply Code for Manufacturers (FSCM) is shown in parentheses.

*d. Location.* The physical location of each item listed is given in this column. The lists are designed to inventory all items in one area of the major item before moving on to an adjacent area.

*e. Usable on Code.* Not applicable.

*f. Quantity Required (Qty Reqd).* This column lists the quantity of each item required for a complete major item.

*g. Quantity.* This column is left blank for use during an inventory. Under the Rcvd column, list the quantity you actually receive on your major item. The Date columns are for your use when you inventory the major item.

**(Next printed page is B-2.)**

**PART NUMBER - NATIONAL STOCK NUMBER  
CROSS REFERENCE INDEX**

<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>	<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>
BB2035	01121	5905-00-958-3830	CEATO-1272F	75042	5905-00-105-9724
BB2235	01121	5905-00-403-8837	CEATO-1500F	75042	5905-00-917-0576
BB2415	01121	5905-00-961-7730	CEATO-1501F	75042	5905-00-109-9848
BB3915	01121	5905-00-407-0085	CEATO-1541F	75042	5905-01-026-5084
BB5115	01121	5905-00-234-4374	CEATO-20ROF	75042	5905-00-177-7172
CB1015	01121	5905-00-102-5294	CEATO-2000F	75042	5905-00-998-1796
CB1035	01121	5905-00-909-3885	CEATO-2001F	75042	5905-00-922-9920
CB1045	01121	5905-00-959-1202	CEATO-2051F	75042	5905-00-724-5717
CB1055	01121	5905-00-116-8554	CEATO-2261F	75042	5905-00-102-6001
CB1235	01121	5905-00-989-7943	CEATO-2491F	75042	5905-00-021-6494
CB15L5	01121	5905-00-577-9598	CEATO-2493F	75042	5905-00-051-1879
CB1545	01121	5905-00-577-9597	CEATO-3010F	75042	5905-00-078-1549
CB1855	01121	5905-00-800-8068	CEATO-3012F	75042	5905-01-017-8107
CB2025	01121	5905-00-102-5289	CEATO-3320F	75042	5905-00-021-6496
CB2045	01121	5905-00-136-7103	CEATO-3652F	75042	5905-00-419-2676
CB2225	01121	5905-00-909-3940	CEATO-3742F	75042	5905-00-441-7812
CB3635	01121	5905-00-136-8430	CEATO-4021F	75042	5905-00-922-9923
CB3645	01121	5905-00-141-0741	CEATO-4530F	75042	5905-00-433-7389
CB3915	01121	5905-00-907-4118	CEATO-4990F	75042	5905-00-922-9924
CB4335	01121	5905-00-122-0004	CEATO-4991F	75042	5905-00-922-9925
CB4735	01121	5905-00-960-0126	CEATO-5622F	75042	5905-00-997-9579
CB5105	01121	5905-00-909-3834	CEATO-8060F	75042	5905-00-233-5377
CB5125	01121	5905-00-911-3754	EB5625	01121	5905-00-121-9110
CB5135	01121	5905-00-136-3890	SE365	03508	5961-00-222-6190
CB5625	01121	5905-00-909-3862	SS22650	07263	5961-00-488-9927
CB7535	01121	5905-00-916-7268	SV2511	01121	5905-00-414-1101
CEATO-1002F	75042	5905-00-904-4409	SZ50646	04713	5961-00-237-2353
CEATO-1003F	75042	5905-00-484-7475	WAIG040S202UA	01121	5905-00-400-3541
CEATO-1012D	75042	5905-00-105-9709	1N4152	07910	5961-00-899-8924
CEATO-1012F	75042	5905-00-893-1242	1N5567B	99942	5961-00-254-1621
CEATO-1101F	75042	5905-00-994-8457	1N963B	04713	5961-00-998-3666
CEATO-1241F	75042	5905-00-153-4435	1214-05-00-0541C	78189	5310-00-193-6731

**PART NUMBER - NATIONAL STOCK NUMBER  
CROSS REFERENCE INDEX**

<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>	<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>
129-0053-00	80009	5940-00-835-2060	2N5308	03508	5961-00-146-8295
131-0566-00	80009	5940-00-242-0676	2N5859	04713	5961-00-448-6717
131-0589-00	80009	5999-00-275-0213	2X12161-402	73743	5310-00-407-4600
131-0590-00	80009	5999-00-551-9434	2X20224-402	73743	5310-00-158-5262
131-0604-00	80009	5999-00-173-9923	200-0103-00	80009	5999-00-914-3308
131-0608-00	80009	5999-00-551-9433	210-0046-00	80009	5310-00-841-8117
131-0679-00	80009	5935-00-236-7554	210-0259-00	80009	5940-00-474-9824
131-0707-00	80009	5999-00-396-6331	210-0457-00	80009	5310-00-841-8106
131-0792-00	80009	5999-01-023-1578	210-0583-00	80009	5310-00-006-8168
133-23-11-034	71785	5935-00-067-7311	210-0586-00	80009	5310-00-836-3520
133-96-12-062	71785	5935-00-814-2209	210-0940-00	80009	5310-00-158-5237
136-0183-00	80009	5935-00-938-4734	2104-04-00-2520N	78189	5940-00-847-3138
136-0220-00	80009	5935-00-067-7311	211-0101-00	80009	5305-00-492-2145
136-0235-00	80009	5935-00-814-2209	211-0116-00	80009	5305-00-005-8245
136-0263-03	80009	5999-00-394-0381	213-0020-00	80009	5305-00-005-8247
150-0046-00	80009	6240-00-933-5822	213-0153-00	80009	5305-00-283-1909
150-0048-01	80009	6240-00-060-2941	214-0579-00	80009	5940-00-935-8313
150-0057-01	80009	6240-00-183-0669	214-1127-00	80009	3110-00-442-8406
150D396X9010B2	56289	5910-00-833-5175	214-1136-00	80009	5930-01-020-6724
150D475X9035B2	56289	5910-00-177-4300	214-1139-02	80009	5360-00-480-3639
151-0219-00	80009	5961-00-488-9927	214-1139-03	80009	5360-00-447-8721
151-0228-00	80009	5961-00-401-6210	214-1190-00	80009	6625-01-066-3336
151-0261-00	80009	5961-00-689-1455	28JR168-1	24931	5935-00-236-7554
151-1027-00	80009	5961-00-438-6453	281-0081-00	80009	5910-00-834-4931
152-0185-00	80009	5961-00-936-7604	281-0093-00	80009	5910-00-983-2623
152-0212-00	80009	5961-00-237-2353	281-0114-00	80009	5910-00-065-9821
152-0280-00	80009	5961-00-436-2890	281-0122-00	80009	5910-00-013-9658
152-0323-00	80009	5961-00-222-6190	281-0528-00	80009	5910-00-765-0380
152-0405-00	80009	5961-00-254-1621	281-0534-00	80009	5910-00-978-2441
189-4-5	74970	5910-00-958-3153	281-0544-00	80009	5910-00-725-1700
189-509-5	74970	5910-00-247-8600	281-0613-00	80009	5910-00-018-1241
189-6-5	74970	5910-00-834-4931	283-0000-00	80009	5910-00-688-8702

**PART NUMBER - NATIONAL STOCK NUMBER  
CROSS REFERENCE INDEX**

<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>	<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>
283-0002-00	80009	5910-00-721-2030	315-0473-00	80009	5905-00-437-0164
283-0058-00	80009	5910-00-089-7509	315-0512-00	80009	5905-00-437-0283
283-0059-00	80009	5910-00-932-7113	315-0562-00	80009	5905-00-437-0423
283-0080-00	80009	5910-00-931-7067	321-0098-01	80009	5905-00-441-7807
283-0092-00	80009	5910-00-848-6590	321-0114-00	80009	5905-00-405-7804
283-0111-00	80009	5910-00-436-7154	321-0126-00	80009	5905-00-998-1796
283-0594-00	80009	5910-00-066-0061	321-0127-01	80009	5905-00-879-7833
283-0604-00	80009	5910-00-064-9433	321-0147-00	80009	5905-00-405-7785
283-0617-00	80009	5910-00-491-2367	321-0160-00	80009	5905-00-105-7714
3-16-6B	95987	5340-00-417-4927	321-0164-00	80009	5905-00-405-7792
301-000C0J0339C	72982	5910-00-978-2441	321-0184-00	80009	5905-00-405-7962
301-000U2M0820K	72982	5910-00-765-0380	321-0197-00	80009	5905-00-434-5060
307-0181-00	80009	5905-00-551-9251	321-0210-00	80009	5905-00-434-5056
308-0495-00	80009	5905-00-401-6651	321-0227-00	80009	5905-00-426-7720
311-0467-00	80009	5905-00-472-7323	321-0231-00	80009	5905-00-021-6494
311-0532-00	80009	5905-00-472-7773	321-0260-00	80009	5905-00-922-9925
311-0605-00	80009	5905-00-481-8441	321-0289-00	80009	5905-00-434-5068
311-0609-00	80009	5905-00-431-2984	321-0335-00	80009	5905-01-017-8107
311-0635-00	80009	5905-00-497-4330	321-0344-00	80009	5905-00-441-7812
311-0704-00	80009	5905-00-498-1330	321-0385-00	80009	5905-00-426-7847
311-0827-00	80009	5905-00-414-1101	321-0614-00	80009	5905-00-893-1242
311-1258-00	80009	5905-00-434-5414	321-0763-07	80009	5905-00-441-7810
311-1260-00	80009	5905-00-434-5416	321-1166-01	80009	5905-00-41-7829
311-1261-00	80009	5905-00-433-4372	321-1231-01	80009	5905-00-441-7826
315-0101-00	80009	5905-00-102-5294	344-0154-00	80009	5999-00-465-9987
315-0103-00	80009	5905-00-434-5442	348-0115-00	80009	5325-00-232-9217
315-0104-00	80009	5905-00-434-5443	348-0235-00	80009	5999-00-434-2894
315-0123-00	80009	5905-00-445-3826	352-0067-00	80009	6250-00-089-7366
315-0151-00	80009	5905-00-577-9598	352-0068-00	80009	6625-00-980-9301
315-0202-00	80009	5905-00-445-3739	352-0136-00	80009	5920-00-401-6790
315-0204-00	80009	5905-00-445-3762	352-0169-00	80009	5935-00-597-5054
315-0222-00	80009	5905-00-436-9299	355-0507-00	80009	5307-00-529-8873

**PART NUMBER - NATIONAL STOCK NUMBER  
CROSS REFERENCE INDEX TM 11-6625-2967-14&P**

<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>	<b>PART NUMBER</b>	<b>FSCM</b>	<b>NATIONAL STOCK NUMBER</b>
358-0216-00	80009	5355-00-016-8665			
366-1057-00	80009	5355-00-765-3932			
366-1077-00	80009	5355-00-419-4045			
376-0029-00	80009	3010-00-498-7454			
410P111	56289	5910-00-243-2218			
410P112	56289	5910-00-947-6978			
46221	22526	5999-01-023-1578			
46241	22526	5999-01-022-6616			
47350	22526	5999-00-275-0213			
47357	22526	5999-00-551-9433			
47439	22526	5999-00-396-6331			
62-56-3	80740	5905-00-497-4330			
62-57-3	80740	5905-00-431-2984			
683AS15	08806	6240-00-062-6173			
811-546E103Z	72982	5910-00-721-2030			
8131N147W5R273K	72982	5910-00-089-7509			
86250-2	00779	5999-00-394-0381			

## APPENDIX D

## MAINTENANCE ALLOCATION

## Section I. INTRODUCTION

**D-1. General**

This appendix provides a summary of the maintenance operations for the TS-3791/U. It authorizes categories of maintenance for specific maintenance functions on repairable items and components and the tools and equipment required to perform each function. This appendix may be used as an aid in planning maintenance operations.

**D-2. Maintenance Function**

Maintenance functions will be limited to and defined as follows:

*a. Inspect.* To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination.

*b. Test.* To verify serviceability and to detect incipient failure by measuring the mechanical or electrical characteristics of an item and comparing those characteristics with prescribed standards.

*c. Service.* Operations required periodically to keep an item in proper operating conditions, i.e., to clean (decontaminate), to preserve, to drain, to paint, or to replenish fuel, lubricants, hydraulic fluids, or compressed air supplies.

*d. Adjust.* To maintain, within prescribed limits, by bringing into proper or exact position, or by setting the operating characteristics to the specified parameters.

*e. Align.* To adjust specified variable elements of an item to bring about optimum or desired performance.

*f. Calibrate.* To determine and cause corrections to be made or to be adjusted on instruments or test measuring and diagnostic equipments used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of

known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.

*g. Install.* The act of emplacing, seating, or fixing into position an item, part, module (component or assembly) in a manner to allow the proper functioning of the equipment or system.

*h. Replace.* The act of substituting a serviceable like type part, subassembly, or module (component or assembly) for an unserviceable counterpart.

*i. Repair.* The application of maintenance services (inspect, test, service, adjust, align, calibrate, replace) or other maintenance actions (welding, grinding, riveting, straightening, facing, remachining, or resurfacing) to restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

*j. Overhaul.* That maintenance effort (service/action) necessary to restore an item to a completely serviceable/operational condition as prescribed by maintenance standards (i.e., DMWR) in appropriate technical publications. Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul does not normally return an item to like new condition.

*k. Rebuild.* Consists of those services actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (hours, miles, etc.) considered in classifying Army equipments/components.

**D-3. Column Entries**

a. *Column 1, Group Number.* Column 1 lists group numbers, the purpose of which is to identify components, assemblies, subassemblies, and modules with the next higher assembly.

b. *Column 2, Component,/Assembly.* Column 2 contains the noun names of components, assemblies, subassemblies, and modules for which maintenance is authorized.

c. *Column 3, Maintenance Functions.* Column 3 lists the functions to be performed on the item listed in column 2. When items are listed without maintenance functions, it is solely for purpose of having the group numbers in the MAC and RPSTL coincide.

d. *Column 4, Maintenance Category.* Column 4 specifies, by the listing of a "worktime" figure in the appropriate subcolumn(s), the lowest level of maintenance authorized to perform the function listed in column 3. This figure represents the active time required to perform that maintenance function at the indicated category of maintenance.

If the number or complexity of the tasks within the listed maintenance function vary at different maintenance categories, appropriate "worktime" figures will be shown for each category. The number of task-hours specified by the "worktime" figure represents the average time required to restore an item (assembly, subassembly, component, module, end item or system) to a serviceable condition under typical field operating conditions.

This time includes preparation time, troubleshooting time, and quality assurance/quality control time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the maintenance allocation chart. Subcolumns of column 4 are as follows:

- C - Operator/Crew
- O - Organizational
- F - Direct Support
- H - General Support

D - Depot

e. *Column 5, Tools and Equipment.* Column 5 specifies by code, those common tool sets (not individual tools) and special tools, test, and support equipment required to perform the designated function.

f. *Column 6, Remarks.* Column 6 contains an alphabetic code which leads to the remark in section II, Remarks, which is pertinent to the item opposite the particular code.

**D-4. Tool and Test Equipment Requirement (sect III)**

a. *Tool or Test Equipment Reference Code.* The numbers in this column coincide with the numbers used in the tools and equipment column of the MAC. The numbers indicate the applicable tool or test equipment for the maintenance functions.

b. *Maintenance Category.* The codes in this column indicate the maintenance category allocated the tool or test equipment.

c. *Nomenclature.* This column lists the noun name and nomenclature of the tools and test equipment required to perform the maintenance functions.

d. *National/NATO Stock Number.* This column lists the National, NATO stock number of the specified tool or test equipment.

e. *Tool Number.* This column lists the manufacturer's part number of the tool followed by the Federal Supply Code for manufacturers (5-digit) in parentheses.

**D-5. Remarks (sect II)**

a. *Reference Code.* This code refers to the appropriate item in section II, column 6.

b. *Remarks.* This column provides the required explanatory information necessary to clarify items appearing in section II.

**SECTION II MAINTENANCE ALLOCATION CHART  
FOR  
SIGNATURE ANALYZER TS-3791/U (HP 500A)**

(1) GROUP NUMBER	(2) COMPONENT ASSEMBLY	(3) MAINTENANCE FUNCTION	(4) MAINTENANCE CATEGORY					(5) TOOLS AND EQUIPMENT	(6) REMARKS
			C	O	F	H	D		
00	Signature Analyzer TS-3791/U	Inspect		.3				5	
		Test				1.5		1-5	
		Service				2.0		1-5	
		Repair*		.2				5	
		Repair				2.0		1-5	
		Overhaul					3.0	1-5	
01	Signature Analyzer HP 5004A	Inspect		.3				5	
		Test				1.5		1-5	
		Service				2.0		1-5	
		Repair		.2				5	
		Repair				2.0		1-5	
		Overhaul					3.0	1-5	
02	Logic Probe HP 545A	Test				1.0		1-5	
		Replace		.2				5	
		Repair				2.0		1-5	
03	Logic Probe HP 545A	Test				1.0		1-5	
		Replace		.2				5	
		Repair				2.0		1-5	
04	Logic Probe HP 547A	Test				1.0		1-5	
		Replace		.2				5	
		Repair					2.0	1-5	
	* Replace fuse								



**SECTION III. TOOL AND TEST EQUIPMENT REQUIREMENTS  
FOR  
SIGNATURE ANALYZER TS-3791/U (HP5004A)**

TOOL OR TEST EQUIPMENT REF CODE	MAINTENANCE CATEGORY	NOMENCLATURE	NATIONAL/NATO STOCK NUMBER	TOOL NUMBER
1	H	Pulse Generator (TEK PG502)	6625-00-531-5135	
2	H	Pulse Generator SG-1105/U (IHP-8013B)	6625-01-010-3524	
3	H	Oscilloscope OS-262P/U (TEKY 7623A)	6625-01-007-9416	
4	H	Digital Voltmeter ANT/US-451	6625-01-060-6804	
5	0	Common tools necessary to the performance of this maintenance function are available to maintenance personnel for the maintenance category listed.		

**APPENDIX E  
MANUAL CHANGES**

<p><b>MANUAL DESCRIPTION</b>                  INSTRUMENT: 5004A Signature Analyzer                  Operating and Service Manual                  SERIAL PREFIX:1704A</p> <p>DATE PRINTED:MARCH 1977                  HP PART NO:05004-90001                  MICROFICHE NO:05004-90002</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

**CHANGE DATE** April 21, 1978  
 (This change supersedes all earlier dated changes)

- Make all changes listed as ERRATA.
- Check the following table for your instrument's serial prefix or serial number and make listed change(s) to manual.

IF YOUR INSTRUMENT HAS SERIAL PREFIX OR SERIAL NUMBER	MAKE THE FOLLOWING CHANGES TO YOUR MANUAL	IF YOUR INSTRUMENT HAS SERIAL PREFIX OR SERIAL NUMBER	MAKE THE FOLLOWING CHANGES TO YOUR MANUAL
1736A	1		
1808A	1, 2		
▶ 11816A	1, 2, 3		

**NEW OR REVISED ITEM**

The following Service Notes are available from your local HP Sales and Service Office

MODEL	DESCRIPTION
5004A-1A	Data Probe Threshold Voltage Adjustment and Compensation
▶ 5004A-2	Signature Analyzer Operational Verification (All Prefixes)

**ERRATA**

Page 6-7, Table 6-1, Replaceable Parts:

- Change A2TP1 from 1251-4714 to 05004-20206; 1; TEST POINT; 28480; 05004-20206.
- Change A2W1, W2, and W3 from 1251-4750 to 1251-4965 in the HP and Mfr Part Number columns.
- Change MP8 reference designation to MP9 and MP9 to MP8 so MP9 identifies the bottom half of the body and MP8 the top half.
- Change MP9 from 00545-20203 to 00547-20201 in HP and Mfr Part Number columns.
- Add MP15; 1600-0506; RING, GROUNDING; 28480; 1600-0506; as part of probe assembly A3. This ring mounts on the rear end of the probe body and connects the body to circuit board common.
- Change A3A1C3 from 0150-0088 (3.9 PF) to A3A1C3\*; 0160-2249; CAPACITOR-FXD 4.7 PF ± .25 PF 500 VDC; 28480; 0160-2249. "FACTORY SELECTED VALUE BETWEEN 4.6 AND 4.9 PF.

Page 8-11, Figure 8-1, Troubleshooting Flowchart:

- Change step 1 of "PRELIMINARY STEPS" to the following:  
 "1. SET FRONT-PANEL SWITCHES AS FOLLOWS: SELF-TEST-IN; START, STOP, CLOCK, AND HOLD-OUT."
- Change Table 8-1 NORMAL signature for "Test Point 4" to A446.
- Change Table 8-1 SERVICE signature for "Test Point 7" to 6P6F.
- Change flow chart in three places to agree with the partial diagram shown in Figure 1.

Inside Title Page:

Change sentence under SERIAL NUMBERS to read "This manual applies directly to instruments with a Serial Number Prefix of 1704A."

Page 1-3, Table 1-2, Recommended Test Equipment:

Add Signature Analyzer, HP Model 5004A with Critical Specs of 15 nanosecond data setup time, START-STOP gating with setup time of 25 microseconds, and TTL compatibility.

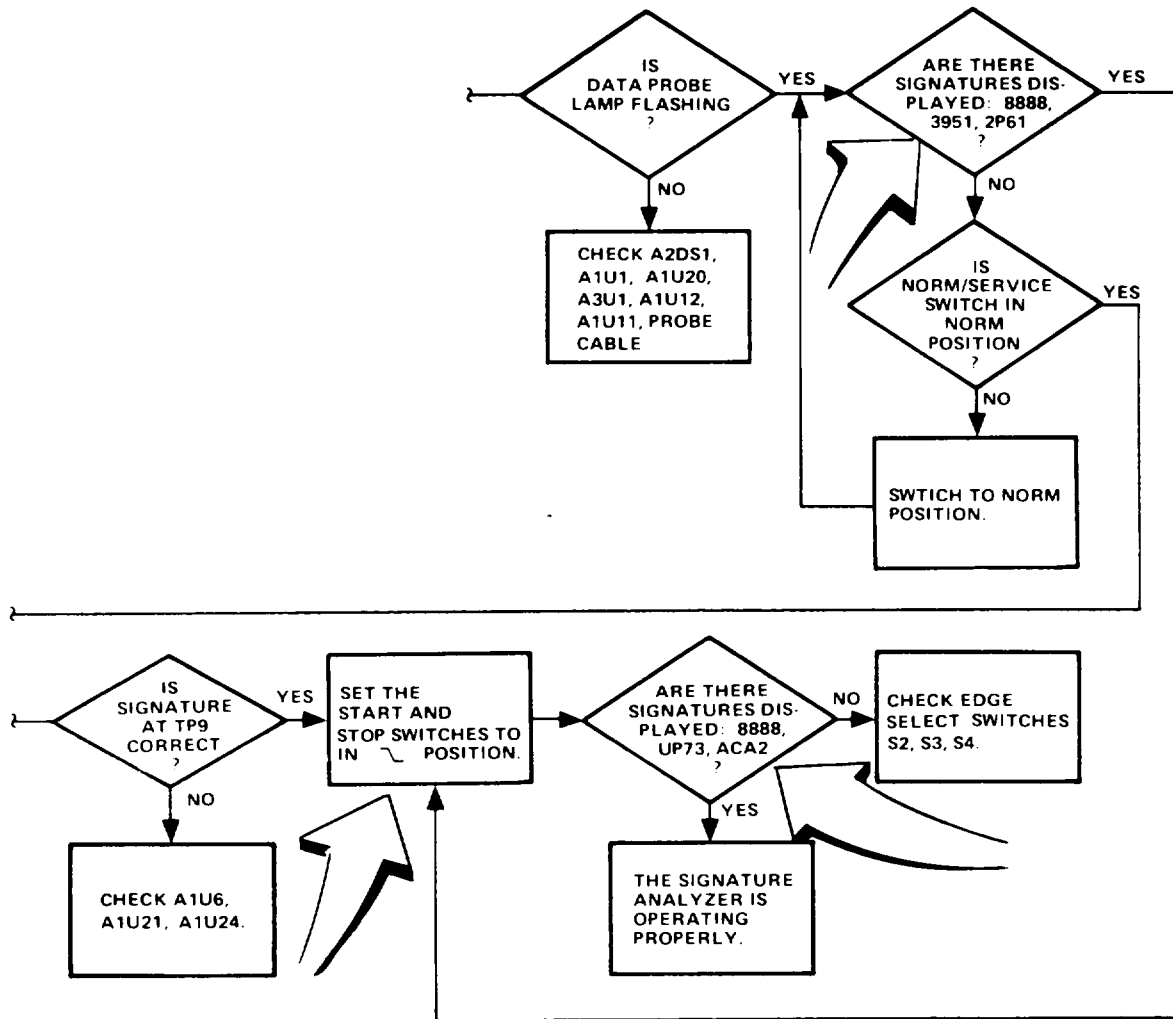


FIGURE 1. FLOWCHART CORRECTIONS

ERRATA (Cont'd)

Page 3-1 Paragraph 3-6. Character Illustration:

Delete the □ character between □ and □ .

Page 6-1 Paragraph 6-2

Change "Table 2"., at end of sentence, to 'Table 6-2 .

Page 8-3, Examples 1 through 4:

Change examples to read as follows:

EXAMPLE 1 says that Z is not true if A is true and B is true or that Z is true if A and B are not both true.  $\bar{Z} = AB$  or  $Z = \overline{AB}$ . This is frequently referred to as NAND (for NOT AND).

EXAMPLE 2 says that Z is true if A is not true or if B is not true  $Z = \bar{A} + \bar{B}$ . Note that this truth table is identical to that of Example 1. The logic equation is merely .... etc.

EXAMPLE 3  $\bar{Z} = A + B$  or  $Z = \overline{A + B}$  and,

EXAMPLE 4  $Z = \bar{A} \bullet \bar{B}$ , also share a common truth table and are equivalent transformations of .... etc.

**ERRATA (Cont'd)**

Page 8-3, Paragraph 8-21:

Change third word to "symbols" in place of "symbols".



Change positive logic symbol for DEVICE 2 to

Page 8-4, Negative Logic Symbol, Device 1:



Change negative logic symbol to

Page 8-4, Mixed Logic, NOR Gates for Examples 6 and 7:

Change notation inside both NOR symbols to "> 1" in place of "<1".

Page 8-9, Paragraph 8-36, Second Sentence:

Change NORMAL SERVICE to NORMAL/SERVICE.

Page 8-21, Paragraph 8-95:

Change 8-95 paragraph number under Display Scan to 8-97.

Add the following between paragraphs 8-94 and 8-97:

"8-95. The U28 oscillator output is applied to counter U26, and the output of U26 is applied to display scan decoder U18A. Output from U18A controls register drivers U15, U16, U13, and U14 plus the four transistor switches in U31. Outputs from U15, U16, U13, U14, and U31 control seven-segment displays DS1 through DS4.

**8-96. Self Test"**

Page 8-27, Figure 8-9, Schematic Diagram:

Change connection for BLK/RED wire to power transformer primary winding. Disconnect wire from present connection on S8. Reconnect to center contact of same section in S8 along with the wire from the upper contact of LINE switch S1.

Page 6-5, Table 6-1, A1 (05004-60007) Replaceable Parts:

Add A1Jl; 1251-4743; RECEPTACLE, AC POWER; 28480; 12514743.

Change A1J1 to A1J2; 1251-4778; CONNECTOR 10-PIN PUSH-ON.

Change A1J2 to A1J3; 1251-4777; CONNECTOR 9-PIN PUSH-ON.

Page 6-6, Table 6-1, A1 MISCELLANEOUS Parts:

Delete entire listing for HP Part No. 5040-8013 power receptacle.

Page 8-25, Figure 8-8, A1 Component Locations:

Add "Jl" beside power receptacle in upper right corner.

Change J1 (bottom right corner) to J2 and J2 to J3.

Page 8-27, Figure 8-9, Overall Schematic Diagram:

Change connector on A1 for A3 Data Probe connections from J1 to J2.

Change connector on A1 for A4 Gating Signal Pod from J2 to J3.

Change pin 10 on A1J3 (-11V) to pin 9.

Change pin 11 on A1J3 (common) to pin 7.

Change pin 2 on A1J3 (+5V) to pin 8.

Change pin 11 (common) on A4 pod board to pin 7.

Page 6-7, Table 6-1, Replaceable Parts:

Add "MP16" in Reference Designation column for HP Part No. 5040-0563.

**NOTE - This "clip" holds the pod cables in place on the front of the pod.**

**▶ ERRATA (Cont'd)**

- ▶ Page 8-27, Figure 8-9, A1 Schematic Diagram:
  - Change HP Part Number at top of A1 MAIN (MOTHER) BOARD from 05004-60001 to 05004-60007.
  - Change A1R38 from 1500 to 1800 ohms.
  - Change reference designator of resistor connected to the base of A8Q6 from "R36" to R40.
- ▶ Page 6-6, Table 6-1, A1 (05004-60007) Replaceable Parts:
  - Change A1U28 from 1826-0180 (NE555V) to 1826-0355; IC TIMER; 28480; 1826-0355.
  - The 1826-0355 timer should be used for replacement in all instruments.
- ▶ Page 6-5, Table 6-1, A1 Replaceable Parts:
  - Delete A1Q1, A1Q2, A1Q3, and A1Q4.
- ▶ Page 6-6, Table 6-1, A1 Replaceable Parts:
  - Add A1U31; 1858-0014; 1; TRANSISTOR-ARRAY PNP; 28480; 1858-0014.
- ▶ Page 8-13, Figure 8-2, Table 8-2 SERVICE SIGNATURES:
  - Delete "2946" signatures for U25 pin 4.
  - Change both signatures for U10 pin 12 to "T36F".
  - Delete "472A" signatures for U18 pin 13.
  - Change N signature for U19 pin 5 to "068C".
  - Add "2946" signature for N at U25 pin 9.

**CHANGE 1 (1736A)**

- Page 6-7, Table 6-1, A3 (05004-60005) Probe Assembly:
- Add SERIES 1736 to Description of A3 (05004-60005) PROBE ASSEMBLY.
  - Change MP9 PROB BODY BOTTOM HALF from 00547-20201 to 05004-20207 in "HP Part Number" and "Mfr Part Number" columns of Table 6-1.
  - Change MP8 PROBE BODY TOP HALF from 05004-20204 to 05004-20208 in "HP Part Number" and "Mfr Part Number" columns of Table 6-1.
  - Change SWITCH, PUSHBUTTON from 05004-20205 to 00546-40004 in HP and Mfr Part Number columns in Table 6-1.
  - Add SERIES 1736 to Description of A3A1 (05004-60003).
  - Change A3A1S1 from 00546-00001 to 00546-00002 in HP and Mfr Part Number columns.
  - Add to "A3A1 MISCELLANEOUS" HP Part No. 00546-40003; RETAINER, SWITCH A3A1S1; 28480; 00546-40003.
  - Add to "A3A1 MISCELLANEOUS" HP Part No. 0624-0340; SCREW, SELF TAPPING 0-80 x .188" (for A3A1S1 mounting); 28480; 0624-0340.
  - Change A3A1C3 from 0160-2249 (4.7 pF Factory Selected Value) to 0121-0505; CAPACITOR-VAR 2.5-10 pF CER (SQUARE ADJ. HOLE); 28480; 0160-2249.
  - Change A3A1R1 from 0698-7225 (348,) to 0698-7222; RESISTOR-FXD 261Ω 1% .05W F TC=0+-100; 28480; 0698-7222.
  - Change A3A1R2 from 0698-8875 (27.4D) to 0698-7195; RESISTOR-FXD 19.6Ω 1% .05W F TC=0+-100; 28480; 0698-7195.
  - Change A3A1R3 from 0698-8874 (127,) to 0698-7214, RESISTOR-FXD 121Ω 1% .05W F TC=0+-100; 28480; 0698-7214.

**CHANGE 1 (1736A) (Cont'd)**

Page 6-7, Table 6-1, A3 (05004-60005) Probe Assembly:

Change A3A1R4 from 2100-1986 (1000 $\Omega$  VAR) to 2100-1788; RESISTOR-VAR 500,0 10% C TOP-ADJ 1-TURN; 28480; 2100-1788.

Change A3A1R6 from 0757-0849 (36.5KS,) to 0699-0105; RESISTOR-FXD 36.5K $\Omega$  1% .5W C; 28480; 0699-0105.

Add A3A1R7; 2100-1984; RESISTOR-VAR 100 $\Omega$  10% C TOP-ADJ 1-TURN; 28480; 2100-1984.

Add A3A1 R8; 0698-7228; RESISTOR-FXD 464 $\Omega$  1% .05W F TC=0+-100; 28480; 0698-7228.

Change A3A1UI from 1820-0919 to 05004-80001; IC COMPTR ECL A/D DUAL (SELECTED); 28480; 05004-80001.

Add to "A3A1 MISCELLANEOUS" HP Part No. 8710-1177; TOOL, ADJUSTMENT SQUARE SHANK (for A3A1C3); 28480; 8710-1177.

Page 8-24, Figure 8-7, Probe A3 Component Locator:

Replace A3 component locator with attached Figure 2 component locator for the SERIES 1736 Probe.

Page 8-27, Figure 8-9, Schematic Diagram:

Replace A3 (05004-60003 SERIES 1704) schematic diagram of probe with attached Figure 2 diagram for SERIES 1736.

ADJUSTMENT PROCEDURE (FOR A3 SERIES 1736 PROBE)

The series 1736 probe has three adjustments which are factory set and will need adjustment only after repair of the circuit board. Adjustment must be made with the probe covers in place. The covers have access holes under the probe labels. Special adjustment tool 8710-1177 is required for setting variable capacitor C3.

- ▶ If probe adjustment is necessary, contact your local HP Sales/Service Office or field engineer for a copy of Service Note 5004A-1A for the recommended adjustment procedure.

Page 6-8, Table 6-1, A4 (05004-60006) Replaceable Parts:

Change A4A1U2 and U3 from 1820-0919 to 05004-80002; IC COMPTR ECL A/D DUAL (SELECTED MC1650L); 28480; 05004-80002.

**CHANGE 2 (1808A)**

Page 6-5, Table 6-1, A1 (05004-60007) Replaceable Parts:

Add "SERIES 1808" to A1 Description.

Change A1CR4 and CR5 from 1901-0782 (IN5821) to 1901-0673; DIODE-PWR RECT 5US 100V 5A; 03508; A15A.

Page 8-27, Figure 8-9, A1 (05004-60007) Schematic Diagram:

Change A1 series number (top of diagram) from 1704 to 1808.

**▶ CHANGE 3 (1816A)**

- ▶ Pages 6-5 and 6-6, Table 6-1, A1 (05004-60001) Replaceable Parts:

Change A1 series number from 1808 to 1816.

Change A1R37 from 0683-2225 (2200 $\Omega$ ) to 0683-2215, 220 ohms 5% 1/4W; Mfr Part No. CB2215.

Change A1R38 from 0683-1825 (1800 $\Omega$ ) to 0683-1815; 180 ohms 5% 1/4W; Mfr Part No. CB1815.

- ▶ Page 8-27, Figure 8-9, A1 (05004-60007) Schematic Diagram:

Change A1 series number (top of schematic) from 1808 to 1816.

Change A1R37 from 2200 to 220 ohms.

Change A1R38 from 1800 to 180 ohms.

- ▶ **NOTE: Serial Prefix 1808A instruments with serial numbers of 00602, 00615, 00617, 00618, 00619, 00622, 00625, 00641, 00660, 00662, 00666, and 00674 have the above change for A1R37 and A1R38. The series number on the A1 circuit boards in these instruments is 1808.**

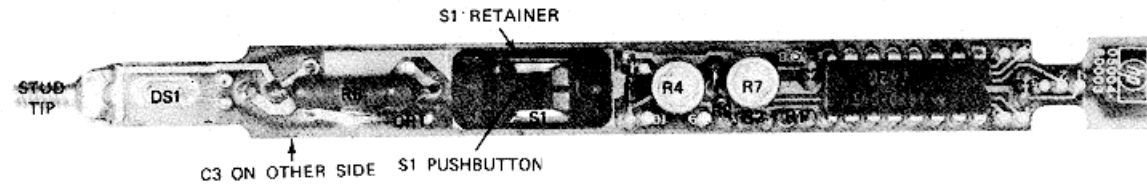


FIGURE 2. COMPONENT LOCATOR FOR A3 SERIES 1736 PROBE

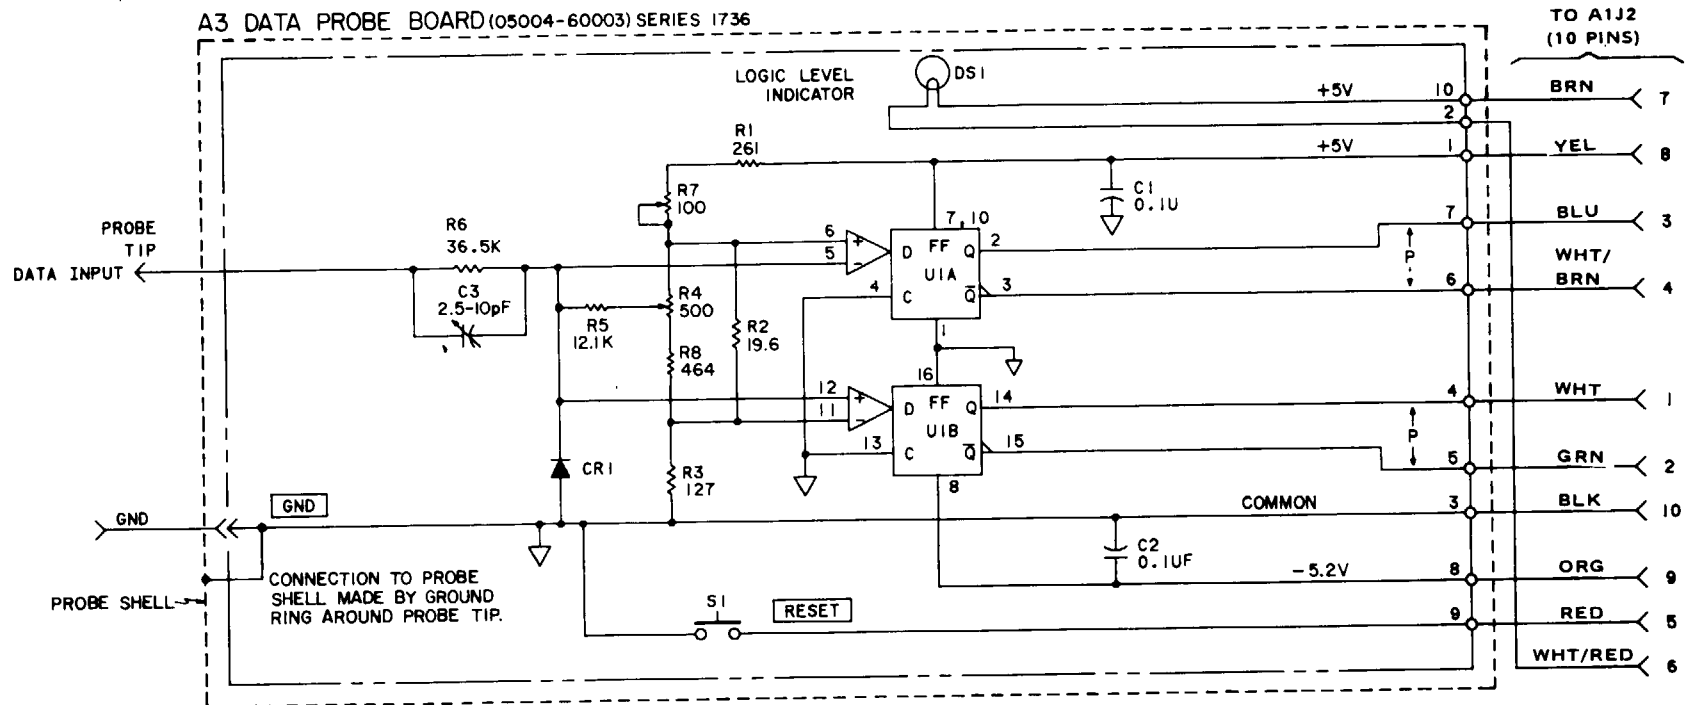


FIGURE 3. A3 SCHEMATIC DIAGRAM FOR SERIES 1736

By Order of the Secretary of the Army

E.C. MEYER  
General, United States Army  
Chief of Staff

Official:

J. P. PENNINGTON  
Major General, United States Army  
The Adjutant General

DISTRIBUTION:

Active Army:

TSG (1)  
USAARENBD (1)  
USAINSCOM (2)  
TRADOC (2)  
DARCOM  
TECOM (2)  
OS Maj Comd (2)  
USACC (2)  
HISA (Ft Monmouth) (21)  
Armies (1)  
USASIGS (10)  
Svc Colleges (1)  
Fort Richardson (CERCOM Ofc) (1)  
Fort Carson (5)  
Fort Gillem (10)  
WSMR (1)

USAERDAA (1)  
USAERDAW (1)  
Army Dep (1) except  
LBAD (10)  
SAAD (30)  
TOAD (14)  
SHAD (3)  
USA Dep (1)  
Sig Sec USA Dep (1)  
Units org under fol TOE:  
(1 copy each units)  
29-134  
29-136  
(2 copies each unit)  
29-207  
29-610

ARNG: None

USAR: None

For explanation of abbreviations used, see AR 310-50.



RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

**SOMETHING WRONG WITH THIS PUBLICATION?**

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT... PIN-POINT WHERE IT IS

PAGE NO.

PARA-GRAPH

FIGURE NO.

TABLE NO.

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.



# **K4XL's** **BAMA**

This manual is provided **FREE OF CHARGE** from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>